



[Manuals.plus](#) /

> [COSORI](#) /

> COSORI Air Fryer TurboBlaze 6.0-Quart Instruction Manual

COSORI CAF-DC601-KUS

COSORI Air Fryer TurboBlaze 6.0-Quart Instruction Manual

Model: CAF-DC601-KUS

INTRODUCTION

Welcome to the COSORI Air Fryer TurboBlaze 6.0-Quart. This versatile appliance is designed to simplify your cooking experience, offering a wide range of functions for healthier and faster meal preparation. With its compact design and large capacity, it's an ideal addition to any kitchen.

IMPORTANT SAFETY INFORMATION

WARNING: Do NOT place the paper liner in the basket during preheating! Always ensure that there is enough food on the liner to prevent it from flying up to the upper heating element, which could result in serious consequences.

Before initial use, perform a 'Test Run' as instructed in the full manual to ensure proper functioning and to eliminate any manufacturing odors. This step is crucial for optimal performance and safety.

WHAT'S INCLUDED

- COSORI Air Fryer TurboBlaze 6.0-Quart Unit
- Recipe Book and Quick Start Guide
- 100 PCS Square Disposable Paper Liners

SETUP

1. **Unpack:** Carefully remove all packaging materials from the air fryer and its accessories.
2. **Clean:** Wipe down the exterior of the air fryer with a damp cloth. Wash the basket and crisper plate with warm, soapy water. Dry thoroughly.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface, away from walls or other appliances to ensure proper ventilation.
4. **Test Run:** Before cooking, perform the recommended 'Test Run' as detailed in the included recipe book/quick start guide. This helps to ensure the appliance is working correctly and removes any initial odors.

OPERATING INSTRUCTIONS

The COSORI Air Fryer TurboBlaze offers 9 versatile cooking functions and 5 adjustable fan speeds for precise control over your meals.

Cooking Functions:

- **Air Fry:** For crispy results with minimal oil.
- **Roast:** Ideal for meats and vegetables.
- **Bake:** Perfect for cakes, pastries, and more.
- **Broil:** For quick browning and melting.
- **Dehydrate:** To make dried fruits, jerky, and snacks.
- **Frozen:** Optimized settings for frozen foods.
- **Proof:** For dough rising.
- **Reheat:** To warm up leftovers.
- **Keep Warm:** Maintains food temperature after cooking.

Temperature and Time Control:

The air fryer features a temperature range of 90°–450°F (30°–230°C) and a time range of 1 minute to 24 hours, allowing for precise cooking. The 5-speed airflow system ensures even cooking throughout.

Using Paper Liners:

The included COSORI Air Fryer Paper Liners are designed for easy cleanup. When using them:

- Do **NOT** add the paper liner during the pre-heating mode.
- Always ensure there is enough food on the liner to prevent it from being blown into the heating element.

9-in-1 Functionality

Cook with a setting for every meal type and a wide temperature range of 90°-450°F.

5 Fan Speeds*

9 Easy Functions



PREHEAT | REHEAT | DRY | BAKE | PROOF | WARM

TURBO MODES



AIR FRY

ROAST

BROIL

FROZEN



**Fan speeds are not customizable*

Image: The intuitive control panel of the COSORI Air Fryer TurboBlaze, highlighting its 9 cooking functions and digital display for temperature and time settings.

Large 6-Quart Capacity



FRENCH FRIES
2.5 lbs



CHICKEN WINGS
14 pieces



STEAK
3 lbs



COOKIES
6 pieces



PIZZA
8.5 inches



Image: A visual representation of the COSORI Air Fryer TurboBlaze's large 6-quart capacity, demonstrating how it can accommodate various food items like french fries, chicken wings, steak, cookies, and pizza.

Save Valuable Time

- ✓ Disposable & no need to clean
- ✓ Water- & oilproof, no leakage



- ✗ Need to Clean



- ✗ Messy with oil leaks



Image: A visual comparison illustrating the benefit of using paper liners for easy cleanup, showing a clean basket with a liner versus a messy basket without one.

Safe & Reliable

1. Food-Grade Materials
2. Non-Toxic, Unbleached Raw Wood
3. Wax-Free, Plant-Based Silicone Oil
4. Heat-Resistant up to 465°F



Non-stick silicon coat

Unbleached wood paper

Heat-resistant parchment

Image: An illustration detailing the safe and reliable features of the COSORI Air Fryer Paper Liners, including food-grade materials, non-toxic unbleached raw wood, wax-free plant-based silicone oil, and heat resistance up to 465°F.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your COSORI Air Fryer.

- **Basket and Crisper Plate:** The nonstick basket and crisper plate are dishwasher safe, making cleanup simple and convenient.
- **Exterior:** Wipe the exterior of the air fryer with a damp cloth after each use.
- **Interior:** For stubborn food residue, soak the basket and crisper plate in warm, soapy water before cleaning.

TROUBLESHOOTING

If you encounter any issues with your COSORI Air Fryer, please refer to the comprehensive troubleshooting section in the full product manual. Many common issues can be resolved with simple adjustments. For persistent problems, contact COSORI customer support.

SPECIFICATIONS

Feature	Detail
Model	CAF-DC601-KUS
Power Supply	DC 120V, 60Hz
Rated Power	1,725W
Capacity	6 qt / 5.7 L (serves 3-5 people)
Temperature Range	90°–450°F / 30°–230°C
Time Range	1 min–24 hr
Dimensions (including handle)	11.8 x 14.4 x 11.9 in
Weight	13.2 lb / 6 kg
Color	Dark Gray
Material	Plastic (exterior), Metal (inner)
Control Method	Touch
Nonstick Coating	Yes
Dishwasher Safe (Main Unit)	No
Dishwasher Safe (Accessories)	Yes

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please visit the official COSORI website or contact their customer service team directly. Keep your purchase receipt for warranty claims.