

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HICSHON](#) /

› [HICSHON DC306 4K Autofocus 48MP Digital Camera User Manual](#)

## HICSHON DC306

# HICSHON DC306 4K Autofocus 48MP Digital Camera User Manual

Model: DC306

## INTRODUCTION

---

This manual provides detailed instructions for the safe and effective operation of your HICSHON DC306 4K Autofocus 48MP Digital Camera. Please read this manual thoroughly before using the camera and retain it for future reference. Proper use and maintenance will ensure optimal performance and longevity of your device.

## PRODUCT OVERVIEW

---

The HICSHON DC306 is a compact digital camera designed for capturing high-quality photos and videos. It features a dual-camera system, autofocus, 4K video recording, and 48MP still image capabilities. The camera also includes a 2.8-inch IPS HD screen, 16x digital zoom, anti-shake functionality, and can be used as a webcam.

### Package Contents

- HICSHON DC306 Digital Camera
- 32GB Micro SD Card
- 2 x Lithium-ion Batteries (700mAh each)
- USB Cable
- Neck Strap
- Wrist Strap
- Lens Cloth
- Carry Pouch
- User Manual

## SETUP

---

### 1. Battery Installation and Charging

The camera uses Lithium-ion batteries. Ensure batteries are fully charged before first use.

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover to open and insert the battery according to the polarity indicators (+/-).
3. Close the battery compartment cover securely.
4. To charge, connect the camera to a power source (e.g., computer, USB wall adapter) using the provided USB cable. The charging indicator light will illuminate.
5. A full charge typically takes several hours. The indicator light will change or turn off when charging is complete.



Image: HICSHON DC306 Digital Camera with included accessories, showing the camera, memory card, and two batteries.

## 2. SD Card Installation

The camera supports Micro SD cards from 4GB to 256GB. A 32GB Micro SD card is included.

1. Locate the SD card slot, usually on the side or bottom of the camera.
2. Insert the Micro SD card with the metal contacts facing the correct direction (refer to the diagram near the slot). Push until it clicks into place.
3. To remove, gently push the card in again until it springs out.



Image: Illustration demonstrating the correct way to insert the 32GB Micro SD card into the camera's dedicated slot.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Press and hold the Power button (usually marked with a circle and a vertical line) to turn the camera on or off.

### 2. Basic Photography

1. **Switching Modes:** Use the mode dial or dedicated buttons to select between photo and video modes.
2. **Autofocus:** Half-press the shutter button to allow the camera to focus on your subject. A green frame will typically appear on the screen when focus is achieved.
3. **Taking a Photo:** Fully press the shutter button to capture the image.
4. **Zoom:** Use the W (Wide) and T (Telephoto) buttons, often located near the shutter, to adjust the 16x digital zoom.


## INNOVATIVE AUTOFOCUS & 2.8 INCH IPS HD SCREEN

Press the shutter button halfway to focus for vivid and clear images



Image: The camera's 2.8-inch IPS HD screen displaying the autofocus function, highlighting a focused subject.

## 16X DIGITAL ZOOM & FILL LIGHT & ANTI-SHAKE

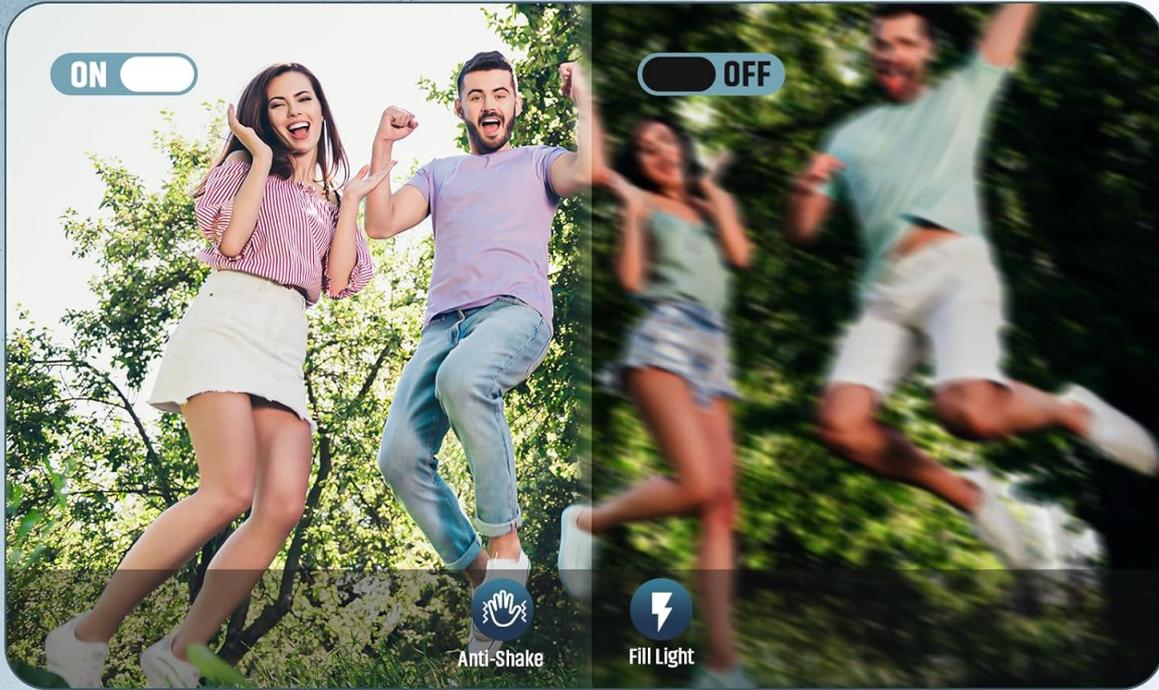

THE W/T BUTTON ALLOWS YOU TO ZOOM IN OR OUT WHILE VIEWING THE PLAYBACK IMAGE



Image: Visual representation of the 16x digital zoom and anti-shake feature, showing how the W/T button controls zoom.

### 3. Video Recording

1. Switch the camera to video mode.
2. Press the Shutter button to start recording. A recording indicator (e.g., "REC" or a red dot) will appear on the screen.
3. Press the Shutter button again to stop recording.

## UHD 4K & 48MP MAKE VIDEOS/PHOTOS CLEARER



Image: The camera's capability to record UHD 4K videos and capture 48MP photos, illustrating clear image quality.

### 4. Dual Camera Function

The camera features both front and rear lenses. To switch between them for selfies or standard shots:

- Locate the dedicated button or menu option for switching between the front and rear cameras.
- Press the button or select the option to activate the desired camera.



Image: The innovative dual camera design, allowing users to easily switch between front and rear lenses for various shooting scenarios, including selfies.

## 5. Webcam Functionality

The HICSHON DC306 can be used as a webcam for video calls and live streaming.

1. Connect the camera to your computer using the provided USB cable.
2. On the camera screen, select the "Webcam" or "PC Camera" option if prompted.
3. Your computer should recognize the camera as a webcam. Select it as the video input device in your video conferencing or streaming software.



Image: The camera connected via USB to a laptop, demonstrating its use as a webcam for live streaming or video calls.

## 6. Special Features

- **Anti-shake:** This feature helps reduce blur caused by camera movement. Activate it through the camera's menu settings.
- **LED Flash:** For low-light conditions, activate the built-in LED flash. Settings for flash (Auto, On, Off) are usually available in the menu.
- **Time Lapse:** Capture a series of photos over time to create a time-lapse video. Configure intervals in the settings.
- **Self-timer:** Set a delay (e.g., 2s, 5s, 10s) before a photo is taken, allowing you to be in the shot.
- **Motion Detection:** The camera can automatically start recording when motion is detected.
- **Slow Motion:** Record videos at a higher frame rate for slow-motion playback.
- **Beauty Face:** An in-camera effect to enhance facial features in portraits.



Image: Icons and examples illustrating the camera's advanced shooting modes, including Time Lapse, Self-timer, Motion Detection, Slow Motion, and Beauty Face.

## MAINTENANCE

### 1. Cleaning

- **Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals.
- **Lens:** Use the provided lens cloth or a specialized lens cleaning cloth. Gently wipe the lens in a circular motion. Do not use abrasive materials or excessive force.
- **Screen:** Clean the 2.8-inch IPS screen with a soft, lint-free cloth.

### 2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the batteries to prevent leakage.
- Use the provided carry pouch to protect the camera from dust and scratches.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly installed.	Ensure batteries are fully charged and correctly inserted. Try replacing with a charged spare battery.
Images are blurry.	Autofocus failed, camera shake, or dirty lens.	Half-press the shutter button to ensure autofocus engages. Activate anti-shake function. Clean the lens with a soft cloth.
Cannot record video/take photos.	SD card is full, not inserted, or corrupted.	Check SD card capacity. Ensure it is correctly inserted. Format the SD card (this will erase all data). Replace with a new SD card if corrupted.
Flash is not working.	Flash setting is off or in auto mode in bright conditions.	Check flash settings in the menu and set to "On" if needed.
Camera not recognized as webcam.	Incorrect USB mode selected or driver issue.	Ensure "Webcam" or "PC Camera" mode is selected on the camera. Try a different USB port or cable. Restart your computer.

## SPECIFICATIONS

Feature	Detail
Brand	HICSHON
Model	DC306
Still Image Resolution	48 Megapixels
Video Resolution	4K (2160p)
Display Screen	2.8 inches IPS LCD
Zoom Type	16x Digital Zoom
Focus Type	Autofocus
Image Stabilization	Digital Anti-shake
Connectivity	USB
Storage Media	Micro SD Card (4GB to 256GB, 32GB included)
Battery Type	Lithium-ion (2 x 700mAh included)
Special Features	Dual Camera, Webcam Function, LED Flash, Time Lapse, Self-timer, Motion Detection, Slow Motion, Beauty Face
Dimensions (L x W x H)	13.4 x 9.1 x 8.4 cm (Package)
Weight	370 grams (Package)

Feature	Detail
Model Year	2024

## WARRANTY AND SUPPORT

---

HICSHON provides a 1-year warranty for this product. If you encounter any issues during the use of your HICSHON DC306 Digital Camera, please contact customer support. They aim to respond within 24 hours.

For support, please refer to the contact information provided with your product packaging or visit the official HICSHON website.