

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tenamic](#) /

› [TENAMIC Pistol Safe User Manual](#)

## Tenamic GC10 Pink

# TENAMIC Pistol Safe User Manual

Model: GC10 Pink

Brand: Tenamic

## 1. INTRODUCTION AND OVERVIEW

---

The TENAMIC Pistol Safe (Model GC10 Pink) is a portable and robust security solution designed for safeguarding handguns and other valuables. Constructed from solid steel with an anti-corrosion and anti-wear powder coating, this safe offers enhanced durability and protection. It features a resettable 3-digit combination dial lock, eliminating the need for keys or batteries. Its compact design makes it ideal for use in various locations, including home, vehicles, or during travel. The safe includes internal protective foam to prevent scratches and damage to contents, which can be removed to increase storage capacity. For added security, a heavy steel cable is provided, allowing the safe to be anchored to a fixed object.



Image: The TENAMIC Pistol Safe in pink with a 3-digit combination dial lock.

## 2. SETUP: SETTING YOUR COMBINATION CODE

---


Your TENAMIC Pistol Safe comes with a resettable 3-digit combination lock. Follow these steps to set your personal code. It is recommended to choose a memorable code and store it securely.

1. **Initial State:** Ensure the dials are set to the factory default code, which is **0-0-0**.
2. **Open the Safe:** With the dials set to 0-0-0, turn the knob clockwise to open the lock box.
3. **Reset Position:** Locate the small lever or slot inside the safe, usually marked "A" and "B". Move this lever from position "A" to position "B". This action prepares the lock for code resetting.
4. **Set New Code:** While the lever is in position "B", set the dials to your desired 3-digit combination (e.g., 9-9-9). Ensure all numbers are precisely centered in the display window.
5. **Confirm New Code:** Return the lever from position "B" back to position "A". Your new combination code is now set.
6. **Test the Code:** Scramble the dials, then enter your new code and turn the knob to verify that the safe opens correctly.

# HOW TO SET THE CODE?




1. Keep dials at 0-0-0 and turn the knob clockwise to open the lock box.

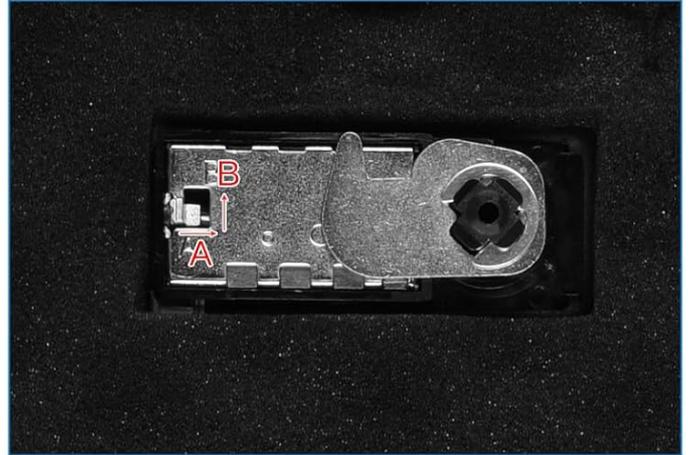

2. Move the lock slot from "A" to "B" to reset your code.



3. Set the dials you want (such as 9-9-9), make sure all numbers in the center of the dials.

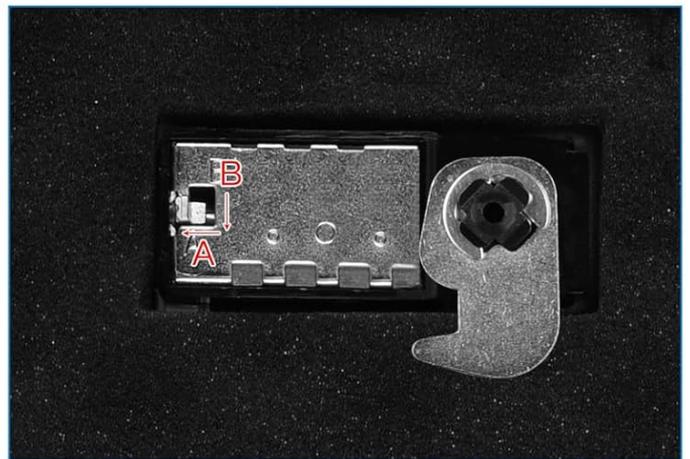

4. Return the slot from "B" to "A".

Image: Visual guide demonstrating the four steps to set the 3-digit combination code.

## 3. OPERATING INSTRUCTIONS

### 3.1 Opening the Safe

1. Align the three combination dials to your set code.
2. Turn the knob clockwise to unlock and open the safe lid.

### 3.2 Closing and Securing the Safe

1. Place your items inside the safe.
2. Close the lid firmly.
3. Scramble the combination dials to lock the safe. This prevents unauthorized access.

### 3.3 Using the Steel Security Cable

The included heavy steel cable provides an additional layer of security by allowing you to tether the safe to a fixed object. This is particularly useful when using the safe in a vehicle, hotel room, or other locations where it might be easily

removed.

1. Loop one end of the steel cable around a secure, immovable object (e.g., a car seat frame, a heavy piece of furniture).
2. Feed the other end of the cable through the designated slot on the safe.
3. Close and lock the safe as described in section 3.2. The cable will be secured when the safe is locked.

## BETTER 3-DIGIT COMBINATION LOCK



**Set your own code!**  
**1000 kinds of code to protect the safety of items**

Image: The TENAMIC Pistol Safe secured with the heavy steel cable, demonstrating its use for reliable security.

### **3.4 Internal Protection and Storage**

The safe features internal protective foam to cushion and protect your valuables from scratches and impacts during transit. This foam can be removed if you require additional storage space for larger items.

# INTERNAL PROTECTION



The interior foam can protect pistols and valuables from wear. You can remove the foam to increase storage space if necessary.

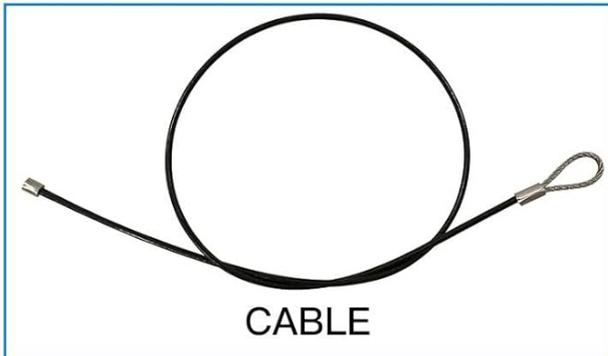


Image: The interior of the safe showing the protective foam, alongside the included steel cable and mounting screws.



Image: Examples of the TENAMIC Pistol Safe being used in different environments, such as a drawer, on a desk, and in a car.

## 4. MAINTENANCE

---

To ensure the longevity and proper functioning of your TENAMIC Pistol Safe, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the exterior surface with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the anti-corrosion powder coating.
- **Lock Mechanism:** The mechanical combination lock requires no special lubrication or maintenance. Keep the dials free from dust and debris.
- **Storage:** Store the safe in a dry environment to prevent moisture buildup, although the safe is not water-resistant.

## 5. TROUBLESHOOTING

---

If you encounter issues with your TENAMIC Pistol Safe, consider the following common solutions:

- **Safe Will Not Open with Code:**

- Ensure the dials are perfectly aligned with your set combination. Even a slight misalignment can prevent opening.
  - Double-check that you are using the correct code. If you recently changed it, try both the old and new codes.
  - If you suspect the code was accidentally reset, you may need to follow the "Setting Your Combination Code" steps again, starting from the factory default (0-0-0) if you can access the reset lever.
- **Knob is Stiff or Hard to Turn:**
    - Ensure the safe is not under any external pressure or strain that might be binding the mechanism.
    - Check for any foreign objects obstructing the lock or lid.

If these steps do not resolve the issue, please contact customer support for further assistance.

## 6. SPECIFICATIONS

Feature	Detail
Brand	Tenamic
Model Number	GC10 Pink
Product Dimensions (Exterior)	9.5"D x 6.5"W x 1.8"H
Lock Type	Mechanical Code Lock (3-digit combination)
Color	Dial Lock Pink
Material	Alloy Steel
Special Features	Anti-Theft, Combination Lock, Portable
Mounting Type	Floor Mount (can be fixed with screws)
Included Components	Mounting Screws, Steel Cable, User Manual
Item Weight	2.9 Pounds
Water Resistance Level	Not Water Resistant
Batteries Required?	No

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty Information

The TENAMIC Pistol Safe (Model GC10 Pink) comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear.

### 7.2 Customer Support

For any questions, concerns, or assistance regarding your TENAMIC Pistol Safe, please do not hesitate to contact our dedicated after-sales service team. We are committed to providing prompt and effective solutions to ensure your satisfaction.

Please refer to the contact information provided on the product packaging or the official Tenamic website for the most up-

to-date support channels.



© 2025 Tenamic. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

## Related Documents - GC10 Pink

 DIGITAL KEYPAD SAFE BOX HB SERIES Instruction Manual The professional of family safety	<p><a href="#">TENAMIC HB Series Digital Keypad Safe Box Instruction Manual</a></p> <p>Instruction manual for the TENAMIC HB Series Digital Keypad Safe Box, covering product features, warnings, battery insertion, code setting, operation, mounting, customer support, and warranty information.</p>
 FINGERPRINT SAFE BOX TC-SERIES Instruction Manual The professional of family safety	<p><a href="#">TENAMIC TC-SERIES Fingerprint Safe Box Instruction Manual</a></p> <p>Comprehensive instruction manual for the TENAMIC TC-SERIES Fingerprint Safe Box. Learn how to open, insert batteries, set fingerprints and passwords, use alarm functions, mount the safe, and understand warranty terms.</p>
 DIGITAL KEYPAD SAFE BOX HB SERIES Instruction Manual The professional of family safety	<p><a href="#">TENAMIC HB Series Digital Keypad Safe Box Instruction Manual</a></p> <p>Instruction manual for the TENAMIC HB Series Digital Keypad Safe Box, covering product features, warnings, battery insertion, code setting, operation, mounting, customer support, and warranty information.</p>
 FINGERPRINT SAFE BOX TC-SERIES Instruction Manual The professional of family safety	<p><a href="#">TENAMIC TC-SERIES Fingerprint Safe Box Instruction Manual</a></p> <p>Comprehensive instruction manual for the TENAMIC TC-SERIES Fingerprint Safe Box. Learn how to open, insert batteries, set fingerprints and passwords, use alarm functions, mount the safe, and understand warranty terms.</p>
 STEEL CABINET SERIES   INSTRUCTION MANUAL FOR STYLES: SA-GC06-X, SA-GC10-X, SA-GC14-X, SA-GC18-X, SA-ACS-X, SA-ACL-X	<p><a href="#">Sports Afield Steel Cabinet Series Instruction Manual</a></p> <p>Comprehensive instruction manual for Sports Afield Steel Cabinet Series, covering models SA-GC06-X, SA-GC10-X, SA-GC14-X, SA-GC18-X, SA-ACS-X, SA-ACL-X. Provides detailed guidance on setup, installation, operation, safety precautions, and warranty information.</p>
	<p><a href="#">The Original Pink Box PB20VAP Cordless/Brushless 20Volt Li-Ion Air Pump Instruction Manual</a></p> <p>Detailed instruction manual for The Original Pink Box PB20VAP cordless and brushless 20-volt lithium-ion air pump. Covers safety, specifications, parts, operation, and maintenance for optimal use.</p>