

[Manuals.plus](#) /

› [Smad](#) /

› Smad 2.7 Cu. Ft. Ventless All-in-One Washer Dryer Combo User Manual

Smad 9e5776c7-d97f-4e0b-8f67-3517d19d4e6a

Smad 2.7 Cu. Ft. Ventless All-in-One Washer Dryer Combo User Manual

Model: 9e5776c7-d97f-4e0b-8f67-3517d19d4e6a

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the appliance. Keep this manual for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not wash or dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Always disconnect the appliance from the power supply before attempting any service.

2. PRODUCT OVERVIEW

The Smad All-in-One Washer Dryer Combo is designed for efficient laundry care in compact spaces. It combines washing and drying functions into a single unit, featuring a ventless drying system.



Image 2.1: Front view of the Smad All-in-One Washer Dryer Combo with the door open, showcasing the drum interior. This unit integrates both washing and drying capabilities.

Key Features:

- **Capacity:** 2.7 Cu. Ft. washing capacity, capable of washing up to 26 lbs and drying up to 13 lbs.
- **Ventless Drying:** Eliminates the need for an external exhaust pipe, ideal for apartments, dorms, and RVs.
- **High Spin Speed:** 1400 RPM maximum spin speed for efficient water extraction and faster drying.
- **User-Friendly Interface:** LED display and rotary knob for easy program selection and monitoring.
- **Quiet Operation:** Operates at less than 63 dB, ensuring a peaceful environment.
- **Compact Design:** Dimensions of 23.4"W x 23"D x 31"H (unit only, without packaging) for space-saving installation.
- **Child Lock:** Enhances safety by preventing unintended operation.

1400 RPM Max Spin Speed

Washes up to 26 lbs. | Dries up to 13 lbs



Image 2.2: Illustration of the washer dryer drum highlighting its maximum wash capacity of 26 lbs and dry capacity of 13 lbs, with a maximum spin speed of 1400 RPM.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any shipping damage. Report any damage to your retailer immediately.

3.2 Removing Transport Bolts

Before using the washing machine, the transport bolts located at the back of the machine must be removed. Failure to remove these bolts will cause excessive vibration and damage to the appliance.

1. Loosen all bolts and plastic spacers (including rubber grommets) with a spanner and then remove them.
2. Keep the transport bolts properly for future use (e.g., if you need to move the appliance).

3. Cover the holes with the provided transport hole plugs.

Remove Transport Bolts

Before using this washing machine, transport bolts must be removed from the backside of this machine. Please take the following steps to remove the bolts:

- 1 Loosen all bolts and plastic spacers (including rubbergrommets) with spanner and then remove them.
- 2 Keep the transport bolts properly for future use
- 3 Cover the holes with transport hole plugs.



Image 3.1: Step-by-step guide illustrating how to remove the transport bolts from the rear of the Smad washer dryer combo. These bolts must be removed before operation.

3.3 Placement

- Place the appliance on a firm, level floor.
- Ensure there is adequate space around the unit for ventilation and access.
- Adjust the leveling feet to ensure the machine is stable and does not rock.

Compact Washer and Dryer Combo

Save Your Indoor Space



Image 3.2: The compact dimensions of the Smao washer dryer combo are shown: 23.4 inches wide, 25.6 inches deep, and 33.5 inches high, making it suitable for small spaces.

3.4 Water and Drain Connections

- Connect the hot and cold water inlet hoses to the corresponding valves and to the back of the machine.
- Securely attach the drain hose to a standpipe or laundry tub, ensuring it is properly secured to prevent dislodging during operation.

3.5 Electrical Connection

Plug the power cord into a grounded 120V, 60Hz electrical outlet. Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features an LED display, a program selection knob, and various function buttons.



Image 4.1: Detailed diagram of the Smad washer dryer combo's control panel, showing the LED display, program selection knob, and various function buttons for cycle settings and operation.

4.2 Loading Laundry

- Open the door and load clothes loosely into the drum. Do not overload the machine.
- Close the door firmly until it latches.

4.3 Adding Detergent and Additives

Add appropriate amounts of detergent, fabric softener, and other laundry additives to the dispenser drawer. Refer to your detergent's instructions for dosage.

4.4 Selecting a Wash/Dry Cycle

Turn the program selection knob to choose the desired cycle. The LED display will show the default settings for the selected program. Available cycles include:

- Normal/Cotton
- Quick Wash
- Delicates
- Wool
- Baby Wear
- Sanitary
- Cold Wash
- Tub Clean
- Perm Press
- Heavy Duty
- Bulky/Large
- Sports Wear
- Spin Only
- Rinse & Spin
- Auto Dry
- Timed Dry

Use the function buttons (Time Save, Delay, Temp, Spin, Soil, Function) to adjust settings like water temperature, spin speed, and soil level as needed.



Image 4.2: The LED electronic display and control knob, illustrating the selection of 16 preset cycles designed to adapt to various clothing materials and laundry needs.

4.5 Starting and Pausing a Cycle

- Press the **Start/Pause** button to begin the selected cycle.
- To pause a running cycle, press the **Start/Pause** button again. Press it once more to resume.

4.6 Child Lock Function

To activate the Child Lock, press and hold the designated button (refer to control panel diagram) for a few seconds. This prevents accidental changes to settings or interruption of a cycle. Repeat the action to deactivate.

4.7 Add a Garment Function

If you need to add an item after a cycle has started, press the **Start/Pause** button. Wait for the door to unlock (this may take a few moments depending on water level and temperature). Add the garment, close the door, and press **Start/Pause** to resume.



Image 4.3: Visual representation of the "Add a Garment" feature, allowing users to pause the cycle and add forgotten items to the wash.

4.8 Drying Options

The unit offers various drying options to suit different fabric types and desired dryness levels.



Image 4.4: Illustration of different drying options available, including Normal Dry for everyday items, Extra Dry for heavier fabrics, and Gentle Dry for delicate garments.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

5.1 Cleaning the Drum (Tub Clean)

Use the dedicated "Tub Clean" cycle periodically to clean the stainless steel drum and prevent odor buildup. Follow the instructions in the control panel section for selecting this cycle.

Stainless Steel

Tub Clean, More Healthier Operation



Image 5.1: The stainless steel tub of the washer dryer combo, emphasizing its clean and hygienic operation, which can be maintained with the Tub Clean cycle.

5.2 Cleaning the Detergent Dispenser

Remove the dispenser drawer and rinse it under warm water to remove any detergent residue. Clean the dispenser housing with a damp cloth.

5.3 Cleaning the Drain Pump Filter

Locate the drain pump filter (usually at the bottom front of the machine). Open the cover, drain any residual water, and remove the filter. Clean any lint or debris from the filter and reinsert it securely.

5.4 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before calling for service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, cycle not selected, Start/Pause not pressed.	Check power connection, ensure door is latched, select a cycle, press Start/Pause.
Excessive vibration	Transport bolts not removed, machine not level, uneven load.	Remove transport bolts, adjust leveling feet, redistribute laundry load.
Water not draining	Drain hose kinked or blocked, drain pump filter clogged.	Check drain hose for kinks, clean drain pump filter.
Clothes not drying properly	Overloaded, incorrect dry cycle selected, lint filter clogged (if applicable, though this is ventless).	Reduce load size, select appropriate dry cycle, ensure proper air circulation around the unit.
Error code on display	Specific malfunction.	Refer to the full user manual for a list of error codes and their solutions, or contact customer support.

7. SPECIFICATIONS

- **Brand:** Smad
- **Model Number:** 9e5776c7-d97f-4e0b-8f67-3517d19d4e6a
- **Product Dimensions (D x W x H):** 25.6" x 23.4" x 33.5"
- **Item Weight:** 156.6 pounds
- **Washing Capacity:** 2.7 Cu. Ft. (up to 26 lbs)
- **Drying Capacity:** Up to 13 lbs
- **Maximum Rotational Speed:** 1400 RPM
- **Operation Mode:** Automatic
- **Access Location:** Front Load
- **Drum Material:** Plastic (Note: The product features a stainless steel tub for cleaning, as mentioned in maintenance.)
- **Color:** White
- **Special Features:** Compact, High Efficiency, LED Display, Portable, Child Lock
- **Noise Level:** Under 63 dB (no louder than 77 dB)
- **Power:** 120V, 60Hz
- **Certification:** UL

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact Smad customer service. If you encounter any issues or require assistance, please contact the seller or Smad customer support directly.



Handling Damaged Shipments

While we have taken every precaution, damage can sometimes occur during shipping.



Damaged

Scratched

Dented

Not working

Step 1: Inspect the Package

Step 2: Document the Damage

Step 3: Contact Us Immediately

Step 4: Provide Information (e.g.,
order number, photos of damage,
description of the issue)



If you encounter any issues or need assistance while using our product, pls **feel free to contact us.**

Image 8.1: An illustration depicting customer support for handling damaged shipments, advising users to inspect packages, document damage, and contact the seller immediately with relevant information.

Contact Information: Please refer to your purchase receipt or the official Smad website for the most up-to-date contact details for customer service.

© 2024 Smad. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

