

AGARO 34157

AGARO Elite High Pressure Washer User Manual

Model: 34157 | Brand: AGARO

1. INTRODUCTION

Thank you for choosing the AGARO Elite High Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your pressure washer. Please read this manual thoroughly before first use and keep it for future reference. This powerful unit features 2400 Watts of power, delivers up to 240 Bars of pressure, and has a flow rate of 10 liters per minute, making it suitable for various cleaning tasks.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions to reduce the risk of injury or damage. Failure to follow these instructions may result in serious injury or property damage.

- **Read the entire manual:** Understand all operating instructions and warnings before using the appliance.
- **Wear appropriate safety gear:** Always wear eye protection (safety glasses) and hearing protection during operation.
- **Keep clear:** Do not direct the water jet at people, pets, electrical devices, or the appliance itself.
- **Secure footing:** Ensure stable footing and balance when operating the pressure washer.
- **Electrical safety:** Connect the appliance only to a properly grounded outlet. Do not use if the power cord or plug is damaged.
- **Children and unauthorized persons:** Keep children and unauthorized persons away from the operating area.
- **Disconnect power:** Always unplug the pressure washer from the power source before performing any maintenance, cleaning, or when the unit is not in use.
- **Water supply:** Ensure the water supply is clean and free of debris to prevent damage to the pump.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

Accessories



Main unit



Tap connector



Inlet filter



Bucket filter



Spray bottle joiner



3M Inlet hose



Extension rod



Foam bottle



Spray gun & nozzle



Cleaning brush



Inlet connector



10M Outlet hose




Image: All included accessories for the AGARO Elite High Pressure Washer.

- Main Unit (Pressure Washer)
- Spray Gun & Nozzle
- Spray Gun Extension Rod
- 10 Meter Outlet Hose
- 3 Meter Inlet Pipe
- Inlet Filter
- Inlet Connector
- Tap Connector
- Bucket Water Filter
- Foam Spray Bottle (700ml)
- Cleaning Brush

4. SETUP AND INSTALLATION

Follow these steps to correctly assemble and prepare your pressure washer for operation.

How to Install

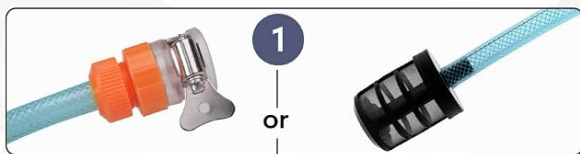

1. Attach one end of the inlet pipe with the tap connector.

You can also attach the bucket filter if you need to suck water from a bucket.



2. Attach the inlet pipe with the inlet connector



3. Screw the inlet filter clockwise to attach with the main unit.



4. Push and attach the inlet connector with the inlet filter.



5. Push and screw the outlet hose pipe with the outlet connector.



6. Turn ON the machine without connecting the hose pipe with the gun. This is done to release the air from the pipe easily.



7. Attach the outlet hose pipe with the spray gun.



8. Connect the spray gun extension rod with the spray gun.



9. Attach the nozzle with the spray gun extension rod.



Correct: Water inlet quick connection link method



Wrong: There is a gap in the middle

Image: Visual guide for the installation process of the pressure washer.

1. **Connect Inlet Pipe:** Attach one end of the 3-meter inlet pipe to the tap connector. Alternatively, if drawing water from a bucket, attach the bucket filter to the inlet pipe.
2. **Attach Inlet Connector:** Connect the inlet pipe assembly to the inlet connector.
3. **Screw Inlet Filter:** Screw the inlet filter clockwise onto the main unit's inlet port.
4. **Push Inlet Connector:** Push and attach the inlet connector with the inlet filter on the main unit.
5. **Connect Outlet Hose:** Push and screw the 10-meter outlet hose pipe with the outlet connector onto the main unit's outlet port.
6. **Release Air:** Before connecting the spray gun, turn ON the machine and allow water to flow through the hose to release any trapped air from the pipe. This ensures proper pressure buildup.
7. **Attach Spray Gun:** Attach the outlet hose pipe to the spray gun.
8. **Connect Extension Rod:** Connect the spray gun extension rod to the spray gun.

9. **Attach Nozzle:** Attach the desired nozzle to the spray gun extension rod.

The pressure washer can draw water from both a direct tap connection or a bucket using the provided bucket filter.

Can be used with **tap & bucket**

10m Outlet hose pipe • **3m** Inlet hose pipe
• **4m** Power cord



Image: Illustration of connecting the pressure washer to a tap or using a bucket with a filter.

5. OPERATING INSTRUCTIONS

Once assembled and connected to a water and power source, your AGARO Elite High Pressure Washer is ready for use.

5.1 Powering On/Off

- Ensure all connections are secure and the water supply is open.
- Plug the power cord into a suitable grounded electrical outlet.
- Press the ON/OFF switch on the main unit to start the motor.
- The unit features an automatic shut-off pump that stops when the trigger is not engaged, saving energy and

prolonging pump life.

- To turn off, press the ON/OFF switch to the OFF position and unplug the unit.


5.2 Adjusting Water Pressure

The pressure washer is equipped with an adjustable speed control knob to vary the water pressure according to your cleaning needs.

Adjustable speed control knob



High speed
Water spray for
regular cleaning

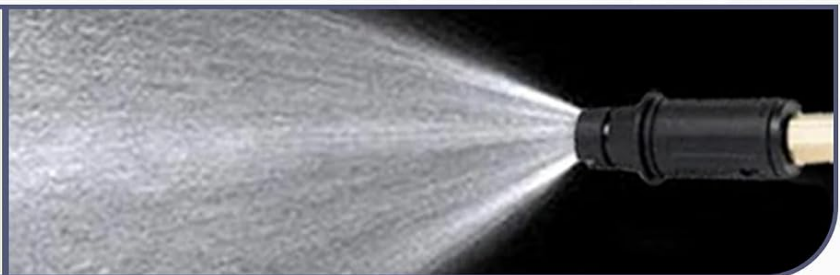

Jet speed
Water spray for sticky
& detailed cleaning



Image: Adjustable speed control knob for varying water pressure, showing high speed for regular cleaning and jet speed for detailed cleaning.

- Rotate the knob on the main unit to increase or decrease the water pressure.
- Use **High Speed** for general cleaning tasks.
- Use **Jet Speed** for stubborn dirt and detailed cleaning.

5.3 Foam Application

The included foam spray bottle allows for easy application of cleaning detergents.



Image: Instructions for attaching the 700ml foam bottle and adjusting the foam quantity.

- Fill the 700ml foam bottle with your desired pressure washer-safe detergent.
- Attach the foam bottle to the spray gun.
- Rotate the knob on the foam bottle to adjust the quantity of foam dispensed.
- Apply foam to the surface, allow it to dwell as per detergent instructions, then rinse with clear water.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **After each use:** Disconnect the water supply and power. Squeeze the spray gun trigger to release any remaining pressure.
- **Clean filters:** Regularly check and clean the inlet filter and bucket filter to prevent blockages and ensure proper water flow.
- **Nozzle cleaning:** If the nozzle becomes clogged, use the included cleaning needle to clear any debris.

- **Storage:** Store the pressure washer in a dry, frost-free environment. Drain all water from the pump and hoses before storing to prevent freezing damage.
- **Hose care:** Avoid kinking or crushing the high-pressure hose. Roll it neatly for storage.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Motor does not start	No power supply; Faulty switch; Thermal overload activated	Check power connection and outlet; Ensure switch is ON; Allow motor to cool down
Low or no pressure	Insufficient water supply; Clogged inlet filter/nozzle; Air in pump/hose; Leaks	Check water source and flow; Clean filters/nozzle; Bleed air from system (run without gun attached); Check connections for leaks
Water leaks	Loose connections; Damaged O-rings/seals	Tighten all connections; Inspect and replace damaged O-rings/seals
Motor stops during operation	Thermal overload activated; Power fluctuation	Allow motor to cool down; Check power supply stability

8. SPECIFICATIONS

Key technical specifications for the AGARO Elite High Pressure Washer.



Image: Visual representation of the pressure washer's main specifications.

Specification	Value
Brand	AGARO
Model Number	34157
Power Source	Corded Electric
Power Consumption	2400 Watts
Maximum Pressure	240 Bars
Maximum Flow Rate	10 Liters Per Minute
Hose Length (Outlet)	10 Meters
Hose Length (Inlet)	3 Meters
Item Weight	8500 Grams
Product Dimensions (L x W x H)	24L x 18.2W x 58H Centimeters
Foam Bottle Capacity	700 ml

9. WARRANTY AND SUPPORT

Your AGARO Elite High Pressure Washer comes with a manufacturer's warranty and dedicated customer support.

9.1 Warranty Information

This product is covered by a **1-year manufacturer warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions. It does not cover damage caused by misuse, neglect, unauthorized repairs, or normal wear and tear.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact AGARO customer support:

- **Manufacturer:** Universal Corporation Limited
- **Manufacturer Contact Information:** Universal Corporation Limited, GuangZhou city, China
- **Importer Contact Information:** Universal Corporation Limited, 4/1 Middleton street, Sikkim Commerce house, Kolkata-71
- Please refer to the product packaging or AGARO's official website for the most current contact details and support options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question