

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 19.5' x 39' Heavy Duty Party Tent Instruction Manual

## Outsunny 84C-512V00WT

# Outsunny 19.5' x 39' Heavy Duty Party Tent Instruction Manual

Brand: Outsunny

Model: 84C-512V00WT

## INTRODUCTION

---

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your Outsunny 19.5' x 39' Heavy Duty Party Tent. Designed for various outdoor events, this tent offers a spacious and protected area. Please read this manual thoroughly before setup and use to ensure safe and proper operation.

## SAFETY INFORMATION

---

Always secure the tent to the ground and be aware of weight limits. Do not use the tent in extreme weather conditions such as heavy winds, snow, or severe thunderstorms. Ensure all connections are secure before and during use. Keep away from open flames and heat sources. Adult supervision is recommended during assembly and disassembly.

## PRODUCT OVERVIEW

---

### Key Features

- **Upgraded Galvanized Frame:** Built with 38 mm diameter and 0.7 mm thick galvanized steel for enhanced durability and rust resistance.
- **Reinforced for Maximum Stability:** Features top triangular brackets, extra side beams, and a strengthened base frame for superior wind resistance and load capacity.
- **UV-Blocking Party Tent:** Sun-filtering canopy controls sun exposure, while stylish windows allow natural light.
- **All-Purpose Shelter:** Two zippered doors offer quick access and airflow. Sidewalls are removable for an open, breezy setup. Ideal for weddings, parties, carports, or storage.
- **Generous Dimensions:** Overall 470.5" L x 235.5" W x 126" H, with an eaves height of 78.75" H and door size of 133.75" W x 74.75" H.

## Specifications

Specification	Detail
Brand	Outsunny
Material	Alloy Steel, Polyethylene
Style	Modern
Product Dimensions	470.5"L x 235.5"W x 126"H
Item Weight	330 Pounds
Frame Material	Alloy Steel
Water Resistance Level	Water Resistant
Shape	Rectangular
Ultraviolet Light Protection	Yes
Assembly Required	Yes
Occupancy	47 Person
Color	White
Manufacturer	Aosom LLC
UPC	196393337943
Floor Area	769 Square Feet
Item model number	84C-512V00WT

## Product Images



The Outsunny party tent fully assembled in a backyard setting, ready for an event. It features a white canopy and clear window sections.



A view of the Outsunny party tent, highlighting the brand's logo on the side, indicating its quality and origin.




Guests seated at tables inside the tent, demonstrating its suitability for various occasions like wedding receptions or backyard barbecues.



20 Cathedral-style windows let you enjoy natural light

2 Large zipper doors to enjoy the breeze and for quick entry

A detailed view of the tent's cathedral-style windows and large zippered doors, emphasizing natural light and easy access.

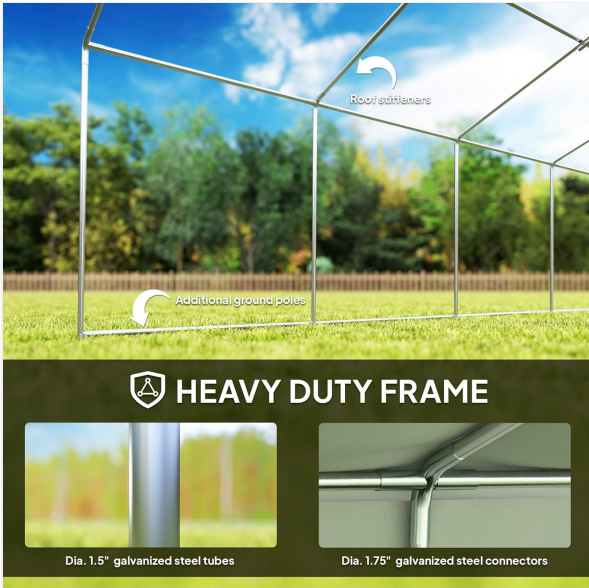

An illustration showcasing the heavy-duty galvanized steel tubes and connectors that form the robust frame of the tent.



A diagram illustrating the L-shaped ground stakes and spiral ground stakes with guy ropes, designed for enhanced stability and wind resistance.



A clear diagram providing the overall dimensions of the tent, including length, width, and height, to help users measure their site before purchase.



An illustration demonstrating the tent's unique design, showing how the six individual sidewalls can be removed or adjusted with zippers for customizable ventilation.

## Product Videos

Your browser does not support the video tag.

This video provides a visual overview of the Outsunny 84C-512V00WT party tent, showcasing its design, features, and potential uses in an outdoor setting. It highlights the spacious interior and the overall structure.

## SETUP INSTRUCTIONS

- 1. Prepare the Site:** Choose a flat, level area free of sharp objects. Clear any debris and ensure adequate space for the tent's dimensions (470.5" L x 235.5" W).
- 2. Unpack and Identify Components:** Lay out all poles, connectors, canopy, and sidewalls. Refer to the parts list provided in your packaging to ensure all components are present. Note that some poles may have

numbers that are difficult to read; re-labeling them can be helpful for future setups.

- 3. Assemble the Frame:** Begin by connecting the base poles to form the rectangular footprint. Insert the L-shaped ground stakes into the feet for initial stability. Proceed to assemble the vertical and roof poles, connecting them with the appropriate galvanized steel connectors. Pay attention to the top triangular brackets and extra side beams for reinforced stability.
- 4. Attach the Canopy:** Carefully drape the main canopy over the assembled frame. Ensure it is centered and evenly distributed. Secure the canopy to the frame using the provided bungee balls or ties.
- 5. Install Sidewalls:** Attach the individual sidewalls to the frame. The tent includes 6 individual sidewalls with zippers, allowing for customization of ventilation. Ensure the zippered doors are properly aligned for quick access.
- 6. Secure the Tent:** Once the frame, canopy, and sidewalls are in place, use the spiral ground stakes and guy ropes to firmly anchor the tent to the ground. Bury the canopy's extended edges if possible for added stability and protection against wind. This step is crucial for wind resistance.
- 7. Team Assembly:** For optimal setup speed and safety, it is highly recommended that 3 to 4 people assist with the assembly process due to the tent's size and weight.

## OPERATING INSTRUCTIONS

---

- Ventilation Control:** Utilize the two large zippered doors and the removable sidewalls to control airflow and ventilation within the tent. Open them fully for maximum breeze or close them for protection.
- Sun Protection:** The UV-blocking canopy helps control sun exposure, providing a shaded area. The clear windows allow natural light while minimizing glare.
- Weather Awareness:** While the tent is water-resistant and designed for stability, it is not intended for use in severe weather conditions. Monitor weather forecasts and disassemble the tent if strong winds, heavy rain, or snow are expected.
- Event Usage:** This tent is suitable for various events such as weddings, graduation parties, and barbecues. It can also serve as a temporary carport or storage shelter for vehicles, furniture, or tools.

## MAINTENANCE

---

- Cleaning the Canopy:** Clean the polyethylene canopy with mild soap and water. Avoid harsh chemicals or abrasive cleaners that could damage the material. Rinse thoroughly and allow to air dry completely before storage.
- Frame Care:** Wipe down the galvanized steel frame with a damp cloth to remove dirt and debris. Inspect for any signs of rust or damage. Apply a rust-inhibiting spray if necessary to prolong the life of the frame.
- Storage:** When not in use, disassemble the tent and store all components in a dry, cool place away from direct sunlight. Ensure the canopy and sidewalls are completely dry to prevent mold and mildew.
- Regular Inspection:** Periodically inspect all poles, connectors, ropes, and stakes for wear, damage, or bending. Replace any damaged parts immediately to maintain the tent's structural integrity and safety.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Tent is unstable or sways in wind.	Insufficient anchoring; loose connections; strong winds.	Ensure all ground stakes are fully inserted and guy ropes are taut. Double-check all frame connections. Disassemble in very strong winds.
Water pooling on the canopy.	Improper canopy tension; heavy rainfall.	Adjust canopy tension to ensure water runs off. Clear any accumulated water promptly. This tent is not designed for heavy snow loads.
Difficulty assembling poles.	Misaligned parts; numbers on poles are hard to read.	Ensure correct poles are used for each section. Refer to the assembly diagram. Consider re-labeling poles for clarity.
Zipper on sidewall is stuck or broken.	Debris in zipper; excessive force; manufacturing defect.	Clear any obstructions. Apply a zipper lubricant. If broken, contact customer support for replacement parts.

## WARRANTY AND SUPPORT

---

For any questions, concerns, or issues regarding your Outsunny Party Tent, please contact the seller, Aosom Direct, through the platform where you made your purchase. They can provide assistance with product support, replacement parts, and warranty claims as per their terms and conditions. Please retain your proof of purchase for any warranty-related inquiries.

You can typically find contact information for Aosom Direct on your order details page or by visiting their store page on Amazon.