

Beyution NA463

Beyution NA463 Replacement Remote Control User Manual

Model: NA463

PRODUCT OVERVIEW

The Beyution NA463 is a replacement infrared remote control designed for various Magnavox DVD Player/Recorder models. It offers a straightforward, plug-and-play experience without requiring any complex setup or programming.

Key Features:

- **No Setup Required:** Functions immediately upon battery insertion.
- **Ergonomic Design:** Lightweight and comfortable to hold.
- **Responsive Buttons:** Buttons provide good elasticity for easy operation.
- **Infrared Connectivity:** Reliable performance up to 10 meters.





Image: Front view of the Beyution NA463 replacement remote control, showcasing its button layout including power, navigation, playback, and numeric keys.

SETUP

The Beyution NA463 remote control is designed for immediate use without any programming. Simply install the batteries, and it will be ready to operate your compatible Magnavox DVD Player/Recorder.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA size batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Images: Left shows the back of the remote with the battery cover removed, revealing the empty battery slots. Right shows the back of the remote with two AAA batteries correctly inserted into the compartment.

OPERATING INSTRUCTIONS

This remote control provides full functionality for compatible Magnavox DVD Player/Recorder models. Point the remote directly at the infrared sensor on your DVD player/recorder for optimal performance.

Basic Functions

- **Power (STANDBY-ON):** Press the red button at the top left to turn the device on or off.
- **Navigation (Arrow Keys & OK):** Use the directional arrow buttons (Up, Down, Left, Right) to navigate menus and the "OK" button to confirm selections.
- **Playback Controls:**

- **Play:** ► Initiates playback.
- **Pause:** Pauses playback.
- **Stop:** ■ Stops playback.
- **Fast Forward/Rewind:** ► ► / ◄ ◄ Skips forward or backward through content.
- **Next/Previous:** ► ■ / ■ ◄ Skips to the next or previous track/chapter.
- **Numeric Keys (0-9, +10):** Directly select tracks or input numbers.
- **Menu:** Access the main menu of the DVD player/recorder.
- **Display:** Shows on-screen information.
- **Audio:** Cycles through available audio tracks.
- **Subtitle:** Cycles through available subtitle tracks.
- **Angle:** Changes camera angle if supported by the DVD.
- **Setup:** Accesses system setup menus.
- **Repeat:** Repeats current track/chapter or entire disc.
- **Title:** Returns to the DVD title menu.
- **Mode:** Changes playback mode.
- **Zoom:** Zooms in on the picture.
- **A-B:** Repeats a specific section between two marked points.
- **Clear:** Clears input or selection.
- **Marker:** Sets a marker point.
- **Search:** Initiates search function.
- **Search Mode:** Toggles search modes.
- **Return:** Returns to the previous screen or menu.

Compatibility

This remote control is compatible with, but not limited to, the following Magnavox DVD Player/Recorder models:

- MDV110
- MDV110/17
- MDV456
- MDV456/17
- MDV11017
- MDV45617

If your specific model is not listed, please refer to the troubleshooting section or contact customer support for verification.

MAINTENANCE

Proper care and maintenance will extend the lifespan of your remote control.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the surface or internal components.

Battery Replacement

- Replace batteries when the remote's response becomes sluggish or it stops functioning.
- Always replace both batteries at the same time with new AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

Storage

- Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the remote or exposing it to excessive moisture.

TROUBLESHOOTING

If you experience issues with your Beyution NA463 remote control, try the following solutions:

Problem	Possible Cause / Solution
Remote control is not working.	Batteries: Check if batteries are inserted correctly (+/-). Replace with new AAA batteries. Line of Sight: Ensure there are no obstructions between the remote and the DVD player/recorder. Point the remote directly at the device's infrared sensor. Distance: You may be too far from the device. The maximum effective distance is approximately 10 meters.
Buttons are unresponsive or sticky.	Dirt/Debris: Clean the remote control as described in the Maintenance section. Wear and Tear: If the remote is old, internal components might be worn. Consider replacement.
Remote works intermittently.	Low Batteries: Replace batteries. Interference: Other infrared devices or strong light sources might cause interference.
Remote does not control my specific Magnavox model.	Compatibility: Verify your DVD player/recorder model is listed as compatible. If not, contact customer support for assistance.

SPECIFICATIONS

Feature	Detail
Model Number	NA463
Brand	Beyution
Connectivity Technology	Infrared
Maximum Distance	10 Meters (approx. 33 feet)
Material	ABS Plastic
Color	Black
Power Supply	2 x AAA Batteries (Not Included)
Product Dimensions	6.3 x 1.57 x 0.39 inches (16 x 4 x 1 cm)

Feature	Detail
Item Weight	2.47 ounces (70 grams)
Special Feature	Ergonomic Design
Compatible Devices	Magnavox DVD Player/Recorder

WARRANTY INFORMATION

This Beyution NA463 Replacement Remote Control comes with a **6-month warranty period** from the date of purchase. The warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper battery installation. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, concerns, or issues regarding your Beyution NA463 Replacement Remote Control, please contact our customer service team.

- If you cannot find your device model in the compatibility list, please contact us before purchasing to verify compatibility.
- If the remote control you received is damaged or does not work, please contact us immediately. We are committed to providing a satisfactory solution within 24 hours.

Please refer to the contact information provided with your purchase or on the product packaging for the most direct support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question