

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YAOHUIMI](#) /

› [YAOHUIMI Replacement Remote Control Instruction Manual for Joy Fireplace Heaters](#)

YAOHUIMI A424011101G15(GAO04)

YAOHUIMI Replacement Remote Control Instruction Manual

Model: A424011101G15(GAO04)

INTRODUCTION

This manual provides instructions for the YAOHUIMI Replacement Remote Control. This remote is designed to operate various Joy Electric Infrared Fireplace Space Heater models, including RFH-6001LH, RFH-7401LB, RFH-3601LC, RFH-10201LB, and RFH-3001LC. It requires no programming and is ready for use after battery installation.

SETUP

1. Battery Installation

The remote control requires two AAA 1.5V batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA 1.5V batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Battery type:
AAA 1.5V



Figure 1: Battery compartment showing insertion of AAA 1.5V batteries.

NEW
Good design
with 1.5V AAA
battery

Long durable years: over 5 years



OLD
Bad design
with coin battery

Short durable years: 1~2 years



Figure 2: This remote uses AAA 1.5V batteries for longer life and easier replacement.

2. Compatibility

This remote control is compatible with the following Joy Electric Infrared Fireplace Space Heater models:

- Joy RFH-6001LH
- Joy RFH-7401LB
- Joy RFH-3601LC
- Joy RFH-10201LB
- Joy RFH-3001LC

No programming is required. The remote is pre-configured for immediate use with compatible models.

OPERATING INSTRUCTIONS

Point the remote control directly at the fireplace heater's receiver. Ensure there are no obstructions between the remote and the heater.

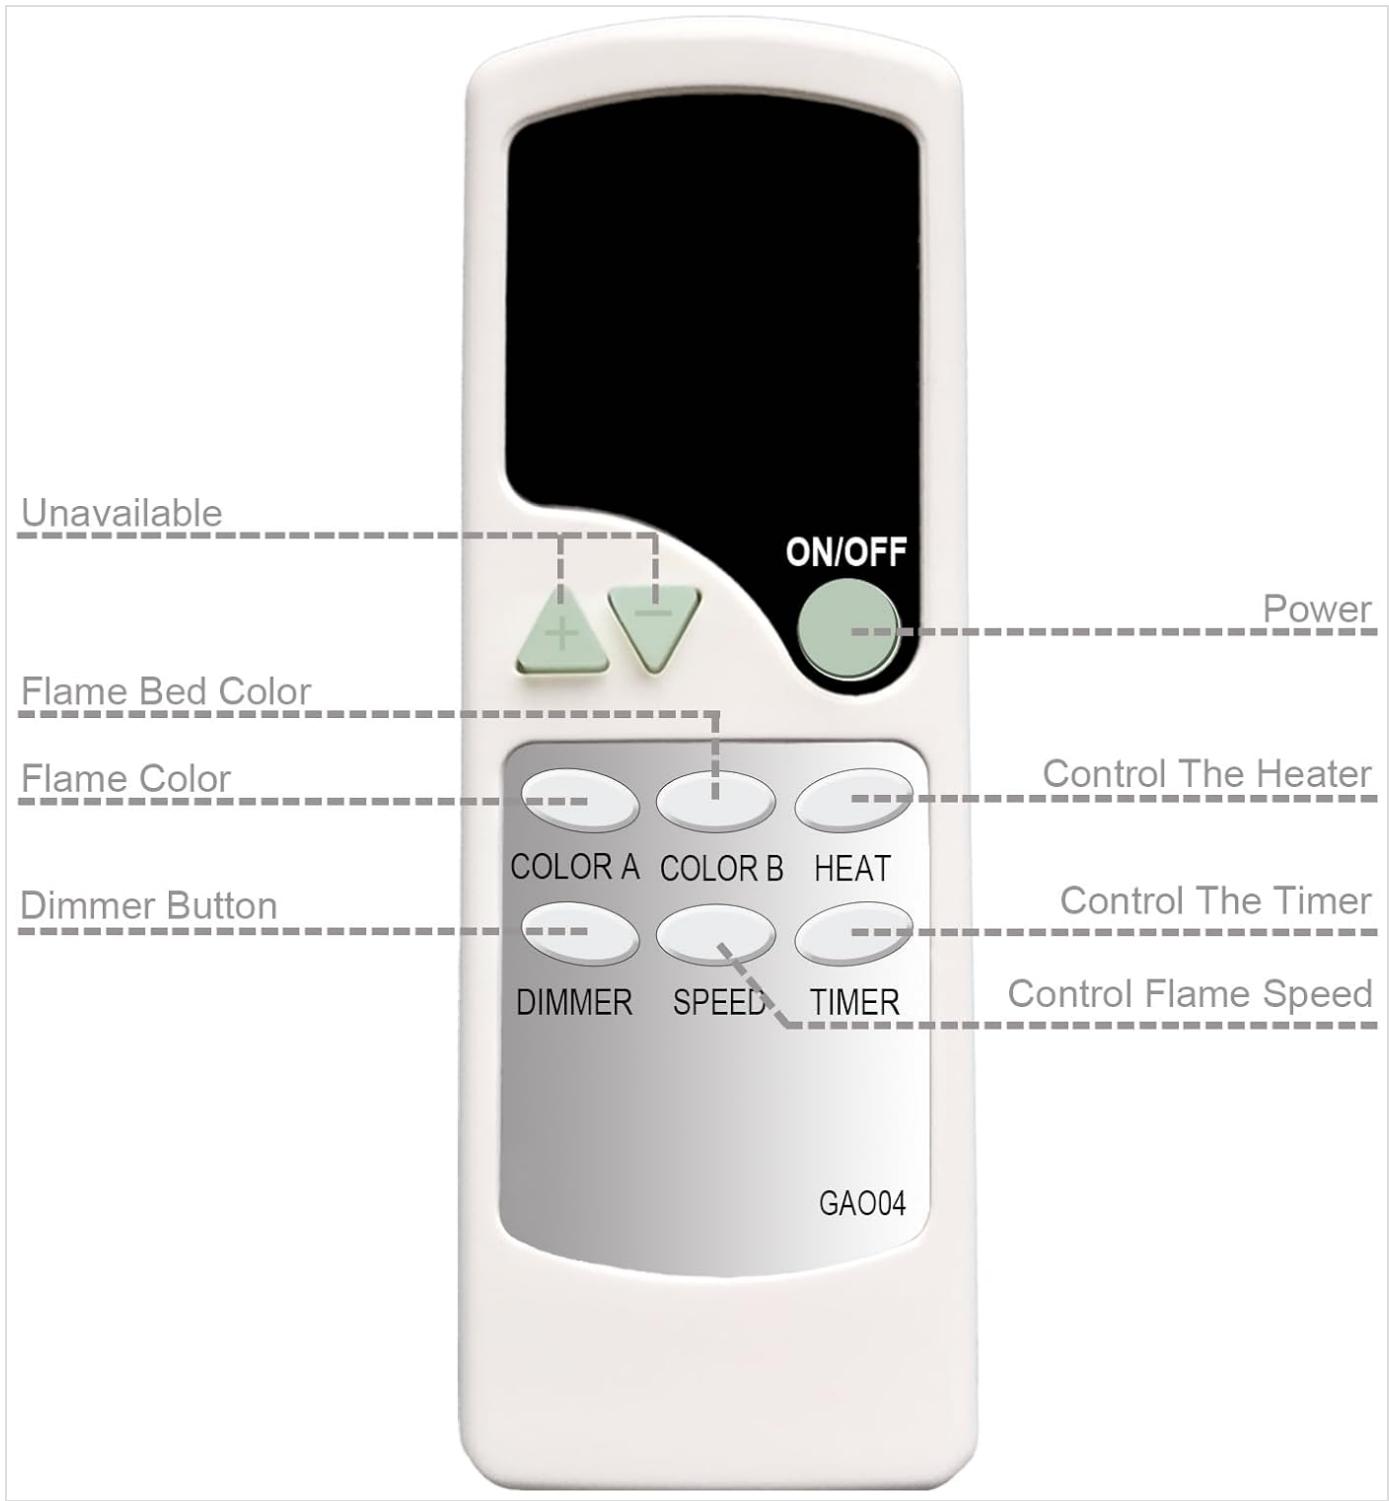


Figure 3: Remote Control Button Functions.

Button	Function
ON/OFF	Powers the fireplace heater on or off.
+ / -	Adjusts settings such as temperature or flame intensity. (Functionality may vary by heater model)
COLOR A	Controls the flame bed color.
COLOR B	Controls the main flame color.
HEAT	Activates or deactivates the heater function.
DIMMER	Adjusts the brightness of the flame effect.

Button	Function
SPEED	Adjusts the speed of the flame effect.
TIMER	Sets or adjusts the heater's timer function.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries simultaneously with new AAA 1.5V batteries. Do not mix old and new batteries or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or wet cloths, as these can damage the surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

• Remote not responding:

- Check if the batteries are correctly installed with the correct polarity.
- Replace old batteries with new AAA 1.5V batteries.
- Ensure there are no obstructions between the remote control and the fireplace heater's receiver.
- Confirm that the remote is pointed directly at the heater.

• Limited range:

- Replace the batteries.
- Ensure no strong light sources or electronic devices are interfering with the signal.

SPECIFICATIONS

Model Number	A424011101G15(GAO04)
Compatible Heater Models	Joy RFH-6001LH, RFH-7401LB, RFH-3601LC, RFH-10201LB, RFH-3001LC
Battery Type	2 x AAA 1.5V (not included)
Item Weight	1.06 ounces (approximately 30 grams)
Package Dimensions	0.39 x 0.2 x 0.08 inches (approximately 1 x 0.5 x 0.2 cm)