



Manuals.plus /

› BoostArea /

› BoostArea LED 4-Light Track Lighting Kit (Model C0842) Instruction Manual

## BoostArea C0842

# BoostArea LED 4-Light Track Lighting Kit Instruction Manual

Model: C0842 | Brand: BoostArea

## 1. INTRODUCTION

---

Thank you for purchasing the BoostArea LED 4-Light Track Lighting Kit. This modern and industrial ceiling light fixture is designed to provide versatile illumination for various indoor spaces such as kitchens, living rooms, bedrooms, and hallways. Its flexibly rotatable spot heads allow for customized lighting direction. This manual provides essential information for safe installation, operation, and maintenance of your new lighting kit.

## 2. SAFETY INFORMATION

---

**WARNING: Risk of Electric Shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.**

- Read all instructions carefully before installation.
- Ensure the electrical supply to the fixture is turned off at the main circuit breaker or fuse box before beginning installation.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Use only GU10 bulbs with a maximum wattage of 35W per bulb.
- Do not exceed the maximum wattage specified.
- Do not install this fixture in wet or damp locations. It is designed for indoor use only.
- Handle the fixture with care to avoid damage.

## 3. WHAT'S INCLUDED

---

Please check the package contents to ensure all parts are present and undamaged:

- BoostArea LED 4-Light Track Lighting Fixture
- Mounting Hardware (Ceiling Mount, Wall Mount)
- Instruction Manual

*Note: GU10 bulbs are not included and must be purchased separately.*

## 4. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	BoostArea
Model Number	C0842
Color	White
Material	Metal
Style	Modern/Industrial/Classic
Light Fixture Form	Ceiling
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Number of Light Sources	4
Voltage	230 Volts
Wattage (Max per bulb)	35 watts
Bulb Base	GU10
Mounting Type	Ceiling Mount
Item Dimensions (L x W x H)	30.1"L x 4.7"W x 5.9"H

For detailed dimensions, refer to the diagram below:



*Image: Detailed dimensions of the BoostArea 4-Light Track Lighting Kit, showing length, width, and height measurements.*

## 5. INSTALLATION INSTRUCTIONS

---

**Before you begin, ensure the power supply is turned OFF at the circuit breaker.**

- 1. Prepare for Installation:** Unpack the fixture and all components. Ensure you have all necessary tools (screwdriver, wire strippers, etc.).
- 2. Fix the Mounting Bracket:** Secure the mounting bracket to the ceiling junction box using the provided screws. Ensure it is firmly attached.
- 3. Wire the Fixture:** Connect the fixture's wires to your household electrical wires. Connect the live (black) wire from the fixture to the live (black) wire from the junction box, the neutral (white) wire from the fixture to the neutral (white) wire from the junction box, and the ground wire (green or bare copper) to the ground wire from the junction box. Use wire nuts to secure connections.
- 4. Install the Track Lighting:** Carefully attach the fixture's canopy to the mounting bracket, securing it with the provided screws. Ensure no wires are pinched.
- 5. Adjust Light Heads:** The 4 track heads can rotate 350° horizontally and adjust 90° vertically. Position them as desired.

- 6. Install GU10 Bulbs:** Insert GU10 bulbs (not included) into each socket. Twist to secure. Ensure bulbs are rated for GU10 base and do not exceed 35W.
- 7. Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

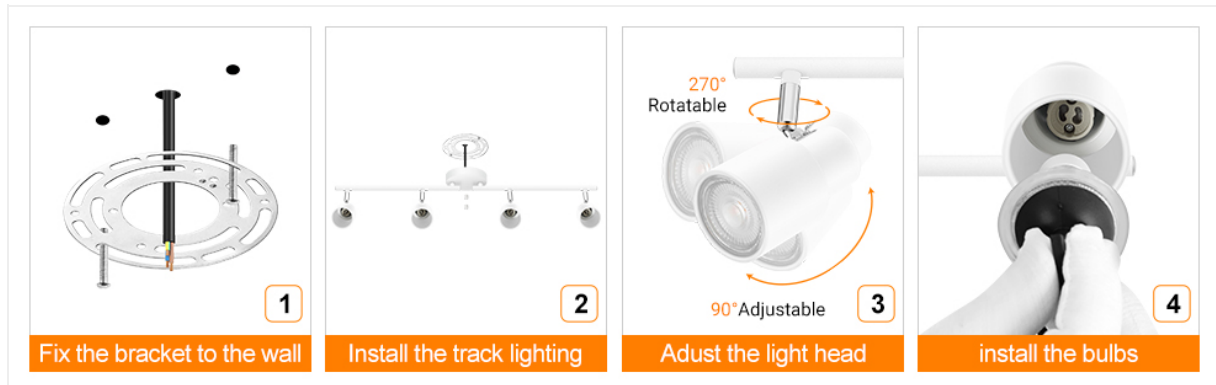


Image: Visual guide showing the four main steps of installation: 1. Fix the bracket to the wall, 2. Install the track lighting, 3. Adjust the light head, 4. Install the bulbs.


## Product Detail Presentation



Image: Illustration demonstrating the 270° rotatable and 90° adjustable features of the track light heads.

## 6. OPERATING INSTRUCTIONS

- **Turning On/Off:** Operate the light fixture using your standard wall switch.
- **Adjusting Light Direction:** Each light head can be rotated 350 degrees horizontally and adjusted 90 degrees vertically. Gently pivot and rotate the light heads to direct illumination where needed.
- **Bulb Compatibility:** This fixture uses GU10 base bulbs. It is compatible with common LED or halogen GU10 bulbs, with a maximum power of 35W per bulb. For dimming functionality, use dimmable GU10 bulbs and a compatible dimmer switch (not included).

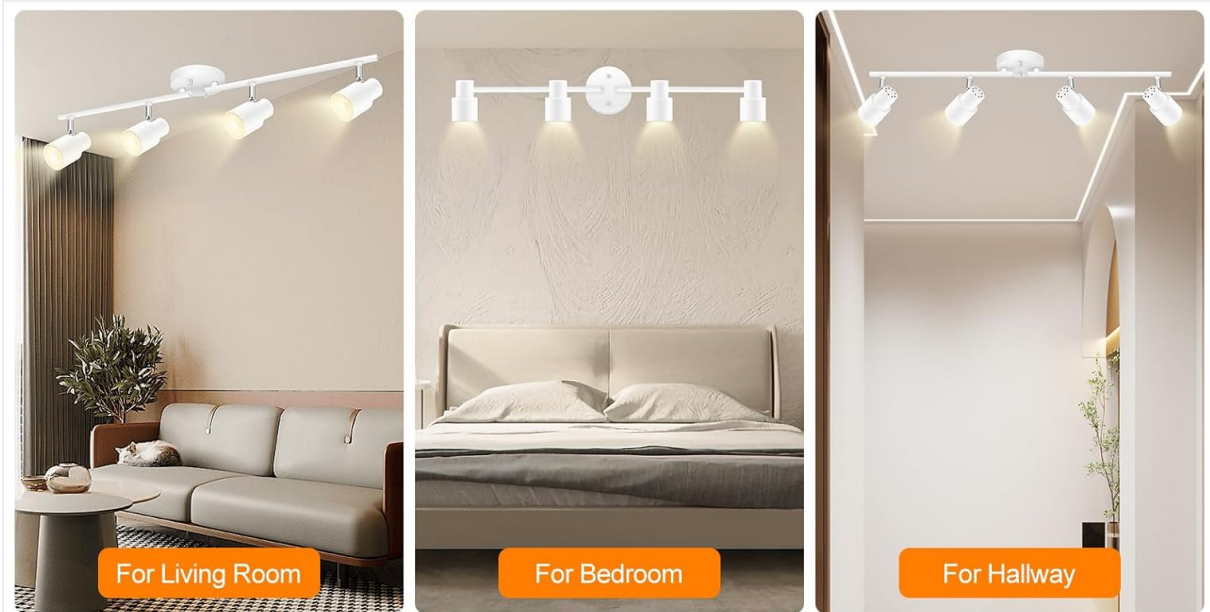

**GU10 Base 35W MAX**

**Recommended GU10 Bulbs** (*Bulb not included*)



*Image: Examples of various GU10 bulb types that are compatible with the BoostArea track lighting kit, indicating a maximum wattage of 35W.*

## 7. MAINTENANCE

- **Cleaning:** To clean the fixture, ensure the power is off. Wipe with a soft, dry cloth. Do not use abrasive cleaners or solvents as they may damage the finish.
- **Bulb Replacement:** Ensure the power is off and the bulbs have cooled completely before attempting to replace them. Gently twist and pull out the old GU10 bulb. Insert the new GU10 bulb by aligning the pins and twisting to secure.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	<ol style="list-style-type: none"> <li>1. Power supply is off.</li> <li>2. Bulb is faulty or not installed correctly.</li> <li>3. Wiring issue.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check circuit breaker or wall switch.</li> <li>2. Replace bulb or ensure it is fully seated in the socket.</li> <li>3. Consult a qualified electrician to check wiring connections.</li> </ol>
Light flickers.	<ol style="list-style-type: none"> <li>1. Loose bulb connection.</li> <li>2. Incompatible dimmer switch (if applicable).</li> <li>3. Faulty bulb.</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure bulb is securely twisted into the socket.</li> <li>2. Use a dimmer switch compatible with LED or halogen GU10 bulbs.</li> <li>3. Replace the bulb.</li> </ol>
Light heads feel loose or shift easily.	Internal mechanism may be loose.	Ensure the light heads are adjusted firmly. If the issue persists and affects functionality, contact customer support.

## 9. WARRANTY INFORMATION

---

This BoostArea product comes with a **1-year warranty** from the date of purchase. If your light fixture encounters any defects or stops working within this period, please contact BoostArea customer support for assistance with troubleshooting or to arrange a replacement.

## 10. CUSTOMER SUPPORT

---

For any questions, concerns, or technical assistance regarding your BoostArea LED 4-Light Track Lighting Kit, please contact us through the Amazon message box. Our customer service team aims to respond within 24 hours.

You can also visit the official BoostArea store on Amazon for more product information and support:  
[BoostArea Amazon Store](#)