Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- XIAOMI /
- > Xiaomi TV A Pro 65" 4K UHD Smart Android Television User Manual

XIAOMI ELA5146GL

Xiaomi TV A Pro 65" 4K UHD Smart Android Television User Manual

Model: ELA5146GL

1. Introduction

Welcome to the user manual for your new Xiaomi TV A Pro 65" 4K UHD Smart Android Television. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it thoroughly to ensure optimal performance and longevity of your television.

The Xiaomi TV A Pro 65" features a stunning 4K UHD display, integrated Google TV system, and hands-free Google Assistant, offering an immersive entertainment and smart home control experience.



Image 1.1: Front view of the Xiaomi TV A Pro 65" television, showcasing its display.



Image 1.2: The Xiaomi TV A Pro 65" integrated with Google TV, displayed in a modern living room environment.

2. SETUP

2.1 Unboxing and Inspection

Carefully remove the television and all accessories from the packaging. Inspect for any signs of damage. Keep the packaging materials for future transport or service needs.

2.2 Stand Assembly

To attach the stand:

- 1. Place the television face down on a soft, flat surface to prevent screen damage.
- 2. Align the stand components with the designated slots on the bottom of the television.
- 3. Secure the stand using the screws provided in the screws bag. Ensure all screws are tightened firmly.



Image 2.1: Rear view of the television, illustrating the location of ports and stand mounting points.

2.3 Power Connection

Connect the power cable to the television's power input and then plug it into a suitable electrical outlet.

2.4 Initial Power On and Setup Wizard

Press the power button on the remote control or the television. The TV will guide you through the initial setup wizard, which includes:

- · Language selection.
- Network connection (Wi-Fi or Ethernet).
- · Google account sign-in for Google TV features.
- Channel scanning (if connecting to an antenna/cable).

2.5 External Device Connectivity

Utilize the available HDMI ports to connect external devices such as Blu-ray players, gaming consoles, or soundbars. The television also supports Bluetooth for wireless accessories.

3. OPERATING INSTRUCTIONS

3.1 Remote Control

The television comes with a 360° Bluetooth® remote control. Ensure batteries are inserted correctly. Pair the remote during initial setup or by following the on-screen instructions in the settings menu.

3.2 Google TV Interface

Navigate the Google TV interface using the remote control. The home screen provides access to streaming apps (Netflix, Prime Video, YouTube), personalized recommendations, and your connected devices.

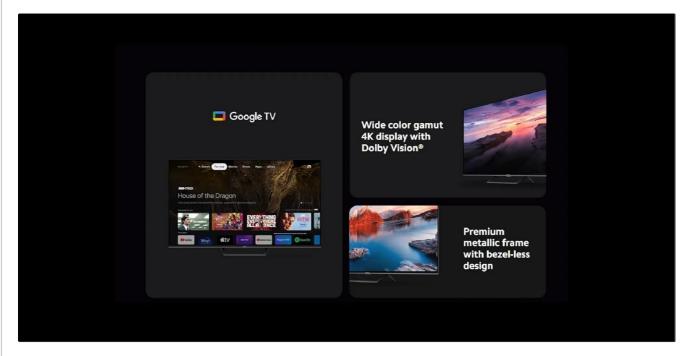


Image 3.1: Overview of the Google TV interface, highlighting features like wide color gamut and the television's metallic frame.

3.3 Google Assistant

The television features hands-free Google Assistant. Simply say "Hey Google" or press the Google Assistant button on your remote to issue voice commands. You can search for content, control smart home devices, get answers, and more.

3.4 Content Casting

With Chromecast built-in™ and Miracast, you can easily cast content from your compatible smartphone, tablet, or laptop directly to the television screen.

3.5 Audio Features

Experience enhanced audio with Dolby Audio™, DTS-X, and DTS Virtual:X technologies, delivered through the television's 2 x 12W stereo speakers. Ensure your content supports these audio formats for the best experience.

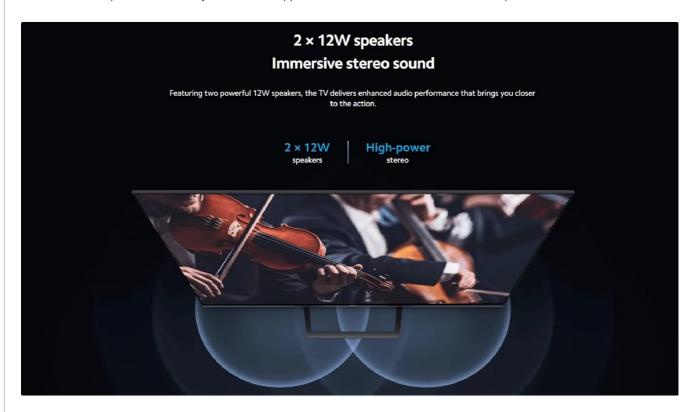


Image 3.2: Visual representation of the television's 2 x 12W stereo speakers, designed for immersive sound.

4. MAINTENANCE

4.1 Cleaning the Television

- Screen: Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-specific cleaning solution. Avoid harsh chemicals.
- Exterior: Use a soft, dry cloth to wipe the frame and back panel.
- · Always unplug the television before cleaning.

4.2 Software Updates

The television may receive automatic software updates to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates. You can also manually check for updates in the settings menu.

5. TROUBLESHOOTING

This section addresses common issues you might encounter. If the problem persists, please refer to the warranty and support section.

5.1 No Power

• Ensure the power cable is securely plugged into both the TV and the electrical outlet.

- Check if the outlet is functioning by plugging in another device.
- Try pressing the power button on the TV itself, not just the remote.

5.2 No Picture or Sound

- Verify the correct input source is selected (e.g., HDMI 1, TV).
- Check all cable connections (HDMI, antenna) are secure.
- · Adjust the volume and ensure it is not muted.
- If using external devices, ensure they are powered on and functioning correctly.

5.3 Remote Control Not Responding

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the TV.
- Re-pair the Bluetooth remote control if necessary (refer to the TV's settings menu).

5.4 Network Connectivity Issues

- Check your Wi-Fi router and modem to ensure they are working correctly.
- Restart the TV and your network equipment.
- Ensure the Wi-Fi password entered is correct.
- Try connecting to a different Wi-Fi network if available, or use an Ethernet cable for a wired connection.

6. SPECIFICATIONS

Model Number	ELA5146GL
Display Size	65 inches
Resolution	4K UHD (3840 x 2160)
Operating System	Android (Google TV)
Refresh Rate	60 Hz
Speakers	2 x 12W Stereo Speakers
Connectivity	Wi-Fi, Bluetooth, HDMI
Product Dimensions (D x W x H)	7.5D x 144.7W x 83H centimeters
Weight	10 kg
Included Components	360° Bluetooth® remote control x 1, Power cable x 1, Screws bag x 1, Stand component x 1, User manual x 1, Warranty card x 1


7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your television. This document outlines the terms and conditions of your product's warranty.

For technical support, service, or further inquiries, please visit the official Xiaomi support website or contact their customer

service directly. Contact details can typically be found on the warranty card or the Xiaomi official website.

Related Documents - ELA5146GL

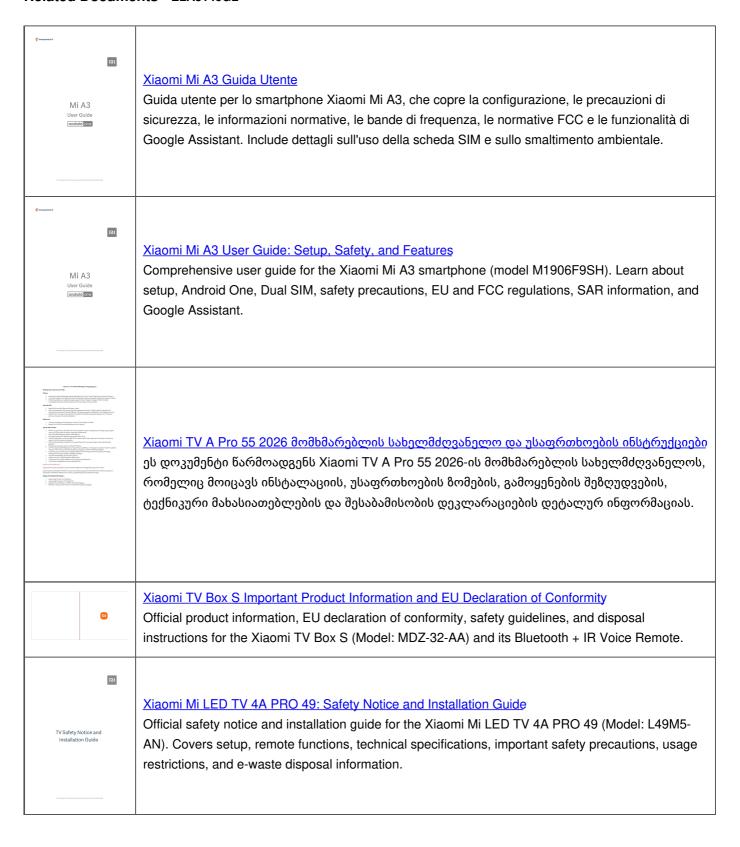



Xiaomi Mi Smart Clock User Manual - X04G Setup, Features, and Warranty

Official user manual for the Xiaomi Mi Smart Clock (Model X04G). Covers packing list, setup with Google Home, features like Google Assistant and Chromecast, technical specifications, and warranty information.