

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GOCKERA](#) /

› [GOCKERA Portable Fan Instruction Manual](#)

GOCKERA F05-Black

GOCKERA Portable Fan Instruction Manual

Model: F05-Black

PRODUCT OVERVIEW

The GOCKERA Portable Fan (Model F05-Black) is a versatile personal cooling device designed for various indoor and outdoor activities. It features a powerful brushless motor, 1-100 steplessly adjustable speeds, a smart digital display, and a long-lasting 4200mAh rechargeable battery. This 3-in-1 fan can be used as a handheld fan, desk fan, or neck fan.



Image: The GOCKERA Portable Fan in black, demonstrating its powerful airflow with a blue stream of air.

PACKAGE CONTENTS

- 1 x GOCKERA Portable Fan (Model F05-Black)
- 1 x Type-C Charging Cable
- 1 x Lanyard
- 1 x Instruction Manual

ROLLER SWITCH

Rolling Adjustment Of 1-100 Wind
Speeds Adjust According To Your Need



Image: The GOCKER Portable Fan, Type-C cable, and lanyard, as typically included in the package.

SETUP AND CHARGING

Initial Charge

Before first use, fully charge the fan. The fan is equipped with a 4200mAh rechargeable battery. A full charge takes approximately 2.5 to 3 hours.

1. Connect the provided Type-C charging cable to the fan's charging port.
2. Connect the other end of the cable to a compatible USB power adapter (not included) or a computer USB port.
3. The digital display will show the current battery percentage, indicating charging progress.



Neck Fan

Desk Fan

Image: Illustration of the GOCKERA Portable Fan being charged via its Type-C USB port, highlighting the 4200mAh battery.

Attaching the Lanyard

To use the fan as a neck fan, attach the included lanyard to the designated loop on the fan's handle. This frees your hands for other activities.

HIGH-PERFORMANCE BATTERY LONGER WORKING TIME

Charging Time: 2.5-3 Hours

Working Time: 8-24 Hours

(Fully Charged)



Image: The GOCKERA Portable Fan being worn around the neck with the included lanyard, demonstrating hands-free operation.

OPERATING INSTRUCTIONS

Power On/Off

To power on the fan, gently slide the turbo switch located on the handle. Slide it again to power off.

Adjusting Fan Speed (1-100 Gears)

The GOCKERA fan features a unique turbo switch for stepless speed adjustment from 1 to 100 gears. Simply slide the switch up or down to increase or decrease the wind speed according to your preference.



Image: Close-up of the GOCKERA Portable Fan's roller switch, illustrating the 1-100 speed adjustment capability.

Digital Display

The smart LED display shows the current wind speed gear and the remaining battery power in real-time. This allows you to monitor usage and recharge the fan promptly when needed.



Image: The GOCKERA Portable Fan's intelligent digital display, showing both the wind speed gear and the remaining battery level.

Memory Function

The fan features a memory function. When you turn the fan on again, it will automatically resume at the last used speed setting.



Image: A user sleeping with the GOCKERA Portable Fan on a desk, illustrating the memory function that recalls the last speed setting.

3-in-1 Functionality

- **Handheld Fan:** Use it directly in your hand for personal cooling.
- **Desk Fan:** The fan can be folded 90 degrees and placed on a flat surface using its non-slip base, which also functions as a phone stand.
- **Neck Fan:** Attach the lanyard to wear the fan around your neck, providing hands-free cooling.

GOCKERA MEMORY FUNCTION

Displays your favorite wind speed
after power on



Image: Three different usage scenarios for the GOCKERA Portable Fan: handheld, worn as a neck fan, and placed on a desk.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to wipe the fan's exterior. Do not use abrasive cleaners or immerse the fan in water.
- Storage:** Store the fan in a cool, dry place when not in use.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the fan regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Low battery; Power switch not engaged.	Charge the fan fully. Ensure the turbo switch is properly slid to the ON position.

Problem	Possible Cause	Solution
Weak airflow.	Low speed setting; Obstruction in fan blades.	Increase the speed using the turbo switch. Check for and remove any obstructions.
Battery not charging.	Faulty cable or adapter; Loose connection.	Ensure the Type-C cable is securely connected. Try a different USB adapter or cable.
Digital display not working.	Fan is off; Malfunction.	Turn on the fan. If the issue persists after charging, contact customer support.

SPECIFICATIONS

- Brand:** GOCKERA
- Model:** F05-Black
- Color:** Black
- Power Source:** Battery Powered (4200mAh Lithium Ion)
- Charging Time:** 2.5-3 hours
- Working Time:** 8-24 hours (depending on speed)
- Speed Levels:** 1-100 Steplessly Adjustable Gears
- Noise Level:** 25 dB
- Dimensions:** 1.38"D x 3.62"W x 7.67"H
- Item Weight:** 5.1 ounces (0.32 Pounds)
- Special Features:** Rechargeable, Lightweight, Smart Digital Display, Memory Function, 3-in-1 (Handheld/Desk/Neck Fan)
- Connector Type:** USB Type C

OFFICIAL PRODUCT VIDEOS

GOCKERA Portable Handheld Fan, mini fan handheld

Your browser does not support the video tag.

Video: An official GOCKERA video demonstrating the portable handheld fan's features and usage scenarios. This video is 59 seconds long and created by the seller.

© 2024 GOCKERA. All rights reserved.

For support, please refer to the contact information provided with your purchase.