

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DURLK](#) /
- › [DURLK ZX-808 Walkie Talkies User Manual](#)

## DURLK ZX-808

# DURLK ZX-808 Walkie Talkies User Manual

Model: ZX-808

## 1. PRODUCT OVERVIEW

The DURLK ZX-808 Walkie Talkies are designed for reliable long-range two-way communication, suitable for various outdoor activities and professional use. They feature 22 FRS channels, 121 privacy codes, NOAA weather alerts, and a built-in rechargeable battery.



Image: DURLK ZX-808 Walkie Talkies (Orange & Blue) with charging accessories.

## Key Features:

- **Long Range Communication:** Effective range of 0.5-1.5 miles in regular conditions, up to 3 miles in ideal conditions.
- **22 FRS Channels & 121 Privacy Codes:** Provides 2,662 secure communication combinations.
- **NOAA Weather Receiver:** Access to 10 NOAA weather channels for real-time alerts.
- **Rechargeable 1800mAh Battery:** Built-in lithium battery with up to 72 hours of standby time.
- **USB-C Charging:** Includes a 2-in-1 USB-C charging cable and adapter for simultaneous charging.
- **HD LCD Screen with Backlight:** Clear display for channel and settings.
- **VOX (Voice-activated Hands-free):** Allows communication without pressing the PTT button.
- **Built-in LED Flashlight:** For illumination in low-light conditions.
- **Additional Functions:** Volume adjustment, Auto squelch, Auto memory, Auto scan, Low battery alert, Keypad lock.

- **Durable Design:** Features drop protection for enhanced durability.



Image: Key features of the DURLK Walkie Talkie, including flashlight and various functions.

### Package Contents:

- 2 x Rechargeable Walkie Talkies (Built-in 1800mAh Li-ion Batteries)
- 1 x Charge Adapter
- 1 x 2-in-1 USB-C Cable
- 2 x Belt Clips
- 1 x User Manual

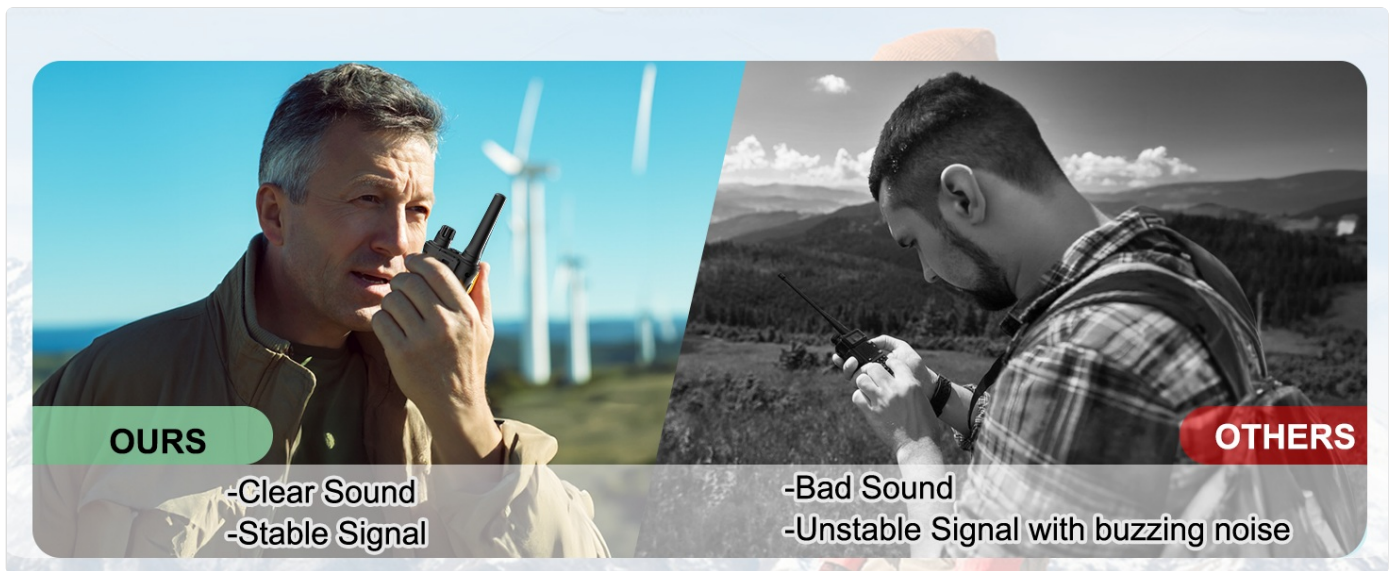


Image: Contents included in the DURLK Walkie Talkies package.

## 2. SETUP GUIDE

### 2.1 Charging the Batteries

The walkie talkies come with built-in 1800mAh lithium batteries. Before first use, fully charge both units.

1. Connect the 2-in-1 USB-C charging cable to the USB-C port on each walkie talkie.
2. Plug the USB-C cable into the provided charge adapter.
3. Plug the adapter into a standard wall outlet.
4. The charging indicator on the walkie talkie will show charging status. A full charge typically takes approximately 4 hours.
5. Once fully charged, the walkie talkies offer up to 72 hours of standby time.

# RECHARGEABLE WALKIE TALKIES

1800mAh Built-in Lithium Battery



1800mAh  
Lithium Battery



72 Hours  
Standby



3 Hours  
Full Charge



2-in-1  
USB-C Cable



Power Adapter

Image: DURLK Walkie Talkies being charged simultaneously.

## 2.2 Attaching the Belt Clip

To attach the belt clip, align it with the designated slots on the back of the walkie talkie and slide it down until it clicks into place. To remove, lift the tab and slide the clip upwards.

## 3. OPERATING INSTRUCTIONS

### 3.1 Parts of the Walkie Talkie



Image: Detailed diagram of DURLK Walkie Talkie components.

### 3.2 Power On/Off and Volume Adjustment

- **Power On:** Rotate the Power/Volume knob clockwise until you hear a click and the screen illuminates.
- **Power Off:** Rotate the Power/Volume knob counter-clockwise until you hear a click and the screen turns off.
- **Volume Adjustment:** Continue rotating the Power/Volume knob clockwise to increase volume or counter-clockwise to decrease volume.

### 3.3 Setting Channels and Privacy Codes

For effective communication, all walkie talkies in your group must be set to the same channel and privacy code.

1. **Channel Selection:** Press the **MENU** button. The channel number on the LCD will flash. Use the **UP** (▲) or **DOWN** (▼) buttons to select your desired channel (1-22). Press **MENU** again to confirm.
2. **Privacy Code (CTCSS/DCS) Selection:** After selecting the channel, press **MENU** again. The privacy code number will flash. Use the **UP** (▲) or **DOWN** (▼) buttons to select a privacy code (0-121). Press **MENU** to confirm and exit, or **CALL** to exit without saving.

### 3.4 Transmitting and Receiving

- **To Transmit (Talk):** Press and hold the **PTT (Push-to-Talk)** button located on the side of the walkie talkie. Speak clearly into the microphone, holding the walkie talkie approximately 2-3 inches from your mouth. Release the PTT button when finished speaking.
- **To Receive:** Ensure the PTT button is not pressed. The walkie talkie will automatically receive transmissions on the selected channel and privacy code.
- **Call Tone:** Press the **CALL** button to send an audible call tone to other walkie talkies on the same channel and privacy code.

### 3.5 NOAA Weather Radio

The walkie talkies can receive NOAA weather alerts, providing real-time information on severe weather conditions.

1. Press the **LOCK/NOAA** button to activate the NOAA weather scan mode.
2. The walkie talkie will scan through the 10 available NOAA weather channels.
3. To exit NOAA weather mode, press the **LOCK/NOAA** button again.



**All Hazards  
NOAA  
Weather Radio**

**OUTDOOR PLAY MORE,  
WORRY LESS**

**TORNADOS** **SNOWSTORM** **RAINSTORM** **FIRES** **Tsunami** **EARTHQUAKES**

The image features a woman in a bright yellow raincoat and a blue backpack, holding a black walkie talkie to her ear in a rainy, forested setting. In the foreground, a black and red DURLK NOAA Weather Radio is shown. The radio's screen displays 'CH 22 01' and 'CRCS'. Below the screen are buttons for 'MENU', 'CALL', and 'MON'. The radio has a large speaker grille at the bottom. The background is a blurred forest with rain falling.

Image: DURLK Walkie Talkie featuring NOAA Weather Radio functionality.

### 3.6 LED Flashlight

The built-in LED flashlight provides convenient illumination.

- Press the **LED Flashlight Button** (located below the PTT button) to turn the flashlight on.
- Press the button again to turn the flashlight off.



Image: DURLK Walkie Talkie with its LED flashlight activated.

### 3.7 VOX (Voice-Activated Transmission)

VOX allows hands-free operation. When activated, the walkie talkie will transmit automatically when it detects your voice.

1. Press the **MENU** button multiple times until the VOX icon appears on the LCD.
2. Use the **UP** (▲) or **DOWN** (▼) buttons to select the VOX sensitivity level (e.g., 1-3, with 3 being most sensitive). Select 'OFF' to disable VOX.

3. Press **MENU** to confirm and exit.

### 3.8 Keypad Lock

The keypad lock prevents accidental changes to your settings.

- To lock the keypad, press and hold the **LOCK/NOAA** button until the lock icon appears on the LCD.
- To unlock, press and hold the **LOCK/NOAA** button again until the lock icon disappears.

## 4. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, damp cloth to clean the exterior of the walkie talkies. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the walkie talkies regularly, especially if they will not be used for an extended period.
- **Storage:** Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** These walkie talkies are not water resistant. Avoid exposure to rain, splashes, or submersion in water.
- **Drop Protection:** While designed with drop protection, avoid unnecessary drops or impacts to prevent damage.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Battery is low or depleted.	Charge the walkie talkie fully.
Cannot Transmit or Receive	Incorrect channel or privacy code. Volume too low. Out of range.	Ensure all walkie talkies are on the same channel and privacy code. Increase the volume. Move closer to the other walkie talkie.
Poor Sound Quality / Static	Weak signal. Interference. Squelch level setting.	Move to an open area. Change channel or privacy code. Adjust the squelch level if applicable.
Short Communication Range	Obstructions (buildings, hills). Weather conditions. Low battery.	Move to an area with fewer obstructions. Ensure batteries are fully charged.
Keypad is Unresponsive	Keypad lock is activated.	Unlock the keypad by pressing and holding the LOCK/NOAA button.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	ZX-808

Feature	Detail
Brand	DURLK
Color	Orange & Blue
Number of Channels	22 FRS Channels
Privacy Codes	121 (CTCSS/DCS)
Frequency Range	462.5500-462.7250MHz, 462.5625-462.7125 MHz, 467.5625-467.7125MHz
Talking Range Maximum	3 Miles (ideal conditions)
Battery Type	Built-in 1800mAh Lithium Polymer
Voltage	3.7 Volts
Item Weight	107 Grams (approx. 3.77 ounces)
Package Dimensions	6.93 x 3.23 x 2.32 inches
Water Resistance Level	Not Water Resistant

## 7. WARRANTY AND SUPPORT

DURLK provides a 1-Year Warranty for the ZX-808 Walkie Talkies. For technical support, warranty claims, or any product-related inquiries, please contact DURLK customer service through their official channels or the retailer where the product was purchased.

For more information, visit the [DURLK Store on Amazon](#).