

[Manuals.plus](#) /

> [VOCOO](#) /

> VOCOO Digital Kitchen Timer with 7.8" Extra Large Display - Instruction Manual

VOCOO 5285Y

VOCOO Digital Kitchen Timer with 7.8" Extra Large Display - Instruction Manual

Model: 5285Y

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your VOCOO Digital Kitchen Timer. Designed for versatility, this timer features a large display, multiple alarm options, and flexible placement, making it suitable for various environments including kitchens, classrooms, and home gyms.

KEY FEATURES

- **7.8-inch Extra Large Display:** Features 2.3-inch tall numbers for clear visibility from a distance.
- **3 Brightness Levels:** Adjustable display brightness for optimal viewing in various lighting conditions.
- **4 Alarm Options & 3 Volume Levels:** Includes a silent mode with screen flash, and three distinct audible alarms with adjustable volume.
- **99-Hour Countdown/Count-Up:** Supports timing up to 99 hours, 59 minutes, and 59 seconds for both countdown and stopwatch functions.
- **Magnetic Backing:** Strong silicone-covered magnets allow secure attachment to metal surfaces like refrigerators or whiteboards.
- **Built-in Stand & Hanging Hole:** Offers versatile placement options on desks or hooks.
- **Rechargeable Battery:** Long-lasting battery life with convenient USB-C charging (cable and 5V charger included).

SETUP

1. **Unpacking:** Carefully remove the timer and all accessories from the packaging.
2. **Initial Charge:** Connect the provided USB-C cable to the timer and a 5V charger. Plug the charger into a power outlet. The battery indicator on the display will show charging status. A full charge is recommended before first use.



Image: The VOCOO Digital Kitchen Timer in yellow, showing the USB-C charging port on the side. The display shows "24:08" with a battery icon indicating charging. This image illustrates the timer's design and charging capability.

3. Placement:

- **Magnetic Mounting:** Attach the timer to any magnetic surface, such as a refrigerator or whiteboard, using the strong silicone-covered magnets on its back.
- **Using the Stand:** Extend the built-in kickstand on the back of the timer to place it on a desk or countertop.
- **Hanging:** Utilize the hanging hole on the back to mount the timer on a hook.

3 Levels of Brightness Adjustable

Dim



Medium



Bright



Low Battery Icon

Remind you to charge the timer

Rechargeable Battery Powered

Saving your time and money to buy and change non-recyclable batteries frequently



Image: A composite image demonstrating three ways to place the VOCOO Digital Kitchen Timer: using its built-in stand on a table, hanging it from a hook, and attaching it magnetically to a refrigerator. The timer displays "24.08" in each scenario.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button (usually on the side) to turn the timer on or off.

2. Setting the Timer (Countdown Mode)

- Set Hours:** Press the "1H" button to add 1 hour.
- Set Minutes:** Press the "5M" button to add 5 minutes, or the "1M" button to add 1 minute.
- Set Seconds:** Press the "1S" button to add 1 second.
- Custom Presets:** Use the "CUSTOM" button for pre-set times if available or to save a frequently used time.
- Start/Stop:** Once the desired time is set, press the "STOP/START" button to begin the countdown. Press it again to pause/resume.
- Reset:** Press the "RESET" button to clear the current time setting.

Countdown Mode

99 Hours 59Minutes
Countdown



59 Minutes 59 Seconds
Countdown



Image: A split image showing the VOCOO Digital Kitchen Timer in countdown mode. The top half shows the timer displaying "99H 59M" in a gym setting, while the bottom half shows "59.59" in a classroom setting. This highlights the timer's versatility and large display for different environments.

3. Count-Up Mode (Stopwatch)

From the "00:00" display, press the "STOP/START" button to begin counting up. Press again to pause/resume. Press "RESET" to clear the count.

4. Adjusting Brightness

The timer offers 3 levels of brightness. Repeatedly press the power button (usually on the side) to cycle through Dim, Medium, and Bright settings.

4 Alarms with 3 Levels of Volume



Image: A visual representation of the VOCOO Digital Kitchen Timer displaying "59.59" at three different brightness levels: Dim, Medium, and Bright. This demonstrates the adjustable display feature.

5. Alarm Settings (Sound & Volume)

The timer features 4 alarm options and 3 adjustable volume levels. Use the dedicated buttons on the side to cycle through alarm sounds (Buzzer, Melody 1, Melody 2, Melody 3) and adjust the volume (L01, L02, L03, or Silent Mode).

- **Silent Mode:** For environments requiring no sound, activate Silent Mode. The screen will flash when the timer ends.
- **Volume Levels:** L01 (60-75dB), L02 (70-85dB), L03 (80-95dB).

Extra Large Display Digital Timer



Large LED Display

Easy to read even from across a room



Longer Count Range

Countdown: 99 Hours 59 Minutes to 00:00
Count Up: 00:00 to 99:59:59



1 Minute Countdown Reminder

All numbers turn red



Custom Function

Set a regular countdown time for quick access to it



Image: A detailed view of the VOCOO Digital Kitchen Timer's features, including a large LED display, longer count range (99 hours, 59 minutes, 59 seconds), 1-minute countdown reminder (numbers turn red), and custom function. It also shows the various alarm melodies and volume levels.

CHARGING AND BATTERY LIFE

The VOCOO Digital Kitchen Timer is equipped with a rechargeable battery. Use the provided USB-C cable and 5V charger to power the device. A low-power warning will appear on the display when charging is needed. The battery provides over 7 days of continuous use on low brightness and over 7 hours on high brightness.

3 Ways to Place the Digital Timer



Image: The VOCOO Digital Kitchen Timer is shown from the side, highlighting its rechargeable battery feature and USB-C charging port. A text box explains that it saves money by avoiding frequent battery changes. The display shows "59.59" with a low battery icon.

VERSATILE APPLICATIONS

This timer is designed for a wide range of uses:

- **Kitchen:** Perfect for cooking, baking, and meal prep.
- **Classroom:** Ideal for managing activities, exams, and group work.
- **Home Gym:** Track workout intervals and rest periods.
- **Study & Work:** Enhance focus and productivity with timed sessions.
- **Beauty & Skincare:** Time treatments accurately.
- **Parenting:** Manage screen time or nap times for children.

VARIETY OF APPLICATIONS

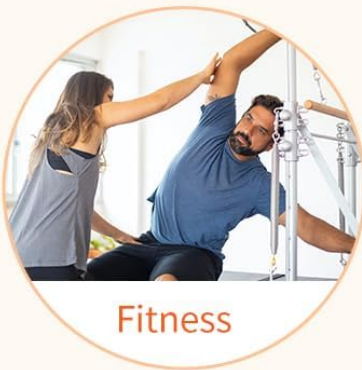


Image: A collage showcasing the VOCOO Digital Kitchen Timer in various application settings: cooking, classroom, fitness, skincare, and nap time. The timer displays "24.08" in the center, emphasizing its broad utility.

SPECIFICATIONS

Feature	Detail
Brand	VOCOO
Model Number	5285Y
Color	Yellow
Material	Silicone
Product Dimensions	1.38"D x 8.27"W x 4.13"H
Item Weight	270 Grams

Screen Size	7.8 inches (19.8 Centimeters)
Brightness Levels	3
Alarm Options	4 (including Silent Mode)
Volume Levels	3 (L01, L02, L03)
Max Timing Duration	99 Hours, 59 Minutes, 59 Seconds
Charging Type	USB-C (cable and 5V charger included)



Image: The VOCOO Digital Kitchen Timer shown with its dimensions: 8.19 inches in width, 4.1 inches in height, and 1.37 inches in depth. The display shows "99H 59M".

TROUBLESHOOTING

- **Timer not turning on:** Ensure the battery is charged. Connect the USB-C charger and allow it to charge for at least 30 minutes before attempting to power on again.
- **Display is dim:** Press the power button repeatedly to cycle through the three brightness levels.
- **No alarm sound:** Check the volume setting. Press the volume button on the side to increase the volume or ensure it's not in Silent Mode (L00).
- **Buttons unresponsive:** Try resetting the device by pressing the "RESET" button. If the issue persists, power off and then power on the device.

MAINTENANCE

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the timer in a cool, dry place when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it when the low-power warning appears.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official VOCOO website. Keep your purchase receipt for warranty claims.

PRODUCT VIDEOS

VOCOO Digital Timer Overview

Your browser does not support the video tag.

Video: A seller-provided overview of the VOCOO Digital Kitchen Timer, demonstrating its features, magnetic attachment, and ease of use in a classroom setting. The video highlights the timer's functionality and convenience.

Digital Timer Features and Usage

Your browser does not support the video tag.

Video: A seller-provided review showcasing the VOCOO Digital Kitchen Timer's large display, easy-to-use buttons for setting time, and versatile placement options (stand, hang, magnetic). It also demonstrates the red color change for the last minute of a countdown.

Classroom Timer Demonstration

Your browser does not support the video tag.

Video: A seller-provided video demonstrating the VOCOO Digital Kitchen Timer's use in a classroom. It highlights the magnetic feature, ease of setting time increments (minutes, seconds), custom presets, and the different alarm sounds and volume levels. The video also shows the brightness adjustment and USB-C charging.

Magnetic Digital Timer Review

Your browser does not support the video tag.

Video: A seller-provided review of the VOCOO Digital Kitchen Timer, emphasizing its large display, magnetic back for whiteboard attachment, and various time setting options (1H, 5M, 1M, 1S, Custom). It also demonstrates the alarm sound and volume adjustments, and the different display colors for countdowns.

VOCOO Digital Timer for Kitchen and Classroom

Your browser does not support the video tag.

Video: A seller-provided video highlighting the VOCOO Digital Kitchen Timer's suitability for both kitchen and classroom use. It demonstrates the large, clear display, magnetic attachment, and ease of setting countdowns. The video also shows the timer's rechargeable nature and the convenience of its long-lasting battery.

Large Display Timer Features

Your browser does not support the video tag.

Video: A seller-provided video focusing on the large display of the VOCOO Digital Kitchen Timer. It shows the timer's magnetic capability, the ability to set various time increments, and the different alarm sounds and volume levels. The video also demonstrates the brightness adjustment and the timer's versatility for different settings.