

Enhulk EHT43001-LGT1016

Enhulk 58V 16-Inch Cordless String Trimmer Instruction Manual

Model: EHT43001-LGT1016

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Enhulk 58V 16-Inch Cordless String Trimmer. Please read this manual thoroughly before using the product and keep it for future reference.

The Enhulk string trimmer is designed for ease of use and powerful performance, offering a virtually maintenance-free experience without the need for gas or oil, and producing zero emissions. It ensures instant starts and quiet operation while delivering the necessary power for your trimming tasks.



Figure 1: Enhulk 58V 16-Inch Cordless String Trimmer

IMPORTANT SAFETY INFORMATION

Always wear eye protection, long pants, and closed-toe shoes. Keep a safe distance from others and objects while operating the trimmer.

Before each use, inspect the trimmer for any damage or loose parts. Ensure the battery pack is securely installed and fully charged. Do not operate the trimmer in wet conditions or near flammable liquids or gases.

SETUP

Assembly

Your Enhulk string trimmer features a foldable shaft for convenient storage and transport. To assemble, unfold the shaft until it locks into place. Ensure all connections are secure before proceeding.



Figure 2: Foldable design for easy storage and transport.

Adjusting the Hand Grip

The trimmer is equipped with a tool-free adjustable hand grip. Loosen the adjustment knob, position the grip to a comfortable operating height and angle, and then tighten the knob securely. This allows for optimal control and comfort during use.

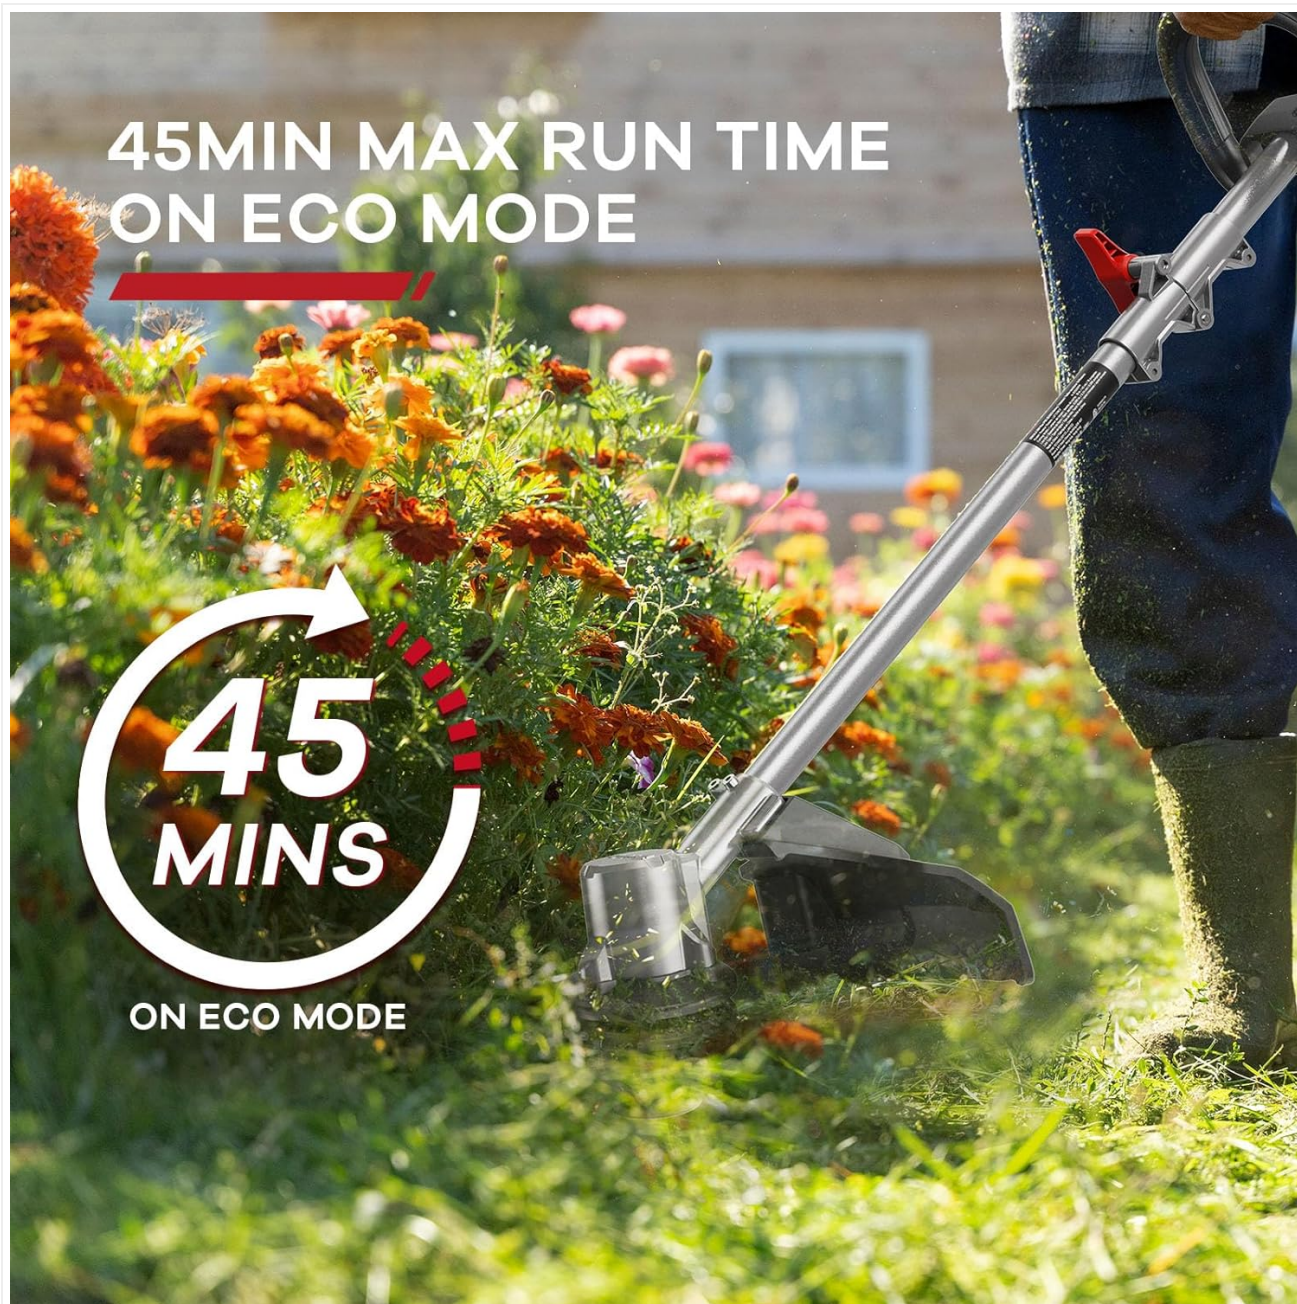


Figure 3: Tool-free adjustable hand grip for personalized comfort.

Battery Installation

Insert a fully charged Enhulk 58V battery pack into the battery compartment until it clicks into place. Ensure it is firmly seated to prevent dislodgement during operation.

Your browser does not support the video tag.

Video 1: Demonstrates the advanced brushless motor, carbon fiber shaft, 58V battery pack, and general operation of the Enhulk 58V 16-Inch String Trimmer. Shows the product's features and ease of use, including the foldable design and variable speed control.

OPERATING INSTRUCTIONS

Starting the Trimmer

To start the trimmer, ensure the battery is installed and press the safety lock-out button, then squeeze the variable speed trigger. Release the safety lock-out button once the trimmer is running.

Selecting Speed Modes (EZ-HMI LED Control Panel)

The EZ-HMI LED Control Panel allows for easy switching between three cutting modes: ECO, HIGH, and TURBO. Press the 'MODE' button to cycle through the settings. The LED indicators will show the currently selected mode.

- **ECO Mode:** For lighter trimming tasks and extended battery run time (up to 45 minutes).
- **HIGH Mode:** For general trimming of moderate grass and weeds.
- **TURBO Mode:** Provides maximum power for tackling thick grass and dense weeds.



Figure 4: EZ-HMI LED Control Panel for easy mode selection.

Trimming Techniques

Utilize the 16-inch cutting path for efficient coverage. For best results, use a sweeping motion, moving the trimmer from side to side. The pro-grade dual 0.095" line is designed to handle thick grass and weeds effectively.



Figure 5: The 16-inch cutting swath ensures wide area coverage.

MAINTENANCE

General Care

The Enhulk string trimmer features an advanced brushless motor, which requires no maintenance. After each use, clean the trimmer head and shield to remove grass clippings and debris. Ensure the air vents are clear to prevent overheating.

Line Replacement (Quick Line Load)

The patented quick line load bump-feed trimmer head allows for fast and hassle-free line reloading without disassembly. Simply feed the new line through the eyelets and bump the head on the ground while the trimmer is running to advance the line. Compatible with 0.095" and 0.080" trimmer line.

FOLDABLE DESIGN FOR CONVENIENT STORAGE



Figure 6: Fast line load trimmer head for quick line replacement.

TROUBLESHOOTING

If your trimmer is not operating as expected, please review the following common issues:

- **Trimmer does not start:** Ensure the battery is fully charged and properly seated. Check that the safety lock-out button is pressed before squeezing the trigger.
- **Reduced cutting performance:** The trimmer line may be too short or worn. Advance the line using the bump-feed mechanism or replace it if necessary. Ensure the cutting head is free of tangled debris.
- **Overheating:** If the trimmer stops unexpectedly, it may be due to overheating. Allow the unit to cool down and ensure the air vents are clear of obstructions.

For issues not covered here, please contact Enhulk customer support.

SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Enhulk
Power Source	Battery Powered
Color	Black/Red
Cutting Width	16 Inches
Product Dimensions	70"L x 9"W
Speed	6300 RPM
Assembly Required	Yes
Style	Alu.Shaft(No Battery)
Item Weight	10.43 pounds
Model Number	EHT43001-LGT1016

WARRANTY AND SUPPORT

Enhulk offers a **4-year tool warranty** and a **2-year battery warranty** for this product. Please retain your proof of purchase for warranty claims.

Customer Care

For any product questions, technical assistance, or warranty inquiries, please contact Enhulk customer support:

Email: service@enhulktools.com

Hotline Service: 1(877) 750-3787

RELIABLE AND TRUSTWORTHY

WARRANTY

4

YEARS

4 YEARS

TOOL



WARRANTY

2

YEARS

2 YEARS

BATTERY



/// CUSTOMER CARE ///




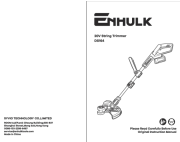




Email: service@enhulktools.com



Hotline Service: 1(877)750-3787

Figure 7: Enhulk Warranty and Customer Care Information.

Related Documents - EHT43001-LGT1016

	<p>ENHULK 58V Max PRO SERIES 16\" Brushless String Trimmer (LGT1216/LGT1216CF) - User Manual</p> <p>Official instruction manual for the ENHULK 58V Max PRO SERIES 16\" Brushless String Trimmer (Models LGT1216, LGT1216CF). Includes comprehensive safety guidelines, operating procedures, assembly instructions, cutting tips, troubleshooting, maintenance, and product specifications.</p>
	<p>Enhulk DS164 Cordless String Trimmer User Manual</p> <p>User manual for the Enhulk DS164 cordless string trimmer/weed wacker. Learn about its features, operation, maintenance, and safety guidelines for lawn care and yard work.</p>
	<p>ENHULK 58V Max PRO Series Brushless Jet Fan Blower LBL1273J LBL1493J - Instruction Manual</p> <p>Comprehensive instruction manual for the ENHULK 58V Max PRO Series Brushless Jet Fan Blower (models LBL1273J and LBL1493J). Includes safety instructions, operating procedures, technical specifications, troubleshooting, and maintenance.</p>
	<p>ENHULK 20V Cordless Hedge Trimmer ASYHT10 - User Manual & Safety Instructions</p> <p>Official instruction manual for the ENHULK 20V Cordless Hedge Trimmer, model ASYHT10. Includes safety warnings, operating instructions, maintenance, and specifications.</p>
	<p>ENHULK 58V Cordless Chainsaw User Manual (LCS1216, LCS1418)</p> <p>User manual for the ENHULK 58V cordless chainsaw models LCS1216 and LCS1418, providing essential operating instructions, safety precautions, and maintenance guidelines for optimal performance.</p>
	<p>ENHULK 58V Max PRO SERIES Battery - Original Instruction Manual</p> <p>This document provides the original instruction manual for ENHULK 58V Max PRO SERIES batteries, including safety warnings, operating instructions, technical data, maintenance, disposal, transport, and warranty information for models LBA1020 through LBA1080.</p>