



Manuals.plus /

› **Timelink /**

› Timelink Westclox Crosley Modern Alarm Mantle Clock User Manual

Timelink CR37022

Timelink Westclox Crosley Modern Alarm Mantle Clock User Manual

Model: CR37022

PRODUCT OVERVIEW

The Timelink Westclox Crosley Modern Alarm Mantle Clock is designed to provide accurate timekeeping with convenient features for various indoor settings. Its compact design, quiet sweep second hand, and integrated alarm with snooze function make it suitable for bedrooms, home offices, kitchens, or living rooms. The clock features an adjustable tilt for optimal viewing and a soft glow dial light for visibility in low-light conditions.



Figure 1: Front view of the clock, highlighting its clean analog dial and modern design.

SETUP

1. Battery Installation

The clock requires one (1) AA battery (not included) for operation.

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert one AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.

2. Setting the Time

To set the current time:

1. Locate the time setting knob on the back of the clock.
2. Gently rotate the knob in either direction until the hour and minute hands display the correct time.

3. Setting the Alarm

To set the alarm time:

1. Locate the alarm setting knob on the back of the clock.
2. Rotate the alarm setting knob to move the alarm hand to your desired wake-up time. Note that the alarm hand typically points to the hour mark for alarm setting.
3. To activate the alarm, push the alarm ON/OFF switch (usually a small button or lever) to the 'ON' position.

4. Adjusting the Tilt

The clock features an adjustable tilt mechanism for optimal viewing angles.





Figure 2: The adjustable tilt feature allows for customized viewing angles.

Gently pivot the clock face within its wooden base to achieve your preferred viewing angle. Ensure it is stable once adjusted.

OPERATING INSTRUCTIONS

1. Alarm Function

When the alarm sounds, it typically starts softly and gradually increases in volume.

- **Snooze:** To activate the snooze function, press the snooze button (often located on the top or back of the clock). The alarm will temporarily stop and sound again after a few minutes.
- **Turning Off Alarm:** To turn off the alarm completely, push the alarm ON/OFF switch to the 'OFF' position.

2. Dial Light

The clock is equipped with a soft glow dial light for enhanced visibility in dark environments.

- To activate the dial light, press the light button (typically located on the top or back of the clock). The light will illuminate the clock face for a short duration.

3. Quiet Sweep Second Hand

The clock features a quiet sweep second hand, which moves continuously without the traditional ticking sound, ensuring a silent environment.

MAINTENANCE

1. Cleaning

To maintain the appearance of your clock:

- Wipe the clock surface with a soft, dry cloth.
- Avoid using abrasive cleaners, solvents, or chemical sprays, as these may damage the finish.

2. Battery Replacement

When the clock's timekeeping becomes inaccurate or the alarm weakens, it is time to replace the battery.

- Follow the battery installation steps outlined in the 'Setup' section.
- Always use a fresh AA battery.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or running slowly.	Battery is dead or incorrectly installed.	Replace the battery with a new AA battery, ensuring correct polarity.
Alarm not sounding.	Alarm is not set or alarm ON/OFF switch is in 'OFF' position.	Ensure the alarm hand is set to the desired time and the alarm ON/OFF switch is in the 'ON' position. Check battery.
Dial light not working.	Battery is low or dead.	Replace the battery.

SPECIFICATIONS



Figure 3: Product dimensions for placement consideration.

Feature	Detail
Brand	Timelink
Model Number	CR37022
Color	Silver
Display Type	Analog
Product Dimensions	4.25"W x 4.7"H x 2"D (approximate)
Power Source	Battery Powered (1 AA battery required, not included)
Movement Type	Quartz (Mechanical Operation)
Special Features	Adjustable Viewing Angle, Quiet Sweep Second Hand, Integrated Alarm & Snooze, Dial Light
Frame Material	Metal (Silver) and Wood (Bamboo Base)
Item Weight	7.4 ounces

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Timelink Westclox Crosley Modern Alarm Mantle Clock, please contact the manufacturer, Timelink, directly through their official customer service channels. Details are typically available on the product packaging or the manufacturer's website.