

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Luqeeq](#) /

› [Luqeeq Portable Mini Washing Machine 10L with Gentle Spin Drying Function - User Manual](#)

Luqeeq Luqeeq1ae9y2qoxz-11

Luqeeq Portable Mini Washing Machine 10L

Model: Luqeeq1ae9y2qoxz-11

User Manual

INTRODUCTION

Thank you for choosing the Luqeeq Portable Mini Washing Machine. This compact and versatile appliance is designed for convenience, offering a 10L capacity with automatic washing and gentle spin-drying functions. Its foldable design makes it ideal for travel, camping, RVs, dormitories, or any space where a full-sized washing machine is impractical. Please read this manual carefully before operation to ensure proper use and maintenance.

This washing machine is suitable for small loads such as underwear, socks, baby clothes, and small towels. It features a fully automatic washing cycle, eliminating the need for manual agitation or water level adjustments, and includes a gentle spin function to reduce drying time.

SETUP

1. Unpacking

Carefully remove all components from the packaging. The package should include:

- 1 x Main Unit (Host)
- 1 x Power Adapter (EU Plug)
- 1 x User Manual
- 1 x Cover

Inspect the machine for any signs of damage. If any parts are missing or damaged, contact customer support.

2. Placement

Place the washing machine on a flat, stable surface. Ensure there is enough space around the unit for proper ventilation and operation. The foldable design allows for compact storage when not in use.



Image: The Luqeeg Portable Mini Washing Machine shown in its folded (14 cm height) and expanded (27 cm height) configurations, illustrating its compact and ready-to-use dimensions.

3. Power Connection

Connect the provided power adapter to the washing machine's power input port. Plug the adapter into a standard 100-240V AC power outlet (EU plug). Ensure the power outlet is easily accessible.



Image: The Luqeeg Portable Mini Washing Machine alongside its power adapter, ready for connection to an electrical outlet.

4. Water Filling and Drainage

Fill the washing machine tub with water up to the recommended level. The machine features a concealed drain for easy water removal after use. Ensure the drain hose is positioned correctly for drainage into a sink or bucket.



TRP durable material
Tensile resistance, long
service life



Concealed drain
Idle income floor



Hidden lift
Easy to pick up, easy to store



Seismic chuck
Hold firmly without shifting

Image: An underside view of the washing machine, highlighting the concealed drain system and seismic chucks for stability.

OPERATING INSTRUCTIONS

1. Loading Clothes

Open the lid and place your laundry into the tub. Do not overload the machine. The maximum washing capacity is 10L or approximately 12 kg of dry clothes. For optimal results, wash small items like:

- Up to 4 pieces of underwear
- Up to 6 pieces of underwear (different type)
- Up to 12 pairs of socks
- Up to 6 small towels
- Up to 6 pieces of baby clothes

- Up to 2 T-shirts



Image: A visual guide illustrating the recommended load capacity for various small clothing items in the washing machine.

2. Adding Detergent

Add an appropriate amount of liquid detergent or washing powder directly into the tub with the clothes. Avoid using excessive amounts of detergent to prevent oversudsing.

3. Selecting a Program

The machine features a button control panel with standard programs. Typically, you can select wash cycles of 10 minutes, 15 minutes, or 20 minutes. Some models may also include a dedicated spin-dry function.

UV Lamp

Deep cleansing of sensitive clothing



Image: The Luqeeg Portable Mini Washing Machine in operation, showcasing its UV lamp feature for deep cleansing of sensitive clothing.

4. Start/Stop Operation

Press the power button to turn on the machine. Select your desired wash program. Press the start/pause button to begin the cycle. To pause or stop the machine during operation, press the button again.

5. Gentle Spin Function

After the wash cycle, the machine will perform a gentle spin to remove excess water from your clothes. This reduces drying time. Ensure the drain hose is properly positioned during the spin cycle.

MAINTENANCE

1. Cleaning the Tub

After each use, rinse the tub with clean water to remove any detergent residue or lint. Wipe the interior with a soft cloth. Do not use abrasive cleaners or harsh chemicals.

2. Draining Water

Always ensure all water is drained from the machine after use. The concealed drain system facilitates this

process. Lift the machine slightly if necessary to ensure complete drainage.

3. Exterior Cleaning

Wipe the exterior of the machine with a damp cloth. Avoid getting water into the control panel or electrical components.

4. Storage

When not in use, ensure the machine is clean and dry. Fold the machine to its compact size for convenient storage. Store in a cool, dry place away from direct sunlight.



Image: The Luqeeg Portable Mini Washing Machine featuring a hidden lift handle for easy portability and storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Power outage; Lid not closed properly.	Check power connection; Verify power supply; Ensure lid is securely closed.
Water leakage	Drain hose not properly secured; Overfilling; Damaged tub.	Check drain hose connection; Do not exceed max fill line; Contact support if tub is damaged.
Poor washing performance	Overloading; Insufficient detergent; Incorrect program selection.	Reduce load size; Use appropriate amount of detergent; Select suitable wash program.
Excessive vibration/noise	Uneven surface; Unbalanced load.	Place on a flat, stable surface; Redistribute laundry evenly in the tub.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail

Feature	Detail
Model Number	Luqeeg1ae9y2qoxz-11
Type	Portable Washing Machine
Voltage	100-240 V
Power	18 W
Washing Tub Capacity	10 L
Washing Capacity	12 kg (approx. dry weight)
Material	ABS PP Plastic
Expanded Dimensions (L x W x H)	30 cm x 30 cm x 27 cm (11.8 in x 11.8 in x 10.6 in)
Folded Height	14 cm (5.5 in)
Weight	Approx. 2.05 kg (72.1 oz)
Installation Type	Portable
Special Features	Gentle Spin Function, Foldable Design, UV Lamp (on some models)
Control Type	Button
Loading Type	Top Load

WARRANTY INFORMATION

Specific warranty details for the Luqeeg Portable Mini Washing Machine are not provided in this manual. For information regarding warranty coverage, duration, and claims, please refer to the documentation included with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for warranty purposes.

CUSTOMER SUPPORT

If you have any questions, concerns, or require technical assistance with your Luqeeg Portable Mini Washing Machine, please contact the seller or manufacturer's customer support. Details for contacting support are typically found on the product packaging, the retailer's website, or in separate documentation provided with your purchase.

When contacting support, please have the following information ready:

- Product Model Number: Luqeeg1ae9y2qoxz-11
- Date of Purchase
- Description of the issue

