

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [UltraPro](#) /

› [UltraPro OneTouch Replacement Remote Control User Manual](#)

UltraPro 80830

UltraPro OneTouch Replacement Remote Control User Manual

Model: 80830

INTRODUCTION

The UltraPro OneTouch Replacement Remote is designed to provide immediate control of your TV without complex programming. This universal remote is compatible with major TV brands including Samsung, LG, Sony, Vizio, and Roku TVs, and can also operate an additional A/V device. Its backlit keypad ensures easy navigation in any lighting condition.



Image: The UltraPro OneTouch Replacement Remote, showcasing its design and packaging.

Key Features:

- **One-Touch Setup:** Preprogrammed TV device buttons for Samsung, LG, Sony, Vizio, and Roku TVs for instant use.
- **Multi-Device Control:** Operates your TV and one additional A/V device (e.g., Blu-ray/DVD player, cable/satellite receiver, streaming media player, soundbar).

- **Preprogrammed Streaming Hotkeys:** Direct access to popular streaming apps like Netflix, Disney+, Prime Video, Hulu, and YouTube.
- **Fully Backlit Keypad:** Ensures visibility and ease of use in dark or dimly lit environments.
- **Master Volume Control:** Adjust volume across devices regardless of the active device.

SETUP GUIDE

1. Battery Installation

The UltraPro OneTouch Remote requires two (2) AA batteries (not included). Ensure correct polarity when inserting the batteries.



Video: Demonstrates the easy setup process, including battery installation and initial TV pairing.

2. Initial TV Pairing (One-Touch Setup)

For most compatible TVs, no programming is required. Simply follow these steps:

1. Insert two AA batteries into the remote.
2. Point the remote at your TV.
3. Press the dedicated TV device button that matches your TV's brand (e.g., **LG**, **SONY**, **VIZIO**, or **ROKU TV**). The remote is pre-programmed for these brands.
4. Your TV should respond immediately.

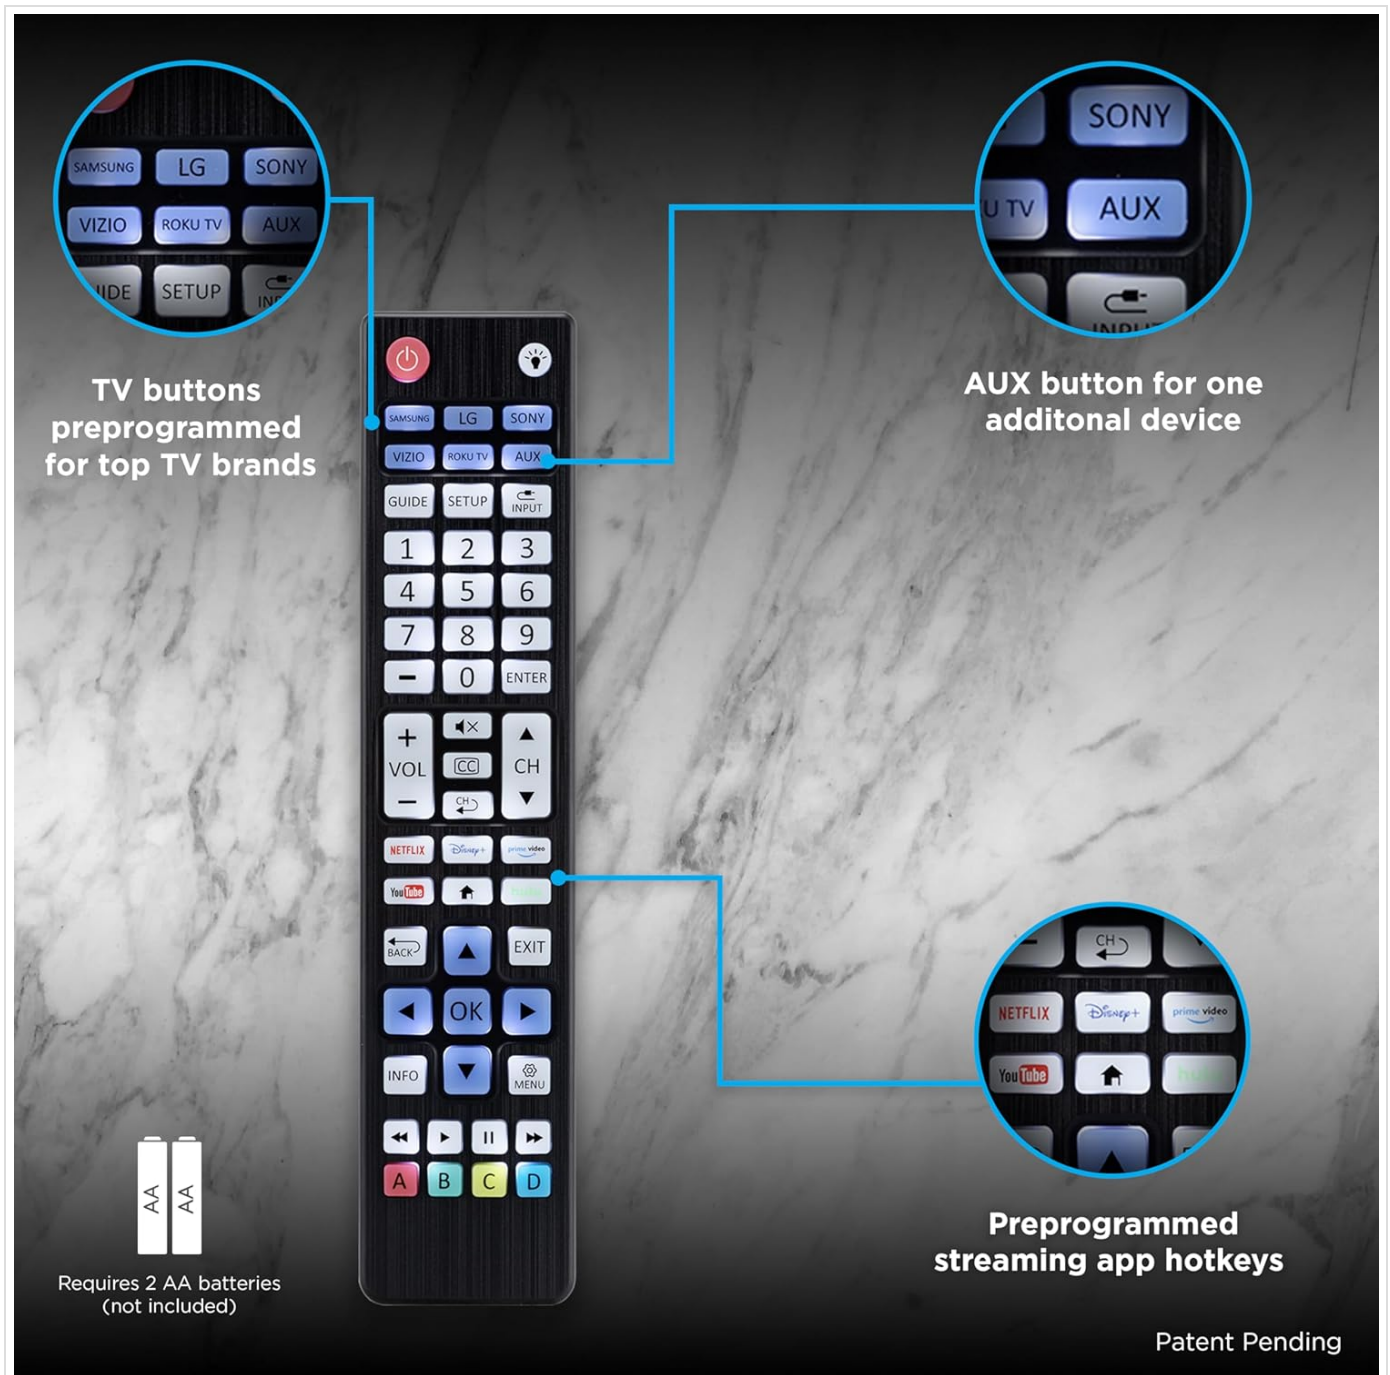


Image: A detailed view of the remote's buttons, highlighting the pre-programmed TV brand buttons, the AUX button, and the streaming app hotkeys.

3. Programming the AUX Button (Optional)

The **AUX** button is preprogrammed for Roku boxes. However, it can be reprogrammed to control another A/V device such as a Blu-ray/DVD player, cable/satellite receiver, or soundbar.

Refer to the full instruction manual (usually included in the product packaging or available online) for detailed steps on auto code search or direct code entry programming for the AUX button.

2 DEVICE

Control your TV and one other device



Remote can be programmed to operate any compatible AV device



Streaming*
ready
for Roku boxes

OR



*Not compatible with Roku Streaming Sticks® and Amazon Fire TV Sticks

Image: Illustrates the remote's capability to control two devices: a TV and an additional A/V component.

OPERATING YOUR REMOTE

Basic Functions:

- **Power Button (⏻):** Turns your TV or selected device on/off.
- **Volume Control (VOL+ / VOL-):** Adjusts the volume. The master volume feature allows volume control regardless of the active device.
- **Channel Control (CH+ / CH-):** Changes channels.
- **Number Pad (0-9):** For direct channel entry or inputting numbers.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used for menu navigation and selection.

Streaming App Hotkeys:

Access your favorite streaming services instantly with dedicated hotkeys:

- **NETFLIX**

- **Disney+**
- **Prime Video**
- **Hulu**
- **YouTube**

Backlight Feature:

The entire keypad is fully backlit for enhanced visibility. The backlight activates automatically when a button is pressed, making it easy to use in low-light conditions.

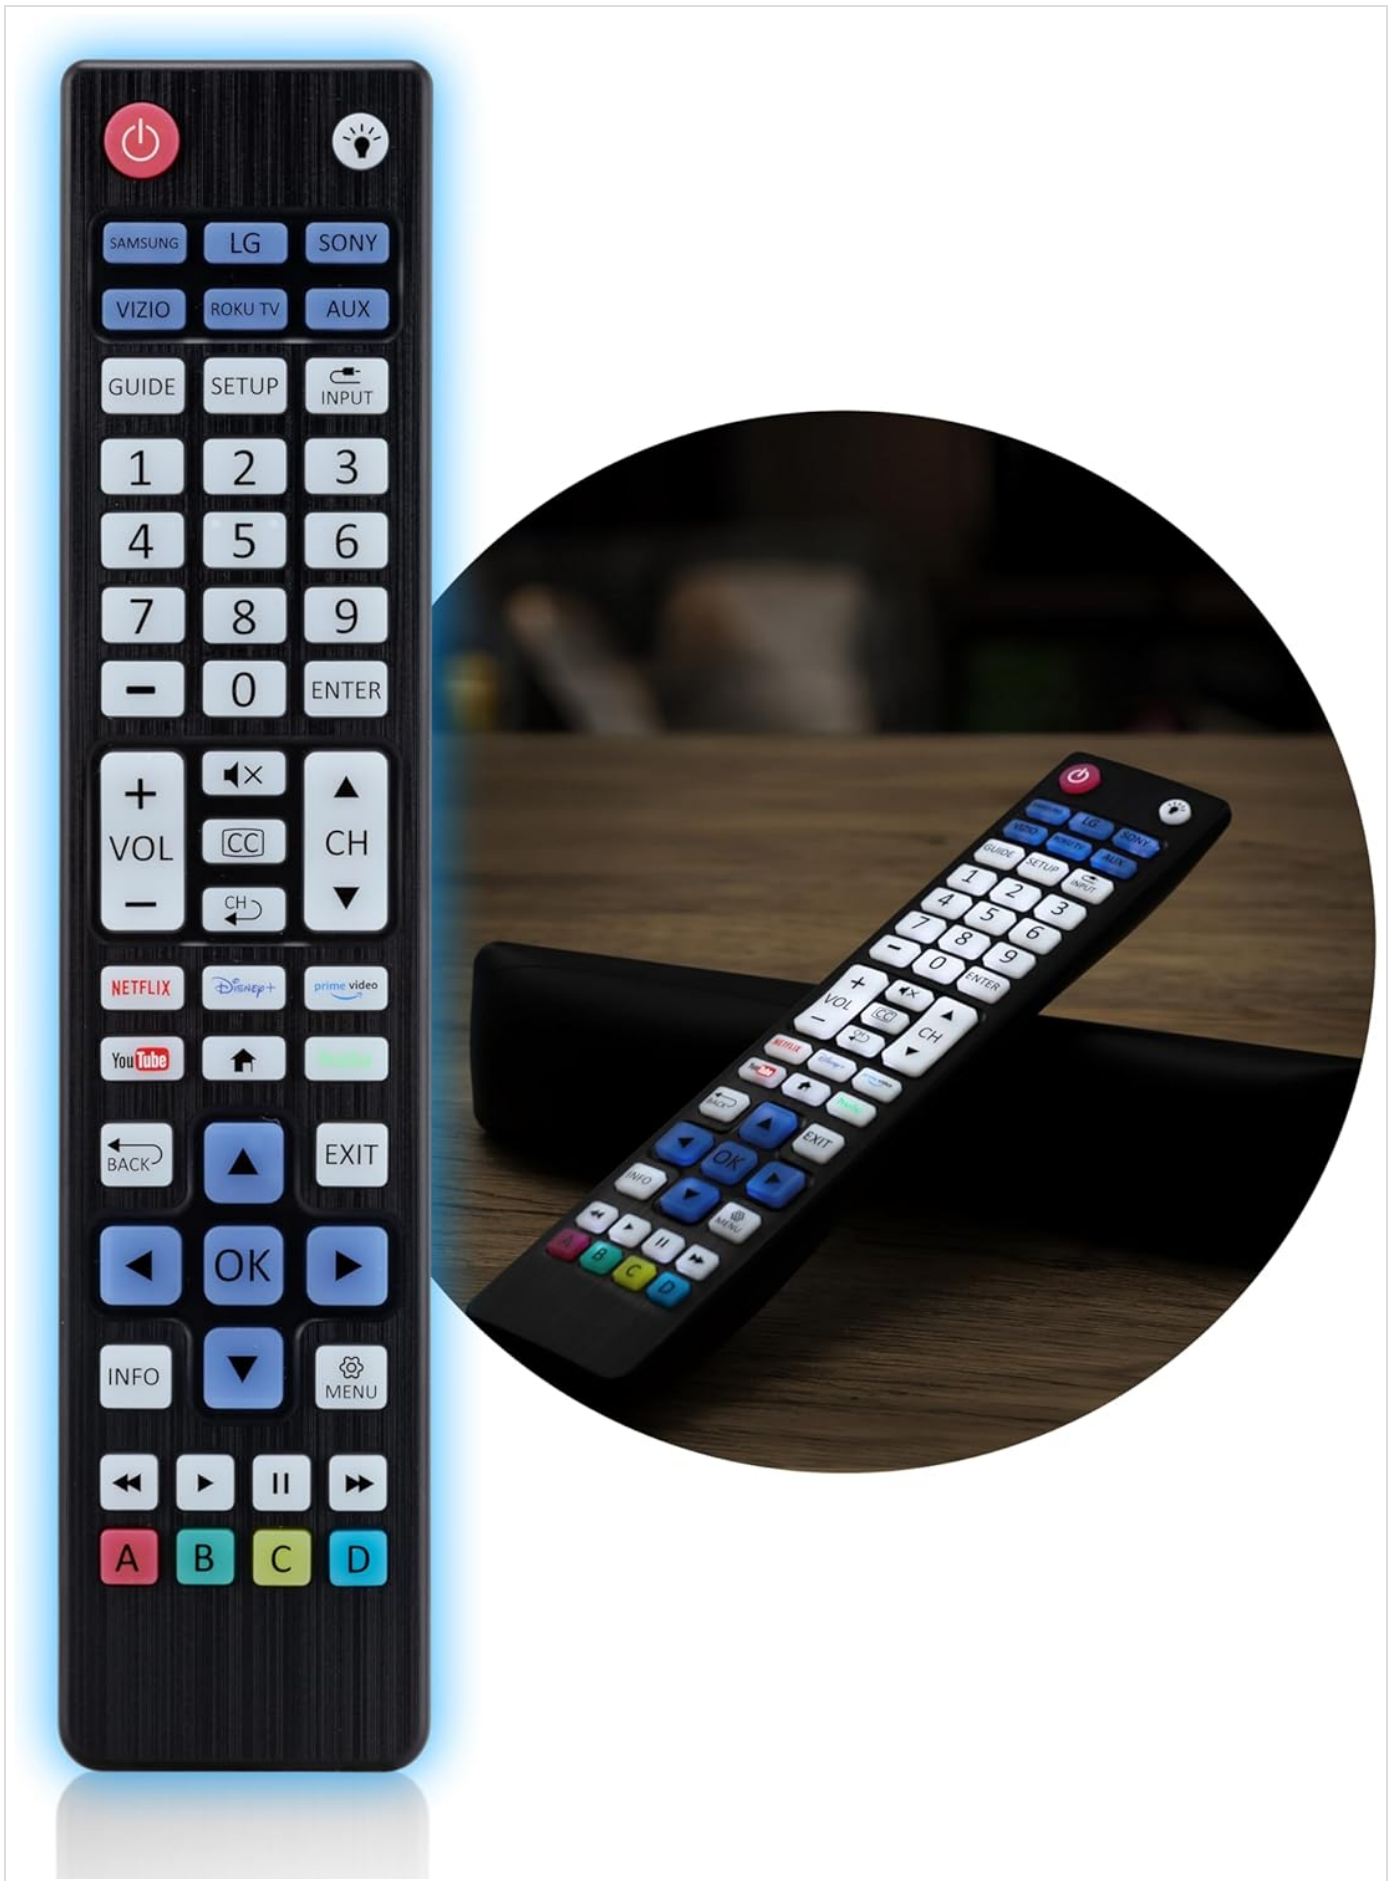


Image: The remote with its blue backlight illuminated, demonstrating its visibility in the dark.



Fully backlit for easy navigation in dark or dimly lit rooms

Image: A close-up view emphasizing the fully backlit buttons for easy navigation.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the backlight dims significantly. Always replace both batteries at the same time with new AA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Remote is not responding.	<p>Ensure batteries are inserted correctly with proper polarity.</p> <p>Replace old batteries with new AA batteries.</p> <p>Ensure there are no obstructions between the remote and the device.</p> <p>Make sure you are within the effective range of the device.</p>
Specific buttons (e.g., AUX) are not working as expected.	<p>If the AUX button was reprogrammed, ensure it was done correctly. Refer to the full manual for reprogramming instructions.</p> <p>Verify the device connected to the AUX input is powered on and functioning.</p>
Backlight is not working or is dim.	<p>Replace batteries with new ones. Low battery power can affect backlight intensity.</p> <p>The backlight is designed to activate upon button press and may turn off after a short period of inactivity to conserve battery life.</p>
Remote does not control my TV.	<p>Ensure you are pressing the correct TV brand button for your television.</p> <p>While pre-programmed for major brands, some older or less common models may require manual code entry. Consult the full manual for advanced programming options.</p>

SPECIFICATIONS

Feature	Detail
Model Number	80830
Product Dimensions	3.43 x 11.35 x 27.84 inches
Item Weight	1.81 ounces
Batteries Required	2 AA batteries (not included)
Max Number of Supported Devices	2 (TV + 1 A/V device)
Compatible Devices	Television, Streaming Device
Color	Black
Special Features	Universal, Lightweight, Backlit, Pre-Programmed, No Programming Required
Manufacturer	Jasco Products Company, LLC
Country of Origin	China



Image: Visual representation of the remote's dimensions.



Roku boxes



Roku TV



Samsung, LG, Sony, Vizio



All major TV brands



Roku streaming sticks

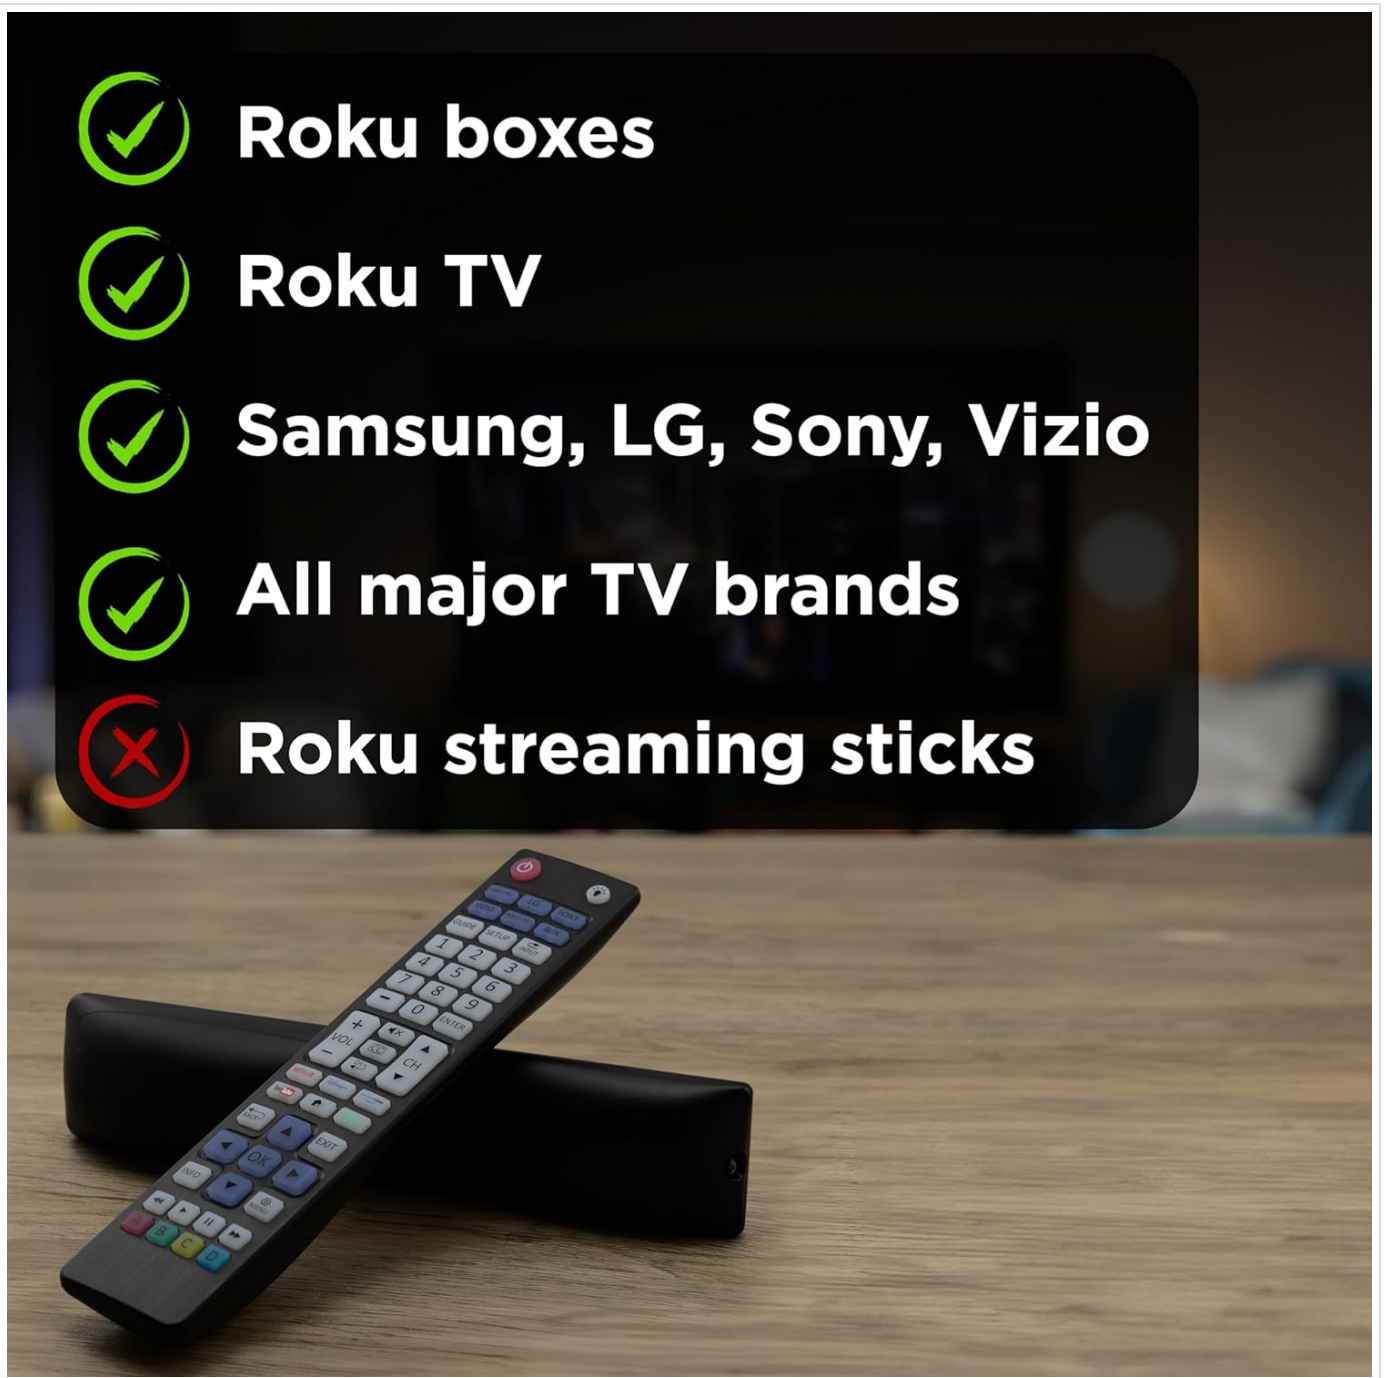


Image: Compatibility details for the remote, indicating supported devices and limitations.

WARRANTY AND SUPPORT

The UltraPro OneTouch Replacement Remote comes with free U.S.-based technical support. For assistance with any questions or issues, please contact support during the following hours:

- **Availability:** Monday - Friday, 7 AM - 8 PM Central Time

Additionally, online step-by-step programming videos are available to guide you through various setup and programming procedures.



Video: An overview of the UltraPro OneTouch Replacement Remote's features and benefits.

Manufactured by Jasco Products Company, LLC.