

UltraPro 80829

UltraPro One Touch Replacement Remote 80829 User Manual

Model: 80829

INTRODUCTION

The UltraPro One Touch Replacement Remote is designed to provide immediate control for your television without complex programming. This remote is pre-programmed for popular TV brands including Samsung, LG, Sony, Vizio, and Roku TVs, and also offers universal control for other audio/video equipment. It features dedicated buttons for common streaming applications and an AUX button for an additional device.

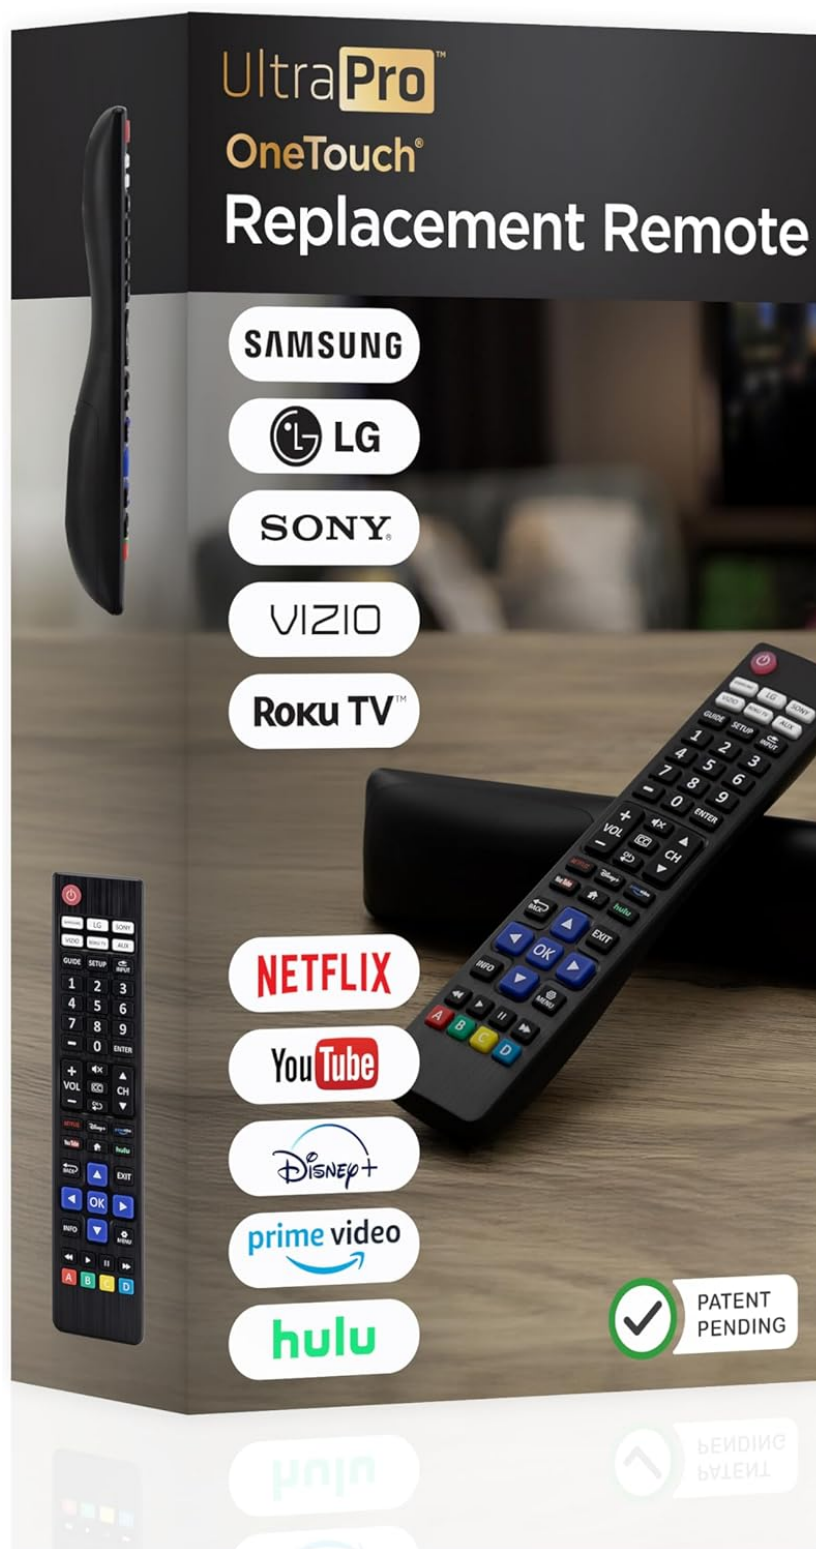 


Figure 1: UltraPro One Touch Replacement Remote and its packaging.

OneTouch®



Regain immediate control of your TV –
no programming required!

Figure 2: The UltraPro One Touch Replacement Remote, ready for use.

SETUP GUIDE

1. Battery Installation

The remote requires two (2) AA batteries (not included). To install:

1. Locate the battery compartment on the back of the remote.
2. Slide the battery cover downwards and remove it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

2. Initial TV Pairing (One Touch)

The UltraPro One Touch remote is designed for instant pairing with supported TV brands:

1. Ensure your TV is powered on.
2. Point the remote at your TV.
3. Press and hold the dedicated TV device button that matches your TV's brand (e.g. **SAMSUNG**, **LG**,

SONY, VIZIO, or ROKU TV).

4. Release the button once your TV responds. The remote is now paired and ready for use.

 
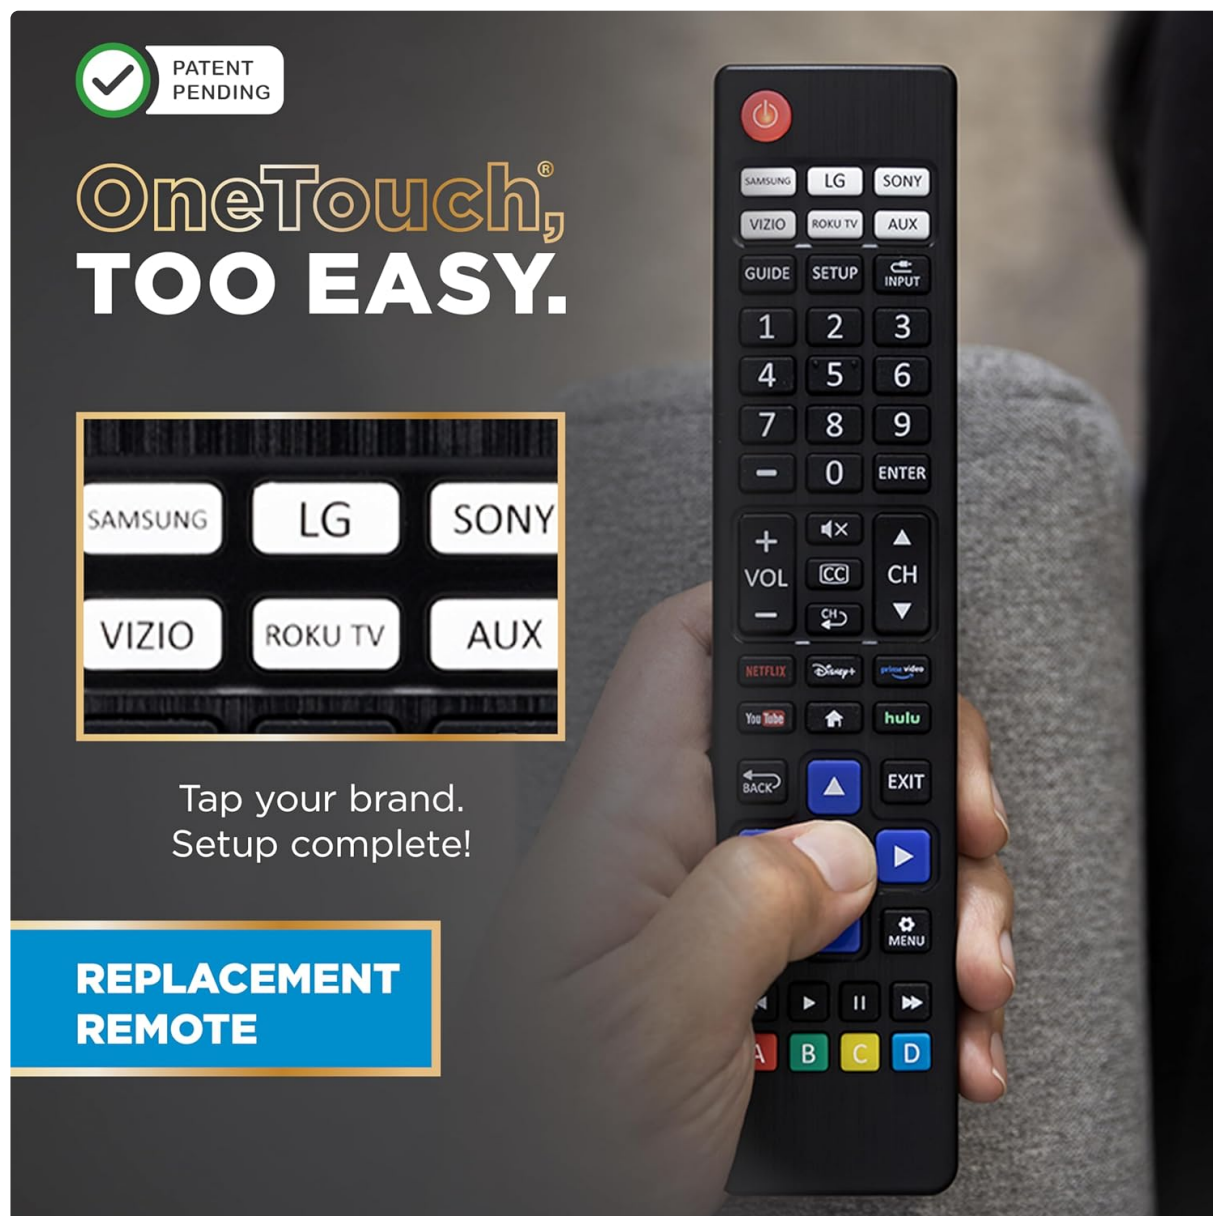 


Figure 3: Tap your TV brand button for instant setup.

OneTouch®



TV buttons preset
for top brands

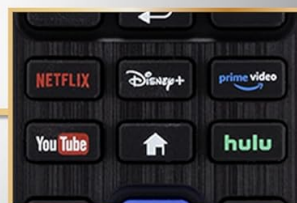

Preprogrammed
streaming app hotkeys



Requires 2 AA batteries
(not included)

Supports Streaming Hot Keys provided by
TV Manufacturer - Will not work on every TV Platform



PATENT
PENDING

Figure 4: Remote layout highlighting key features and battery requirement.

OPERATING YOUR REMOTE

This remote allows control of your TV and one additional device (AUX).



Figure 5: The remote supports controlling two devices: your TV and one other device.

1. TV Control

After initial pairing, the remote's standard buttons (Power, Volume, Channel, Mute, Navigation, OK, Back, Exit, Menu, Info, Guide, Input) will control your TV's functions.

2. Streaming App Hotkeys

The remote includes pre-programmed hotkeys for direct access to popular streaming applications:

- Netflix
- Disney+
- Prime Video
- Hulu
- YouTube

Simply press the corresponding button to launch the app. Note that functionality may vary based on your TV's operating system and manufacturer support.

3. AUX Device Control

The **AUX** button is pre-programmed for use with Roku boxes. It can be reprogrammed to control a different audio/video device (e.g., Blu-ray/DVD player, cable/satellite receiver, soundbar) using auto code search or direct code entry programming methods. Refer to the online step-by-step programming videos for detailed instructions.

4. Master Volume Feature

The master volume feature allows you to adjust the volume regardless of which device is currently being controlled by the remote. This is particularly useful when controlling an AUX device but wanting to adjust the TV's volume.



Figure 6: Detailed view of the remote's preprogrammed TV buttons, AUX button, and streaming app hotkeys.

DEVICE COMPATIBILITY

Supported Devices

- Roku boxes
- Roku TV
- Samsung TVs
- LG TVs
- Sony TVs
- Vizio TVs
- Most major TV brands (universal control)

Limitations

This remote is generally not compatible with:

- Roku streaming sticks
- Amazon Fire TV streaming sticks

Additionally, specific app hotkey functionality (e.g., YouTube, Disney+) may not work on all TV platforms or models, even for supported brands, due to manufacturer software variations. Roku's operating system does not support number buttons for channel selection.

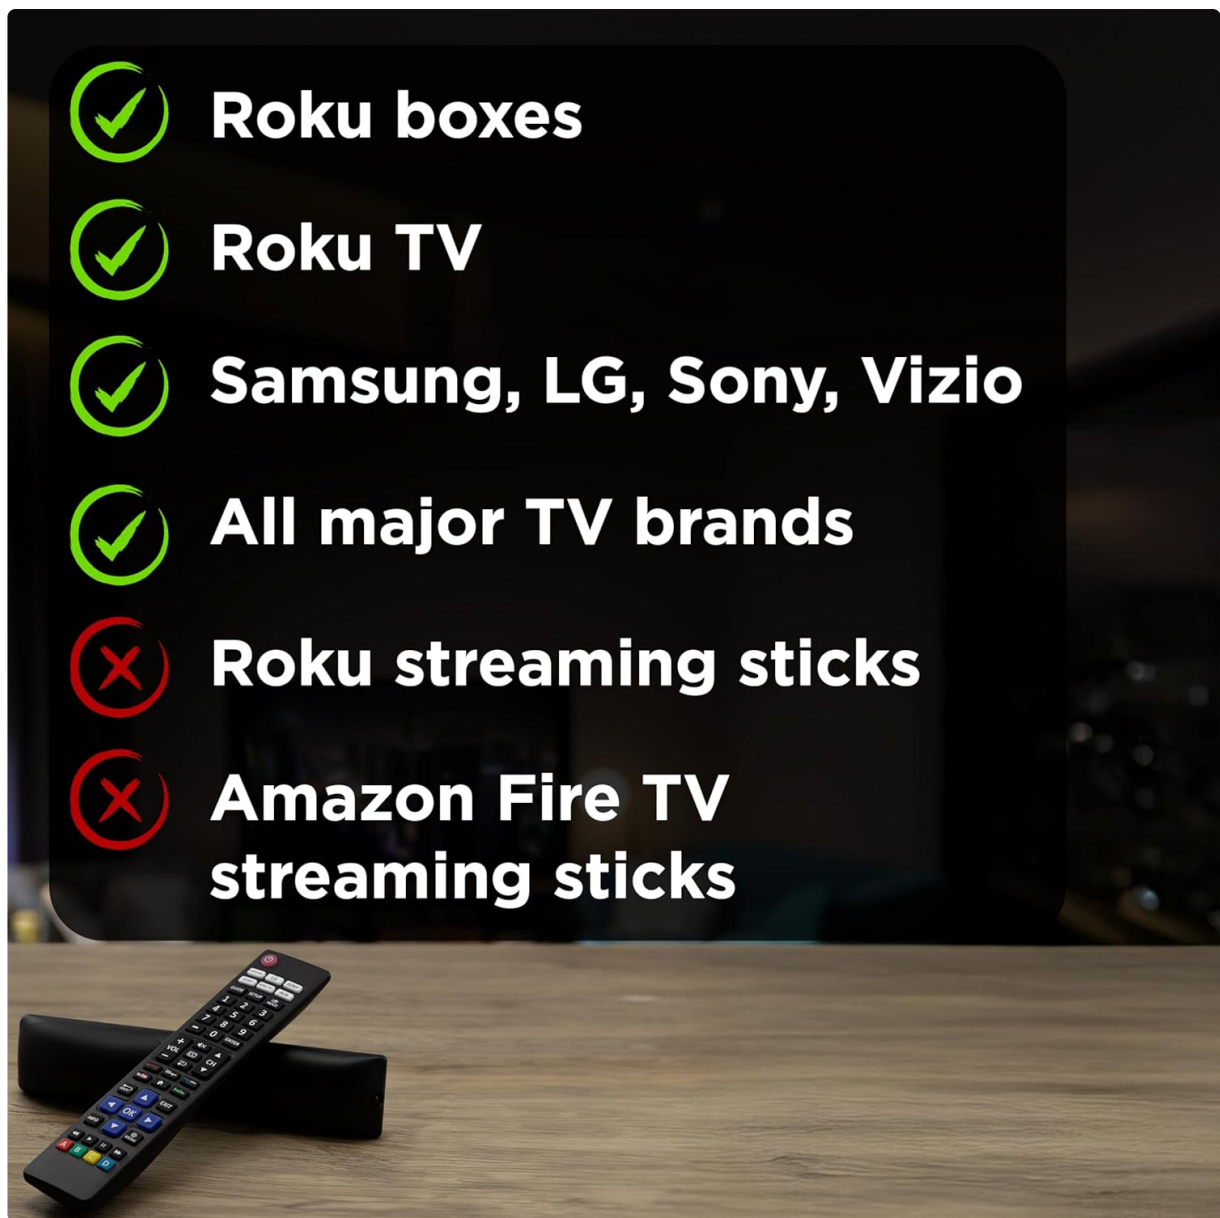


Figure 7: Compatibility overview for the UltraPro One Touch Remote.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure fresh AA batteries are correctly installed with proper polarity.
- **Line of Sight:** Make sure there are no obstructions between the remote and the device you are trying to control. The remote uses infrared (IR) signals.
- **Re-pair TV:** If the remote stops controlling your TV, try the initial TV pairing process again by pressing and holding your TV's brand button.

Streaming App Hotkeys Not Working

- **TV Compatibility:** App hotkey functionality depends on your TV manufacturer's support. Not all apps may launch on every TV platform, even if the brand is supported.
- **LG TV YouTube Button:** Some LG TV models may not support the YouTube hotkey directly from this remote.
- **Roku Number Buttons:** Roku OS generally does not support number buttons for direct channel entry.

AUX Device Not Responding

- **Reprogram AUX:** If the AUX button is not controlling your desired device, it may need to be reprogrammed using auto code search or direct code entry. Refer to online resources for programming instructions.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	UltraPro
Model Number	80829
Compatible Devices	Television, Streaming Device
Max Supported Devices	2 (TV + 1 AUX device)
Special Features	Lightweight, No Programming Required (for main TV brands), Pre-Programmed, Universal
Connector Type	Infrared
Batteries Required	2 x AA (not included)
Product Dimensions	8.71 x 28.84 x 70.71 cm (approx. 3.43 x 11.35 x 27.84 inches)
Item Weight	49.9 g (approx. 1.76 oz)



Figure 8: Physical dimensions of the remote control.

 

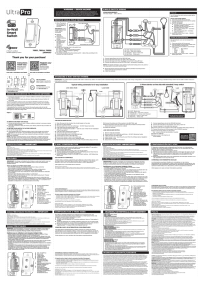 


 
TECHNICAL SUPPORT

For further assistance or questions regarding your UltraPro One Touch Replacement Remote, please contact our U.S.-based technical support team.

- **Availability:** Monday-Friday, 7 AM - 8 PM Central Time.
- **Online Resources:** Step-by-step programming videos and additional support materials are available online.

Please refer to the product packaging or the manufacturer's official website for specific contact details.

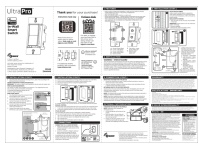Related Documents - 80829

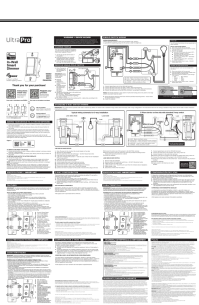	<p>UltraPro Z-Wave In-Wall Smart Switch Installation Guide</p> <p>Comprehensive guide for installing and operating the UltraPro Z-Wave In-Wall Smart Switch (ZW4008), including wiring instructions, features, specifications, and Z-Wave network integration.</p>
	<p>UltraPro Outdoor Electrical Outlet Cover Installation Manual</p> <p>Comprehensive installation guide for the UltraPro weatherproof outdoor electrical outlet cover. Learn how to safely install and use this NEMA 3R rated enclosure for various outdoor applications.</p>
	<p>UltraPro Z-Wave Plus In-Wall Smart Switch Installation Guide</p> <p>This guide provides instructions for installing and using the UltraPro Z-Wave Plus In-Wall Smart Switch (model ZWN4017). It covers wiring diagrams, features, specifications, and troubleshooting.</p>
	<p>UltraPro Wi-Fi Add-on Switch User Manual - Installation and Operation</p> <p>Comprehensive user manual for the UltraPro Wi-Fi Add-on Switch (Model 57056). Includes step-by-step installation, operation instructions, safety warnings, and smart home integration details.</p>
	<p>UltraPro Wi-Fi Smart LED Bulb: Setup, Installation, and User Guide</p> <p>Comprehensive guide for the UltraPro Wi-Fi Smart LED Bulb (Model WFD7105), covering app download, account setup, installation, voice control integration with Alexa and Google Assistant, troubleshooting, and regulatory compliance.</p>
	<p>UltraPro Z-Wave In-Wall Smart Dimmer Installation Guide</p> <p>Installation and configuration guide for the UltraPro Z-Wave In-Wall Smart Dimmer (models 59350, 59372, 59373, ZWA3016). Covers wiring, Z-Wave network integration, features, and troubleshooting.</p>