

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [TIMBER RIDGE](#) /
- › [Timber Ridge 49-inch Collapsible Folding Wagon User Manual](#)

TIMBER RIDGE 21813S-GR

Timber Ridge 49-inch Extra Long Collapsible Folding Wagon User Manual

Model: 21813S-GR

INTRODUCTION

Thank you for choosing the Timber Ridge 49-inch Extra Long Collapsible Folding Wagon. This manual provides essential information for the safe and efficient use, setup, operation, and maintenance of your wagon. Please read it thoroughly before first use and retain it for future reference.

This heavy-duty wagon is designed for outdoor activities, camping, sports, and general hauling, offering a large capacity and convenient features.

SAFETY INFORMATION

- Do not exceed the maximum weight capacity of 300 lbs (136 kg).
- Ensure all locking mechanisms are engaged before use.
- Always use the brakes when parking the wagon, especially on inclines.
- Keep hands and fingers clear of moving parts during folding and unfolding.
- This wagon is not intended for transporting children or pets without proper supervision and safety measures.
- Avoid using the wagon on extremely rough or unstable terrain that could cause it to tip over.

SETUP AND UNFOLDING

The Timber Ridge folding wagon features a patented fully collapsible construction, requiring no assembly. It sets up in seconds.

1. Place the folded wagon on a flat, stable surface.
2. Grasp the top edges of the wagon and pull them apart to expand the frame.
3. Press down firmly on the center of the wagon's base until it lies flat and the frame is fully extended.
4. Ensure all fabric panels are properly aligned and secured.
5. To extend the tailgate, unclip the fasteners on the rear panel and fold it down.



FOLD&UNFOLD IN SECONDS



Image: Step-by-step visual guide for unfolding the wagon.

HEAVY DUTY METAL FRAME

Corrosion resistant



 25*12 mm Metal Tube



 TWO Cup Holders



 Foldable Tailgate

Image: The wagon with its tailgate extended, demonstrating how it provides additional space for longer items.

OPERATING INSTRUCTIONS

Adjustable Handle

The wagon features an adjustable handle for comfortable pulling. To adjust the handle length, locate the red lever near the handle's base. Press the lever to unlock, extend or retract the handle to your desired length, and then release the lever to lock it in place.

Braking System

The wagon is equipped with precision-bearing brakes on the front wheels. To engage the brakes, press down on the red brake levers located near the front wheels. To release, lift the levers. Always engage the brakes when the wagon is stationary to prevent unintended movement.

WAGON CART WITH TAILGATE



Image: Detail of the 360-degree rotating front wheel and the brake mechanism.

Loading and Capacity

The wagon has a maximum storage capacity of 250L (8.83 cu.ft) and can hold up to 300 lbs. Utilize the extended tailgate for longer items such as pop-up tents. The wagon also includes two cup holders and large side pockets for smaller items like magazines or water bottles.



Image: The wagon demonstrating its pet-friendly design with a dog inside and the tailgate open.



Image: The wagon loaded with heavy items, showcasing its robust steel frame and 300 lbs weight capacity.

Folding for Storage

To fold the wagon for compact storage, ensure it is empty. Pull up on the fabric loop in the center of the wagon's base. The sides will collapse inward. Secure the folded wagon with the integrated straps and place it in its cover if provided. The folded dimensions are approximately 12"L x 7"W x 30"H.

Your browser does not support the video tag.

Video: Demonstrates the unfolding, loading, and folding process of the Timber Ridge wagon, including the adjustable handle and tailgate features.

MAINTENANCE

- **Cleaning:** Wipe down the fabric with a damp cloth and mild soap. Allow to air dry completely before folding and storing. Do not use harsh chemicals or abrasive cleaners.
- **Frame:** Inspect the metal frame periodically for any signs of damage or corrosion. Clean any dirt or debris from the frame and wheels.

- **Wheels:** Ensure the wheels are free of debris and rotate smoothly. The 360° rotating front wheels and precision-bearing brakes should be checked for proper function.
- **Storage:** Store the wagon in a dry, cool place away from direct sunlight when not in use to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wagon does not unfold completely.	Base not fully pressed down.	Ensure the center of the wagon's base is pressed down until it lies flat and locks.
Wagon is difficult to pull or steer.	Overloaded; debris in wheels; brakes engaged.	Reduce load; clear debris from wheels; ensure brakes are disengaged.
Handle does not lock in place.	Locking lever not fully engaged.	Ensure the red locking lever is fully released after adjusting the handle.
Brakes are not holding the wagon.	Brake levers not fully engaged.	Press down firmly on the red brake levers until they click into place.

SPECIFICATIONS

Feature	Detail
Product Dimensions (Open)	49"D x 18.9"W x 32.7"H
Folded Dimensions	12"L x 7"W x 30"H
Weight Capacity	300 Pounds (136 kg)
Storage Capacity	250 Liters / 8.83 cu.ft
Item Weight	27 Pounds (12.2 kg)
Material	Alloy Steel Frame, 500D Double-layer Oxford Fabric
Special Features	Adjustable Handle, Collapsible, Compact, Tailgate, Bearing Brakes, 360° Rotating Front Wheels, Cup Holders, Side Pockets
Number of Wheels	4
Assembly Required	No
Model Number	21813S-GR
UPC	844093074711

WARRANTY

Timber Ridge products are crafted with care and supported by our dedication to customer satisfaction. For specific warranty

details, please refer to the warranty card included with your purchase or contact Timber Ridge customer support.

SUPPORT

Should you have any questions, concerns, or require assistance with your Timber Ridge folding wagon, please contact our customer support team. Contact information can typically be found on the product packaging or on the official Timber Ridge website.