

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [HOOBRO](#) /

› HOOBRO End Table with Charging Station and LED Lights BB119UDBZ01 User Manual

HOOBRO BB119UDBZ01

HOOBRO End Table with Charging Station and LED Lights BB119UDBZ01 User Manual

Model: BB119UDBZ01

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- Keep the product away from children to avoid accidental touch.
- Keep the product away from water, high-temperature sources, and direct sunlight.
- Do not disassemble the tubes containing the light strip.
- Ensure all electrical connections are secure and properly grounded.
- Do not overload the charging station. Refer to the specifications for maximum load capacity.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Side Table (components for assembly)
- 1 x Charging Station
- 1 x LED Light Strip
- 1 x Accessory Kit (screws, Allen wrench, etc.)
- 1 x Instructions (this manual)



Image 1: Assembled HOOBRO End Table with LED lights and charging station. The table features a black finish, two shelves, and integrated LED lighting on the inner sides of the legs. A charging station with outlets and USB ports is visible on the side.

3. ASSEMBLY INSTRUCTIONS

Assembly typically requires one person and takes approximately 10-15 minutes. Follow the detailed step-by-step instructions provided in the accessory kit for precise assembly.

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.

2. Assemble the main frame of the table using the provided screws and Allen wrench.
3. Attach the shelves to the frame, ensuring they are securely fastened.
4. Mount the charging station to the desired side of the table using a Phillips head screwdriver (not included).
5. Carefully install the LED light strip into the designated channels.
6. Connect the LED light strip and charging station to the power supply cable.
7. Ensure all connections are tight and the table is stable before use.



Image 2: The HOOBRO End Table positioned next to a sofa in a modern living room. The table's compact design and integrated features blend seamlessly with other furniture, providing both utility and aesthetic appeal.

4. OPERATING INSTRUCTIONS

4.1. LED Lights Operation

The integrated LED lights are controlled by a remote control (included in the accessory kit).

- **Power On/Off:** Press the power button on the remote to turn the lights on or off.
- **Color Selection:** Use the color buttons on the remote to choose from various static colors (e.g., red, green, blue, purple).
- **Mode Selection:** Select different lighting modes, such as flashing, fading, or smooth transitions, using the mode buttons.
- **Brightness Adjustment:** Increase or decrease the brightness of the lights using the dedicated brightness control buttons.

4.2. Charging Station Usage

The charging station provides convenient power access for your devices.

- Plug the table's power cord into a standard wall outlet.
- The charging station includes one (1) standard AC outlet and two (2) USB-A ports.
- Connect your electronic devices (e.g., phone, tablet, lamp) to the appropriate ports for charging or power.
- Ensure devices are compatible with the charging station's output specifications.

5. MAINTENANCE

To ensure the longevity and appearance of your HOOBRO End Table, follow these maintenance guidelines:

- **Cleaning:** Wipe the table surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Dusting:** Regularly dust the table and LED light strips to maintain optimal light output and cleanliness.

- **Electrical Components:** Periodically check the power cord and charging station for any signs of damage. If damage is found, discontinue use and contact customer support.
- **Stability:** Ensure all screws and connections remain tight. Re-tighten if necessary to maintain stability.

6. TROUBLESHOOTING

If you encounter issues with your HOOBRO End Table, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
LED lights do not turn on.	Power cord not plugged in; remote control battery depleted; LED strip connection loose.	Ensure the power cord is securely plugged into a working outlet. Replace the remote control battery. Check the connection of the LED strip to the power source.
Charging station is not providing power.	Power cord not plugged in; device not properly connected; charging station overloaded.	Verify the table's power cord is plugged in. Ensure your device is correctly connected to the AC outlet or USB port. Unplug some devices if the station is overloaded.
Table is wobbly or unstable.	Loose screws or uneven assembly.	Check and tighten all screws. Ensure the table is assembled on a flat, even surface.

7. SPECIFICATIONS

Feature	Detail
Brand	HOOBRO
Model Number	BB119UDBZ01
Product Size	15"L x 11"W x 21.6"H (38.1 cm L x 27.9 cm W x 54.9 cm H)
Product Weight	7.3 lb (3.3 kg)
Max. Static Load Capacity (Top)	33 lb (15 kg)
Max. Static Load Capacity (Bottom)	33 lb (15 kg)
Material	Particleboard, Metal
Charging Station	1 Standard AC Outlet, 2 USB Ports

Feature	Detail
LED Lights	Multi-color, adjustable brightness and modes via remote control
Assembly Required	Yes (Tools included)
Indoor/Outdoor Usage	Indoor

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact HOOBRO customer service directly. Keep your purchase receipt for warranty claims.

Contact Information: Please visit the official HOOBRO website or refer to your purchase platform for the most up-to-date customer support contact details.