

## **TAGIC TG-VC06**

# **TAGIC Cordless Vacuum Cleaner**

Model: TG-VC06

## **1. IMPORTANT SAFETY INSTRUCTIONS**

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.

## 2. PRODUCT OVERVIEW

The TAGIC Cordless Vacuum Cleaner is designed for efficient and versatile home cleaning. Its modular design allows for easy assembly and conversion between stick and handheld modes.



Image: The TAGIC Cordless Vacuum Cleaner shown as a complete stick vacuum, a handheld unit with the LED roller brush, and a handheld unit with the crevice nozzle, highlighting its versatility.

### Package Contents:

- Main Motor Unit (with dustbin)
- LED Roller Brush
- Flexible Tube (Extension Wand)
- Battery Pack
- Power Adapter
- Crevice Nozzle
- 2-in-1 Brush Tool
- Cleaning Brush
- HEPA Filters (3 included)
- Wall Mounted Dock
- Screws & Anchors (for wall mount)

## 3. ASSEMBLY

Follow these steps to assemble your TAGIC Cordless Vacuum Cleaner:

1. **Attach the Battery Pack:** Slide the battery pack into the slot on the back of the main motor unit until it clicks into place.

## 2. Assemble the Stick Vacuum:

- Connect the Flexible Tube (extension wand) to the main motor unit by aligning the pins and pushing until it locks.
- Connect the LED Roller Brush to the other end of the Flexible Tube, ensuring it clicks securely.

3. **Assemble as Handheld Vacuum:** For handheld use, you can directly attach the Crevice Nozzle or the 2-in-1 Brush Tool to the main motor unit.

4. **Wall Mounted Dock Installation:** Choose a suitable location near a power outlet. Use the provided screws and anchors to securely mount the dock to the wall. Ensure it is at a height that allows the vacuum to hang freely.

## 4. OPERATION

### Charging the Battery:

- Before first use, fully charge the battery for approximately 4 hours.
- Connect the Power Adapter to the charging port on the battery pack or the wall-mounted dock. Plug the adapter into a power outlet.
- The battery indicator lights will show the charging status. Once fully charged, the lights will indicate a full charge.
- A full charge provides up to 40 minutes of runtime, depending on the power mode used.

### Using the Vacuum Cleaner:

- **Power On/Off:** Press the power button on the main motor unit to turn the vacuum on. Press it again to turn off.
- **Suction Modes:** The vacuum features multiple suction modes. Press the mode button (if available) to cycle through different power settings (e.g., Eco, Standard, Max). The 25Kpa suction is achieved in Max mode.
- **Using Attachments:**
  - **LED Roller Brush:** Ideal for hard floors and carpets. The integrated LED lights illuminate dust and debris.
  - **Crevice Nozzle:** Perfect for narrow gaps, corners, and edges.
  - **2-in-1 Brush Tool:** Use the brush for dusting delicate surfaces or slide the brush back for a wider nozzle for upholstery and larger debris.
- **Cleaning Hardwood Floors:** The LED Roller Brush is specifically designed to provide optimal performance on wooden surfaces without causing scratches.
- **Pet Hair:** The powerful suction and anti-tangle technology effectively pick up pet hair from various surfaces.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### Emptying the Dustbin:

- Press the dustbin release button to detach the dustbin from the main motor unit.
- Hold the dustbin over a trash can and press the bottom release latch to open the dustbin flap and empty the contents.
- Close the flap and reattach the dustbin to the main motor unit until it clicks.

## Cleaning the Filters:

- The vacuum uses HEPA filters. It is recommended to clean the filters regularly, ideally after every few uses, or when suction power decreases.
- Twist and pull out the filter assembly from the dustbin.
- Tap the filter gently to remove loose dust. For a deeper clean, rinse the filter under cold running water.
- **Important:** Ensure the filter is completely dry before reinserting it into the vacuum cleaner. Allow at least 24 hours for air drying. Using a wet filter can damage the motor.
- Replace HEPA filters every 3-6 months, or as needed. (3 spare HEPA filters are included).

## Cleaning the Roller Brush:

- Periodically check the roller brush for tangled hair or debris.
- To remove the roller brush, locate the release latch on the side of the brush head and open it.
- Pull out the roller brush. Use the provided cleaning brush or scissors to cut and remove any tangled hair or fibers.
- Reinsert the roller brush and close the latch until it clicks. The anti-tangle design minimizes hair wrapping, but occasional cleaning is still recommended.

## 6. TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged Battery not properly installed Power button not pressed correctly	Charge the battery fully Ensure battery pack is securely clicked into place Press the power button firmly
Loss of suction power	Dustbin full Filter clogged Hose/nozzle blocked Roller brush tangled	Empty the dustbin Clean or replace the HEPA filter Check and clear any blockages in the tube or attachments Clean the roller brush
Roller brush not spinning	Brush head blocked Brush head not properly attached Motor protection activated	Remove any obstructions from the brush head Ensure the brush head is securely connected to the tube Turn off the vacuum, clear any blockages, and restart
Battery not charging	Power adapter not connected Outlet not working Battery pack faulty	Ensure power adapter is securely plugged into battery/dock and outlet Test the outlet with another device Contact customer support if battery is suspected faulty
Unusual noise	Blockage in air path Damaged component	Check for and remove any blockages in the dustbin, filters, tubes, or brush head If noise persists, contact customer support

If the problem persists after trying these solutions, please contact TAGIC customer support for further assistance.

## 7. SPECIFICATIONS


Feature	Specification
Brand	TAGIC
Model Name	TG-VC06
Special Feature	Cordless
Filter Type	HEPA Filter
Capacity	0.75 litres
Wattage	250 Watts
Runtime	Up to 40 minutes
Charging Time	Approx. 4 Hours
Recommended Uses	House Cleaning
Form Factor	Stick
Colour	Red
Product Dimensions	44L x 27W x 19H Centimeters
Battery Type	Lithium-Ion
Noise Level	70 dB
Item Weight	3 kg 270 g

## 8. WARRANTY AND SUPPORT

TAGIC products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official TAGIC website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact TAGIC customer service through the contact information provided on the product packaging or the official website.

Please have your model number (TG-VC06) and purchase details ready when contacting support.

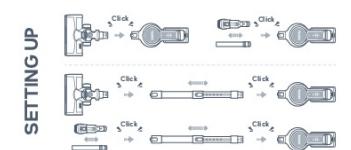

### [\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

TG VC06 20230704 Rev 1 0 Daisy Huang User Guide TAGIC Cordless Vacuum Cleaner 300W

Powerful Stick 6 in 25Kpa with 3 Modes 40Mins Runtime Perfect for Hardwood Floor Pet Hair Car C1Xg

2v3LfL m media amazon images | |||

7 66. - / 3 VW-VC10 QUICK START GUIDE 5 7 \*5 #09 JO5PPM 7BDVVA.BJO#PEZ


#BUUFSZ1BDL YUFOTJPO8BOE MPPS#SVTI SFWJDF5PPM 1 JMUFS 8BMM

BOHFS 4DSFXT ODIPST MFBOJOH#SVTI 1PXFS EBQUFS

IFDLJGBMMBDDFTTPSJFTBSFJODMVEFE POUBDUVTWJBTVQQPSU

UBHJDIPNFDPNJKGUIFSFJTBOZNJTTJOHQBSU MJDL MJD...

lang:en **score:33** filesize: 6.82 M page\_count: 2 document date: 2023-09-15

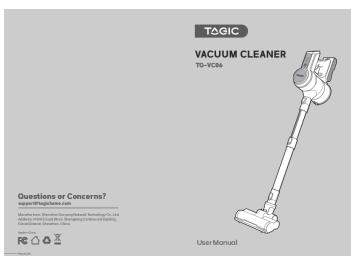

### [\[pdf\]](#) User Manual

TG VC06 20230704 Rev 1 0 User Manual TAGIC Cordless Vacuum Cleaner 300W Powerful Stick 6 in 25Kpa with 3 Modes 40Mins Runtime Perfect for Hardwood Floor Pet Hair Car B1oz2nxdHDL m media amazon images | |||

7 66. - / 3 5 7 2VFTUJPOTPS PODFSOT TVQQPSU UBHJDIPNFDPN

.BOVGBDUVSFS4IFO IFO VJZBOH/FUXPSL5FDIOPMPHZ P -UE EESFTT,

BTU#MPDL 4IFOHUBOH PNNFSDJBM#VJMEJOH VUJBO JTUSJDU 4IFO IFO

IJOB .BEF\*O IJOB Rev\_1.0\_EN 6TFS.BOVBM 0/5 /54 01 \*.1035 /54 5:\*/4536 5\*0/4

05 91-03\*/ :0637 66. - / 3 07 ...

lang:i-klingon **score:20** filesize: 3.31 M page\_count: 10 document date: 2023-09-15