

OLEVS OLS-FR-L5567GJ-JB

OLEVS Women's Analog Wrist Watch User Manual

Model: OLS-FR-L5567GJ-JB

1. INTRODUCTION

Thank you for choosing the OLEVS Women's Analog Wrist Watch, Model OLS-FR-L5567GJ-JB. This watch combines classic design with reliable Japanese Quartz movement, featuring an easy-to-read dial, day and date display, and water resistance. This manual provides essential information for proper setup, operation, and maintenance to ensure long-lasting performance.

2. SAFETY INFORMATION

- Avoid exposing the watch to extreme temperatures or strong magnetic fields.
- Do not attempt to open the watch case or replace the battery yourself, as this may void the warranty and damage the watch. Seek professional service.
- While the watch is water-resistant, avoid prolonged submersion or operating the crown/buttons underwater.
- Keep the watch away from harsh chemicals, solvents, and detergents, which can damage the case, strap, or internal components.

3. PRODUCT OVERVIEW

The OLEVS Women's Analog Wrist Watch features a classic round dial with clear Arabic numerals, a day and date display, and a durable stainless steel strap. The crown is used for setting the time and date.



Figure 1: OLEVS Women's Analog Wrist Watch, Model OLS-FR-L5567GJ-JB, presented on a display stand.



Figure 2: Key features of the OLEVS watch, highlighting the easy-to-read dial, stainless steel band, original quartz movement, and 30-meter water resistance.

4. SETUP

4.1 Setting the Time

1. Pull the crown out to the second click position (farthest out).
2. Turn the crown to move the hour and minute hands clockwise until the desired time is set. Pay attention to AM/PM if setting the date/day.
3. Push the crown back in to the normal position to start the watch.

4.2 Setting the Date and Day

1. Pull the crown out to the first click position (halfway out).
2. Turn the crown clockwise to adjust the date.
3. Turn the crown counter-clockwise to adjust the day of the week.
4. Once the correct date and day are set, push the crown back in to the normal position.
5. **Important:** Avoid setting the date and day between 9:00 PM and 3:00 AM, as this is when the watch's internal mechanism is engaged in changing the date, and manual adjustment can cause damage. If adjustment is needed during this period, first set the time outside this window, adjust the date/day, then reset the time.

4.3 Adjusting the Bracelet

The stainless steel bracelet can be adjusted for a comfortable fit. This typically involves removing or adding links. It is recommended to have this adjustment performed by a professional jeweler or watch repair service to prevent damage to the bracelet or clasp.

5. OPERATING INSTRUCTIONS

5.1 Timekeeping

Once the time, date, and day are set, the watch will operate continuously. The Japanese Quartz movement ensures stable and accurate timekeeping.

5.2 Water Resistance (30M)

This watch is rated for 30 meters (3 ATM) of water resistance. This means it is suitable for daily use, such as splashes, rain, or brief immersion in water. It is **not** suitable for swimming, diving, or showering with hot water, as steam and pressure changes can compromise the seals. Always ensure the crown is fully pushed in before any contact with water.

6. MAINTENANCE

6.1 Cleaning

Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt. For stainless steel parts, a slightly damp cloth can be used, followed by a dry cloth. Avoid using abrasive materials or harsh cleaning agents.

6.2 Battery Replacement

The watch is powered by a button battery with an estimated lifespan of 2-3 years. When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and function.

6.3 General Care

- Store your watch in a dry place when not in use.
- Avoid dropping the watch or subjecting it to strong impacts.
- Periodically check the clasp for secure closure.

7. TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Incorrect time/date:** Refer to Section 4.1 and 4.2 for instructions on setting the time, date, and day. Ensure adjustments are not made between 9:00 PM and 3:00 AM.
- **Condensation inside the watch:** This may indicate a compromised water seal. Avoid further contact with water and seek professional inspection immediately.

If you encounter issues not listed here or if troubleshooting steps do not resolve the problem, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	OLS-FR-L5567GJ-JB
Display Type	Analog
Watch Movement Type	Japanese Quartz
Case Material Type	Stainless Steel
Band Material Type	Stainless Steel

Feature	Detail
Crystal	Mineral
Water Resistance Depth	30 Metres (3 ATM)
Special Features	Date, Day Display
Clasp Type	Double folding clasp
Case Diameter	29 Millimetres
Case Thickness	9 Millimetres
Band Width	14 Millimetres
Battery Life	Approx. 2-3 years

9. WARRANTY INFORMATION

This OLEVS watch comes with a **one-year warranty** from the date of purchase. The warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, normal wear and tear, or battery replacement.

To make a warranty claim, please retain your proof of purchase and contact OLEVS customer support.

10. SUPPORT

For further assistance, questions, or to report an issue with your OLEVS watch, please refer to the contact information provided with your purchase or visit the official OLEVS website. When contacting support, please have your watch model number (OLS-FR-L5567GJ-JB) and purchase details ready.