

## HEX BOTS 6071514

# HEX BOTS Wall Crawler Gecko Instruction Manual

Model: 6071514 | Brand: HEX BOTS

## INTRODUCTION

The HEX BOTS Wall Crawler Gecko is a remote-controlled robot toy designed to mimic the movement of a real gecko, capable of crawling across floors and climbing walls. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Wall Crawler Gecko to ensure optimal performance and enjoyment.

## What's Included:

- 1 HEX BOTS Wall Crawler Gecko
- 1 Remote Control
- 1 Charging Cable (USB)
- 1 Instruction Guide (this manual)



Image: The HEX BOTS Wall Crawler Gecko, featuring a black and green body with translucent green limbs and tail, alongside its matching translucent green remote control.

## SETUP

### 1. Remote Control Battery Installation:

The remote control requires 2 AAA batteries (not included). Open the battery compartment on the back of the remote and insert the batteries, ensuring correct polarity (+/-). Close the compartment securely.

### 2. Charging the Wall Crawler Gecko:

The Wall Crawler Gecko is rechargeable via the included USB cable. Locate the charging port on the underside of the gecko. Connect the USB cable to the gecko and to a compatible USB power source (e.g., computer USB port, USB wall adapter). The LED eyes will indicate charging status (usually red while charging, off or green when fully charged). A full charge provides approximately 20-30 minutes of play time. Do not overcharge.



Image: A close-up view of the translucent green remote control for the HEX BOTS Wall Crawler Gecko, showing its black control buttons.

## OPERATING INSTRUCTIONS

### 1. Power On:

Locate the power switch on the underside of the Wall Crawler Gecko and slide it to the "ON" position. The gecko's LED eyes will light up. Turn on the remote control by pressing its power button.

### 2. Selecting Mode (Floor/Wall):

The Wall Crawler Gecko has two operating modes: Floor Mode and Wall Mode. A switch on the underside of the gecko allows you to select the desired mode. Ensure the correct mode is selected for the surface you intend to use it on.

### 3. Remote Control Functions:

Use the directional buttons on the remote control to maneuver the gecko. The remote offers full-function control, allowing movement in all directions. The operational range is approximately 25 feet (8 meters).

- **Forward/Backward:** Controls the gecko's primary movement.
- **Left/Right:** Controls turning.
- **Wall Climbing:** In Wall Mode, the gecko utilizes suction technology to adhere to smooth, flat vertical surfaces. Ensure the surface is clean and free of dust for best adhesion.



Image: A person's hands holding and operating the translucent green remote control, with the HEX BOTS Wall Crawler Gecko visible on a light-colored floor in the background.



CLIMBS UP  
WALLS & CRAWLS  
ACROSS FLOORS

ENCOURAGES IMAGINATIVE PLAY

Image: The HEX BOTS Wall Crawler Gecko, with its black and green body and bright green limbs, actively climbing a smooth white wall. Two children are blurred in the background, observing the toy.



Image: The HEX BOTS Wall Crawler Gecko is shown upside down, adhering to a white ceiling, demonstrating its wall-crawling capability. A young girl is lying on a bed below, looking up at the gecko.

## MAINTENANCE

---

### Cleaning:

To clean the Wall Crawler Gecko, gently wipe it with a dry or slightly damp cloth. Do not submerge the toy in water or use harsh chemicals, as this may damage the electronic components. Regularly check the suction pads for debris and clean them to maintain wall-climbing effectiveness.

### Storage:

When not in use, store the Wall Crawler Gecko and its remote control in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries from the remote control if storing for extended periods to prevent leakage.

## TROUBLESHOOTING

---

- Gecko not responding to remote:

- Ensure both the gecko and remote are powered on.
- Check if the remote control batteries are correctly installed and not depleted. Replace if necessary.
- Ensure the gecko's battery is charged.
- Verify that the gecko and remote are within the operational range (25 ft / 8 m).

- **Gecko not climbing walls effectively:**
  - Ensure the gecko is in Wall Mode.
  - Check that the wall surface is smooth, clean, and free of dust or texture.
  - Clean the gecko's suction pads if they appear dirty or have debris.
  - Ensure the gecko's battery is sufficiently charged, as wall climbing requires more power.
- **Gecko not moving:**
  - Check power switch on gecko.
  - Ensure the gecko's battery is charged.
  - Inspect for any obstructions in the gecko's movement mechanism.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	12 x 2 x 7.5 inches
Item Weight	10.8 ounces
Item Model Number	6071514
Manufacturer Recommended Age	4 years and up
Gecko Battery	Rechargeable via USB
Remote Control Batteries	2 AAA batteries (not included)
Operational Range	Up to 25 ft (8 m)
Manufacturer	Spin Master
Release Date	June 1, 2024

## SAFETY INFORMATION

- Recommended for ages 4 and up.
- **WARNING: CHOKING HAZARD** – Small parts. Not for children under 3 years.
- Adult supervision is recommended during play.
- Do not operate the gecko near water or in wet conditions.
- Avoid operating the gecko on rough or textured surfaces in Wall Mode, as this may damage the suction mechanism.

## WARRANTY AND SUPPORT

This product is covered by the Spin Master Care Commitment. For detailed warranty information, product

support, or to contact customer service, please visit the official Spin Master website or refer to the contact information provided on the product packaging.

For additional information and support, you may also visit the [HEX BOTS Store on Amazon](#).