

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SoBuy](#) /

› [SoBuy FSR159-N Shoe Rack Assembly and User Manual](#)

SoBuy FSR159-N

SoBuy FSR159-N Shoe Rack Assembly and User Manual

Model: FSR159-N

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your SoBuy FSR159-N Shoe Rack. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

2. PRODUCT OVERVIEW

The SoBuy FSR159-N is a freestanding shoe rack designed for entryway, hallway, or living room use. It features three flap doors, each containing two compartments, providing storage for multiple pairs of shoes. An additional open shelf is located at the top for small items.





Image 2.1: Front view of the SoBuy FSR159-N Shoe Rack in its closed position.



Image 2.2: The shoe rack positioned in an entryway, demonstrating its compact design.

3. SAFETY INFORMATION

- Always assemble the product on a clean, flat, and stable surface to prevent damage or injury.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and retighten as necessary.
- This shoe rack includes a fixing device to prevent tipping. It is highly recommended to secure the unit to a wall, especially in households with children or pets, to ensure stability and safety.
- Do not exceed the maximum weight capacity of 19 kg for the entire unit, or 3 kg per flap.
- Keep small parts and packaging materials away from children to avoid choking hazards.

4. INCLUDED COMPONENTS

Please verify that all components listed below are present in your package before beginning assembly. If any parts are missing or damaged, please contact SoBuy customer service.

- Shoe Rack Panels and Hardware

- Accessory Bag (containing screws, dowels, anti-tipping device, etc.)
- Assembly Manual (this document or a printed version)

5. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the SoBuy FSR159-N Shoe Rack is required. Detailed, step-by-step instructions with numbered parts are provided in the separate assembly manual included in your package. Please follow those instructions carefully.

General Assembly Guidelines:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Identify Parts:** Refer to the parts list in your assembly manual to identify each component.
3. **Follow Step-by-Step:** Adhere strictly to the sequence of steps outlined in the assembly manual.
4. **Secure Fasteners:** Ensure all screws and connectors are tightened appropriately. Do not overtighten.
5. **Install Anti-Tipping Device:** Once the shoe rack is fully assembled and in its desired location, use the provided anti-tipping device to secure it to a wall. This is a critical safety step. The back panel has pre-drilled holes to facilitate this.



Image 5.1: Dimensional diagram of the SoBuy FSR159-N Shoe Rack (60 cm W x 24 cm D x 118 cm H).

6. OPERATING INSTRUCTIONS

Storing Shoes:

- Each of the three flaps opens downwards to reveal two compartments for shoe storage.
- Gently pull the handle on each flap to open it.

- Place shoes into the compartments. The design allows for double rows of shoes in each compartment.
- The internal dividers can be adjusted or removed to accommodate different shoe heights, such as boots.
- Push the flap gently upwards until it clicks securely into the closed position.



Image 6.1: The shoe rack with its flaps open, demonstrating shoe storage capacity.



Image 6.2: A detailed view of the flap mechanism and internal shoe compartments.

Using the Top Shelf:

- The open top shelf provides convenient storage for keys, wallets, sunglasses, or decorative items.
- Ensure items placed on the top shelf do not exceed its weight capacity or obstruct the opening of the top flap.



Image 6.3: The top shelf of the shoe rack, suitable for small items or decorations.

7. MAINTENANCE

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dust Protection:** The closed design of the flaps helps protect your shoes from dust accumulation.
- **Scratch Resistance:** The material is designed to be scratch-resistant, but care should still be taken to avoid sharp objects.
- **Regular Checks:** Periodically inspect all connections and fasteners to ensure they remain tight. Retighten if necessary.

8. TROUBLESHOOTING

- **Unit feels wobbly:** Ensure all screws are fully tightened. Verify the anti-tipping device is securely installed to the wall.
- **Flaps do not close properly:** Check for any obstructions inside the compartments. Ensure the flap mechanism is correctly aligned and not damaged.

- **Difficulty during assembly:** Refer to the detailed assembly manual provided. Ensure all parts are correctly identified and oriented according to the diagrams. Do not force parts together.

9. SPECIFICATIONS

Feature	Detail
Model Number	FSR159-N
Dimensions (W x D x H)	60 x 24 x 118 cm (23.62 x 9.45 x 46.46 inches)
Materials	MDF (Medium-Density Fiberboard), Bamboo (pulls/doors)
Total Weight Capacity	19 kg (41.8 lbs)
Capacity per Flap	3 kg (6.6 lbs)
Number of Flaps	3
Number of Shelves	6 (two per flap) + 1 open top shelf
Special Features	Scratch Resistant, Dust Resistant, Anti-tipping device included
Assembly Required	Yes

10. WARRANTY AND SUPPORT

SoBuy is committed to providing quality products. For any questions regarding assembly, missing parts, or product defects, please contact SoBuy customer service. Refer to your purchase documentation for specific warranty terms and contact information.