

## HONITURE X7

# HONITURE X7 Cordless Vacuum Cleaner User Manual

Model: X7

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the HONITURE X7 Cordless Vacuum Cleaner. Keep this manual for future reference.

- Do not operate the vacuum cleaner with a damaged cord or plug.
- Do not use the vacuum cleaner to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Ensure all filters are properly installed before operation.
- Use only as described in this manual. Use only manufacturer's recommended attachments.

## PRODUCT COMPONENTS

---

The HONITURE X7 Cordless Vacuum Cleaner comes with the following components:

- Main Body (Motor and Dust Cup)
- Aluminum Tube (Extension Wand)

- Floor Brush (Main Brush Head)
- Wall Mount Charging Station
- Air Outlet HEPA Filter
- Air Intake HEPA Filter
- Cleaning Tool
- Crevice Brush
- Charger
- User Manual (this document)



Figure 1: Overview of HONITURE X7 Cordless Vacuum Cleaner and its included accessories.

## SETUP AND ASSEMBLY

## 1. Charging the Battery

Before first use, fully charge the battery. The battery can be charged while attached to the main body or separately.

1. **Wall Mount Charging:** Install the wall mount charging station in a convenient location. Connect the charger to the wall mount, then place the vacuum cleaner onto the mount. The display screen will show charging status.
2. **Direct Charging:** Connect the charger directly to the charging port on the main body of the vacuum cleaner.
3. A full charge takes approximately 4-5 hours. The digital display will indicate battery percentage.



Figure 2: Wall mount charging station for the HONITURE X7.

## 2. Assembling the Vacuum Cleaner

1. Insert the aluminum tube into the main body until it clicks into place.
2. Attach the floor brush to the other end of the aluminum tube until it clicks into place.
3. For handheld use, detach the aluminum tube and attach desired accessories (e.g., crevice brush) directly to the main body.



Figure 3: Assembled HONITURE X7 in stick vacuum configuration.

## OPERATING INSTRUCTIONS

### 1. Power On/Off and Suction Adjustment

The HONITURE X7 features a color touch screen for intuitive control.

- Press the power button on the handle to turn the vacuum cleaner on or off.
- Use the touch screen to select one of the three suction levels: **Eco Gear (15KPa)**: For normal dust and small particles, maximizing runtime. **Standard Gear (28KPa)**: For daily cleaning and removing larger particles like kitty litter. **Boost Gear (45KPa)**: For deep cleaning, effectively removing embedded dirt and tangled hair.
- The screen displays battery level, dust cup full status, and fault alarms.



Figure 4: Digital touch screen interface for the HONITURE X7.



Figure 5: Suction modes and their applications.

## 2. Self-Standing Feature

The HONITURE X7 is designed with a self-standing feature, allowing it to stand upright on its own without needing to be propped against a wall or placed on the floor. This provides convenience during cleaning breaks or when storing.

# Intuitive LED Touch Screen



Figure 6: The self-standing design of the HONITURE X7.

### 3. Anti-Tangle Floor Brush and LED Lights

The V-shaped flexible brush is designed to reduce hair entanglement. The brush head also features 6 bright LED lights to illuminate dark areas, ensuring thorough cleaning under furniture and in corners.

# Upgraded 550W Brushless Motor

Highly efficiently locks 99.97% of dust,  
releasing fresh air.



Figure 7: Anti-tangle floor brush and LED headlights.

## MAINTENANCE

---

### 1. Emptying the Dust Cup

It is recommended to empty the 1.5L dust cup after each use to maintain optimal suction performance.

1. Hold the main body over a waste bin.

2. Press the dust cup release button to open the bottom flap and empty the contents.
3. Close the dust cup flap securely.

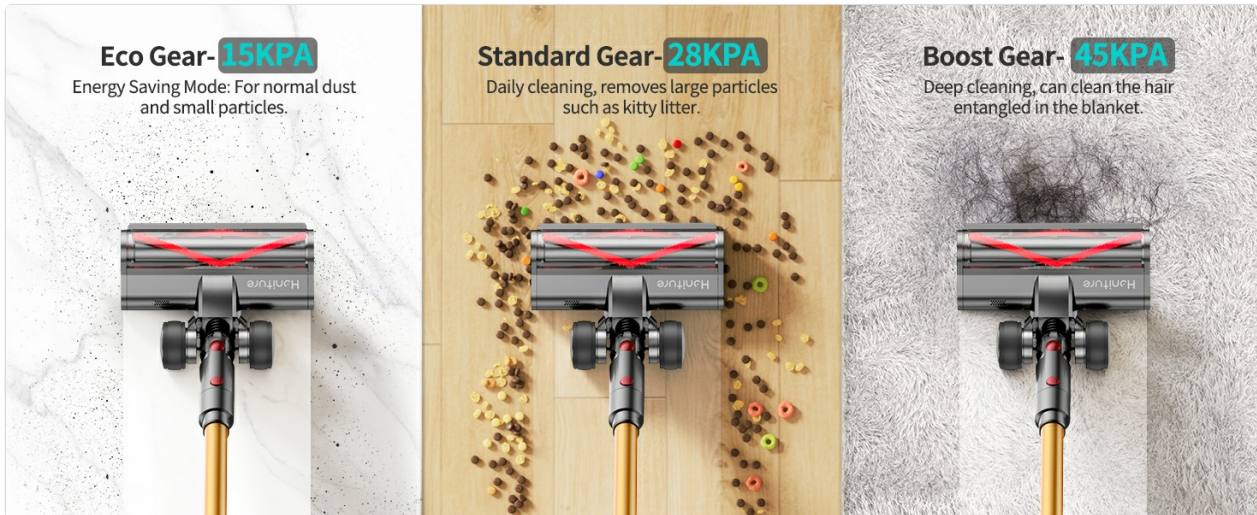


Figure 8: One-click dust bin emptying.

## 2. Cleaning Filters

The HONITURE X7 uses a 5-stage filtration system, including HEPA filters, to capture 99.9% of small dust particles. Regular cleaning of filters is crucial for performance.

1. Twist and remove the dust cup from the main body.
2. Remove the internal filters (Air Intake HEPA and other components).
3. Tap off loose dust. Rinse filters under cold running water until the water runs clear.
4. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a dryer or heat source.
5. Reassemble the filters and dust cup. Ensure they are properly locked in place.



Figure 9: Powerful whole machine HEPA filtration system.

## 3. Cleaning the Floor Brush

Periodically check the floor brush for tangled hair or debris. The anti-tangle design minimizes this, but occasional cleaning may be necessary.

1. Detach the floor brush from the aluminum tube or main body.

2. Remove any tangled hair or debris from the brush roller. A cleaning tool is provided for this purpose.
3. Reattach the brush head securely.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum not turning on	Battery is depleted or not properly installed.	Charge the battery fully. Ensure the battery pack is securely clicked into place.
Loss of suction power	Dust cup is full. Filters are clogged. Brush roller is obstructed.	Empty the dust cup. Clean or replace filters. Remove any obstructions from the brush roller.
Brush roller not spinning	Obstruction in the brush head. Brush head not properly attached.	Check for and remove any obstructions. Ensure the brush head is securely attached to the tube/main body.
Unusual noise	Obstruction in the air path (tube, brush head, dust cup).	Check all parts for blockages and remove them.
Battery not charging	Charger not connected properly. Faulty charger or battery.	Ensure charger is securely plugged into both the vacuum/wall mount and the power outlet. Contact customer support if the issue persists.

## SPECIFICATIONS

Feature	Detail
Model	X7
Motor Power	550W Brushless Motor
Suction Power	Up to 45KPa (3 adjustable levels: 15KPa, 28KPa, 45KPa)
Battery Capacity	2500mAh 8-cell battery
Runtime	Up to 60 minutes (min suction), 30 minutes (max suction)

Feature	Detail
Charging Time	4-5 hours
Dust Cup Capacity	1.5 Litres
Filtration System	5-stage, including HEPA filters (captures 99.9% of particles)
Special Features	Color Touch Screen, Self-Standing Design, Anti-Tangle Floor Brush, LED Headlights
Noise Level	68 dB
Product Dimensions	35 x 28 x 44 cm
Item Weight	2.8 kg

## WARRANTY AND SUPPORT

---

HONITURE offers a 3-year product guarantee for the X7 Cordless Vacuum Cleaner.

For any issues or inquiries, please contact HONITURE customer service:

- **Email:** [support01@honiture.com](mailto:support01@honiture.com)
- **Phone:** 0755-83748050

Please have your model number (X7) and purchase information ready when contacting support.