

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FEELNEEDY](#) /
- › [FEELNEEDY YPD-C004 Wireless Pet Water Fountain User Manual](#)

## FEELNEEDY YPD-C004

# FEELNEEDY YPD-C004 Wireless Pet Water Fountain User Manual

Model: YPD-C004

## 1. PRODUCT OVERVIEW

---

The FEELNEEDY YPD-C004 is a wireless, battery-operated pet water fountain designed to provide fresh, filtered water for cats and dogs. Its cordless design allows for flexible placement, and the motion sensor activation promotes hydration. The fountain features a 4-liter capacity and a multi-stage filtration system.



Image 1.1: The FEELNEEDY YPD-C004 Wireless Pet Water Fountain, showcasing its beige color, stainless steel top, and water flow. A filter is visible in the foreground.

## 2. SAFETY INSTRUCTIONS

---

- Read all instructions before operating the appliance.
- This product is for indoor use only.
- Do not immerse the main unit in water. Only the stainless steel tray and water tank are designed for water contact.
- Ensure the fountain is placed on a stable, level surface to prevent tipping.
- Keep out of reach of children and pets when performing maintenance or charging.
- Use only the provided USB cable for charging.
- Do not allow pets to chew on the charging cable.
- Unplug the fountain before cleaning or when not in use for extended periods.
- Do not operate the fountain if any part is damaged or malfunctioning.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1x FEELNEEDY Wireless Pet Water Fountain (Main Unit)
- 2x Filters
- 1x Tweezer
- 1x Brush
- 1x USB Cable
- 1x User Manual (This document)

## What's in box

1x FeelNeedy Wireless Pet Fountain,  
2x Filters, 1x Tweezer, 1x Brush,  
1x USB Cable, 1x User Manual



Image 3.1: Contents of the FEELNEEDY Pet Water Fountain box, including the fountain, filters, cleaning tools, USB cable, and user manual.

## 4. PRODUCT COMPONENTS

---

Familiarize yourself with the main parts of your pet water fountain:

1. **Stainless Steel Drinking Tray:** The top surface where pets drink.
2. **Water Pump Module:** Contains the pump and motion sensor.
3. **Filter Slot:** Area for inserting the multi-stage filter.
4. **Water Tank:** Holds the main water supply (4 Liters capacity).
5. **Water Level Indicator:** Shows MIN/MAX water levels.
6. **Base Unit:** Houses the battery and electronic components.
7. **USB Charging Port:** Located on the base unit for recharging the internal battery.

## 5. SETUP GUIDE

---

Follow these steps for initial setup:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the stainless steel drinking tray and water tank with mild soap and water. Rinse thoroughly. Do not wash the base unit or pump module with water.
3. **Install Filter:** Soak a new filter in clean water for 5 minutes. Insert the soaked filter into the designated filter slot in the water tank.
4. **Assemble:** Place the water pump module onto the water tank, ensuring it is securely seated. Then, place the stainless steel drinking tray on top.
5. **Fill Water:** Fill the water tank with clean tap water up to the MAX line indicated on the side.
6. **Charge Battery:** Connect the USB cable to the charging port on the base unit and plug it into a compatible USB power adapter (not included). Charge fully before first use. The indicator light will show charging status.
7. **Placement:** Place the assembled fountain in a desired location. The wireless design allows for placement anywhere in your home.



Image 5.1: Illustration demonstrating the flexibility of placing the cordless pet water fountain in different rooms like the living room, bedroom, or balcony.

## 6. OPERATING INSTRUCTIONS

The FEELNEEDY YPD-C004 offers three operating modes:

# Triple Water Modes

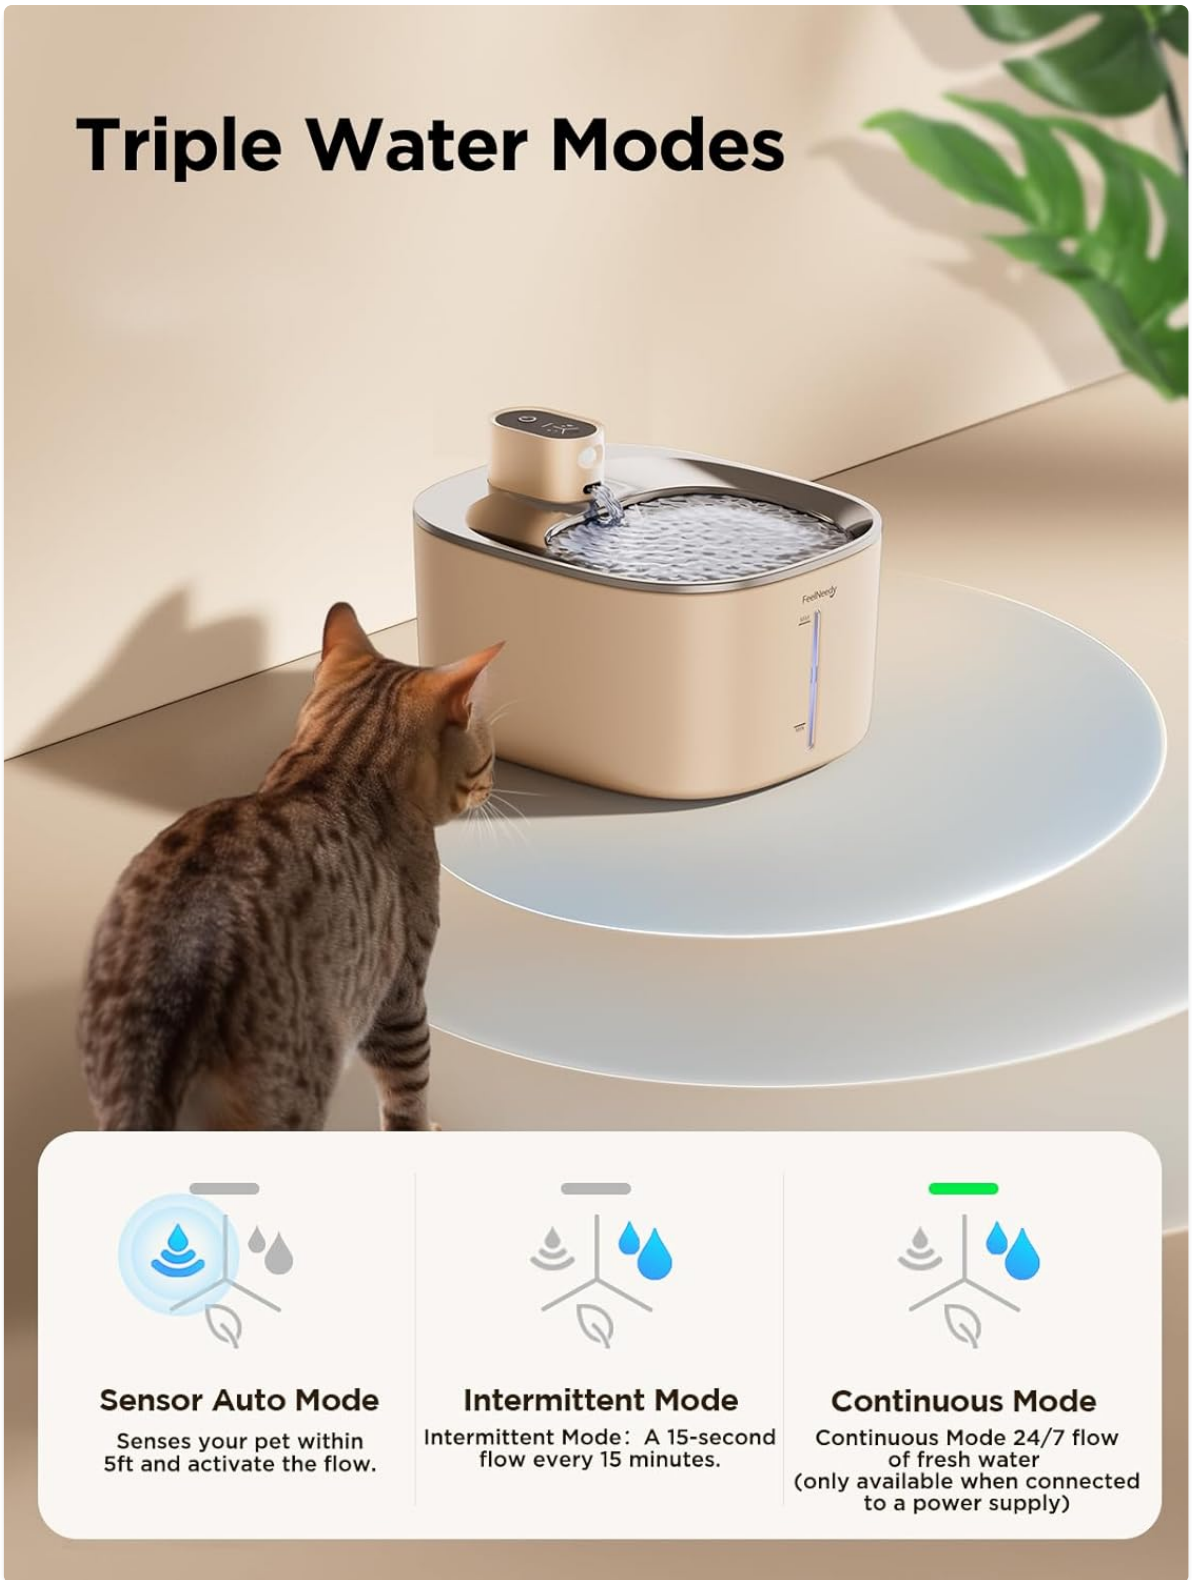


Image 6.1: Visual representation of the three operating modes: Sensor Auto Mode, Intermittent Mode, and Continuous Mode.

## 6.1. Sensor Auto Mode

- **Activation:** The fountain senses your pet within 5 feet and activates the water flow for a short period.
- **Benefit:** Conserves battery life and encourages pets to drink with fresh, moving water.

## 6.2. Intermittent Mode

- **Activation:** The fountain dispenses water for 15 seconds every 15 minutes.
- **Benefit:** Provides regular access to fresh water while still being energy efficient.

### 6.3. Continuous Mode

- **Activation:** Provides a continuous 24/7 water flow.
- **Note:** This mode is only available when the fountain is connected to a power supply via the USB cable.
- **Benefit:** Ensures constant water availability, ideal for multiple pets or warmer climates.

### 6.4. Battery Life

The integrated 4000mAh battery provides extended operation. Battery life varies depending on the selected mode and frequency of use. Under typical usage, the fountain can operate for approximately 45 days on a full charge in Sensor Auto Mode.

# Plenty of Power

With 4000mAh battery, leaving home confidently with non-stop filtered water



Image 6.2: Graphic illustrating the 4000mAh battery capacity and an estimated 45 days of operation.

## 7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance are crucial for the longevity of your fountain and the health of your pets.

### 7.1. Weekly Cleaning

- **Disassemble:** Turn off the fountain and disconnect any power source. Remove the stainless steel tray and water pump module.
- **Clean Tray & Tank:** Wash the stainless steel drinking tray and water tank with warm water and

mild soap. Use the provided brush to clean any residue. Rinse thoroughly to remove all soap.

- **Clean Pump Module:** Carefully open the pump module (refer to pump instructions if available) and clean any debris from the impeller. Rinse the pump module components with water. Do not use soap on the pump.
- **Refill & Reassemble:** Refill the tank with fresh water, reassemble the components, and restart the fountain.

## 7.2. Filter Replacement

The fountain utilizes a 5-stage filtration system to ensure water purity:

1. Primary Sponge
2. Filter Cotton
3. Activated Carbon
4. Ion Exchange Resin
5. Filter Cotton

# Goodbye Dirty Water

5 Stages filtration system ensure the water is as clean and fresh as possible



Image 7.1: Diagram illustrating the 5-stage filtration process within the FEELNEEDY pet water fountain, detailing each layer of the filter.

Filters should be replaced every 2-4 weeks, depending on the number of pets and water quality. Refer to the filter packaging for specific instructions.

- Remove the old filter and dispose of it.
- Soak a new filter in clean water for 5 minutes before installation.
- Insert the new filter into the filter slot.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No water flow	Low battery Water level too low Pump clogged Incorrect mode selected	Recharge the battery Add water to the tank Clean the pump and impeller Check operating mode settings
Fountain is noisy	Low water level Pump not properly seated Debris in pump	Add water to the tank Ensure pump module is securely placed Clean the pump and impeller
Water tastes or smells bad	Filter needs replacement Fountain needs cleaning	Replace the filter Perform a thorough cleaning of all components
Motion sensor not working	Sensor obstructed Low battery Incorrect mode selected	Ensure sensor is clear of debris Recharge the battery Select Sensor Auto Mode

## 9. SPECIFICATIONS

Feature	Detail
Model Number	YPD-C004
Dimensions	24.9 x 23.1 x 14.6 cm (9.8 x 9.1 x 5.7 inches)
Weight	1.05 Kilograms
Capacity	4 Liters (135 fl oz)
Material	Stainless Steel, Acrylonitrile Butadiene Styrene (ABS)
Power Source	Battery Powered (Lithium Polymer, 4000mAh included)
Voltage	5 Volts (DC)
Specific Uses	Indoor
Breed Recommendation	All Breed Sizes (Cats and Dogs)
Allergen Information	BPA-Free

## 10. WARRANTY AND SUPPORT

FEELNEEDY products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official FEELNEEDY website. Please retain your proof of purchase for warranty claims.

