#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Nerf /
- > Nerf N Series Agility Blaster Instruction Manual

#### **Nerf F8629**

# **Nerf N Series Agility Blaster Instruction Manual**

Model: F8629 | Brand: Nerf

### 1. SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

Eyewear is recommended during play (not included) to protect eyes from darts.

Use only official Nerf N Series N1 darts with this blaster. Other darts may not function correctly and could cause damage or jamming.

### 2. PACKAGE CONTENTS

Your Nerf N Series Agility Blaster package includes:

- 1x Nerf N Series Agility Blaster
- 12x Nerf N Series N1 Darts



Image: The Nerf N Series Agility Blaster shown with its included 12 N1 darts.

# 3. SETUP

# 3.1 Loading Darts

- 1. Ensure the blaster is not primed.
- 2. Insert one Nerf N1 dart into each of the six chambers in the rotating drum at the front of the blaster. Push each dart in fully until it is seated securely.



Image: A hand demonstrating how to load a Nerf N1 dart into one of the six chambers of the blaster's revolving drum.

# 4. OPERATING INSTRUCTIONS

# 4.1 Priming the Blaster

To prepare the blaster for firing, grasp the priming slide located at the rear of the blaster. Pull the slide back completely and then release it. The blaster is now primed.

### 4.2 Firing a Dart

Once the blaster is primed, aim at your target. Pull the trigger to fire a single dart. The rotating drum will advance to the next dart automatically. You can fire up to 6 darts consecutively before needing to reload.



Image: The Nerf N Series Agility Blaster illustrating the automatic rotation of the dart drum as darts are fired.



Image: A child demonstrating the aiming posture with the Nerf N Series Agility Blaster.

#### 4.3 Official Product Video

Your browser does not support the video tag.

Video: An official product video from Hasbro Toys - Domestic, showcasing the Nerf N Series Agility Blaster in action, demonstrating its features and ease of use.

# 5. MAINTENANCE

To ensure optimal performance and longevity of your Nerf N Series Agility Blaster:

- Keep the blaster clean and free from dirt or debris. Use a dry cloth to wipe down surfaces.
- Store darts in a clean, dry place to prevent damage or deformation.
- Do not modify the blaster or darts, as this can impair performance and safety.

# 6. TROUBLESHOOTING

### 6.1 Darts are jamming or not firing correctly

- Ensure you are using only official Nerf N Series N1 darts. Using other types of darts (e.g., Nerf Elite darts) will cause jamming.
- Check that darts are fully inserted into the drum chambers.
- Inspect darts for any damage, bending, or wear. Replace damaged darts with new ones.
- Verify that the priming slide is pulled back completely and released before pulling the trigger.

### 7. SPECIFICATIONS

Feature	Detail
Model Number	F8629
Product Dimensions	2.64 x 12.01 x 7.99 inches
Item Weight	14.1 ounces
Manufacturer	Hasbro
Recommended Age	8 years and up
Dart Capacity	6 darts (revolving drum)
Dart Type	Nerf N Series N1 Darts (12 included)

### 8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the official Hasbro website or contact their customer service directly. Specific warranty details may vary by region and purchase location.

© 2025 Nerf / Hasbro. All rights reserved.

#### **Related Documents - F8629**



### Nerf Hyper MACH-100 Blaster: Operating and Safety Instructions

Comprehensive guide for the Nerf Hyper MACH-100 blaster, detailing how to load, fire, clear jams, store the blaster, and important safety precautions. Includes battery information and product compatibility.

