

SKMEI 1796

SKMEI 1796 Digital Watch User Manual

Model: 1796

1. INTRODUCTION

Thank you for choosing the SKMEI 1796 Digital Watch. This manual provides detailed instructions for setting up, operating, and maintaining your watch. Please read it carefully to ensure proper use and to maximize the lifespan of your device.

The SKMEI 1796 is a multi-functional digital watch designed for durability and convenience, featuring time, date, day, alarm, stopwatch, and LED backlight functions. It is also waterproof and shockproof, making it suitable for various activities.

2. PRODUCT OVERVIEW

The SKMEI 1796 watch features a clear digital display and multiple buttons for easy operation. Familiarize yourself with the watch's components:

- **MODE Button:** Used to cycle through different modes (Time, Alarm, Stopwatch).
- **LIGHT Button:** Activates the LED backlight for visibility in low-light conditions.
- **START Button:** Used to start/stop the stopwatch, or to adjust settings in setting mode.
- **RESET Button:** Used to reset the stopwatch, or to select items for adjustment in setting mode.



Figure 2.1: Overview of SKMEI 1796 Watch Components

3. SETUP AND BASIC OPERATION

This section guides you through the initial setup and basic functions of your SKMEI 1796 watch.

3.1 Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter Time Setting Mode. The seconds digits will flash.
2. Press the **RESET** button to cycle through the setting items: Seconds → Hour → Minute → Month → Date → Day of Week.
3. While an item is flashing, press the **START** button to adjust its value.
4. Once all settings are complete, press the **MODE** button to return to normal time display.

3.2 Setting the Alarm

1. From the normal time display, press the **MODE** button twice to enter Alarm Setting Mode. The hour digits will flash.
2. Press the **RESET** button to switch between setting the Hour and Minute.

3. While the desired item is flashing, press the **START** button to adjust its value.
4. To activate/deactivate the alarm, press the **START** button while in normal time display and then press the **RESET** button. An alarm icon will appear/disappear.
5. Press the **MODE** button to return to normal time display.

3.3 Using the Stopwatch

1. From the normal time display, press the **MODE** button once to enter Stopwatch Mode. The display will show '00:00:00'.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to '00:00:00'.
5. Press the **MODE** button to return to normal time display.

3.4 Activating the LED Backlight

Press the **LIGHT** button at any time to illuminate the display for a few seconds.



Figure 3.1: Function Overview

4. MAINTENANCE

Proper care will ensure the longevity and performance of your SKMEI 1796 watch.

4.1 Water Resistance (30M)

Your watch is water resistant up to 30 meters (3 ATM). This means it is suitable for daily use, splashes, and brief immersion in water. It is **not** recommended for swimming, diving, or prolonged water activities. Do not operate buttons while the watch is wet or submerged.

4.2 Cleaning

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid using chemical cleaners, which can damage the watch's finish or strap material.

4.3 Battery Replacement

The watch uses 1 CR123A battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance is maintained.



Figure 4.1: Soft PU Bracelet

5. TROUBLESHOOTING

If you encounter any issues with your SKMEI 1796 watch, refer to the following common problems and solutions:

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery (refer to Section 4.3).
- **Time is incorrect:** Re-set the time and date according to Section 3.1. Ensure you are in the correct 12/24 hour format.
- **Buttons are unresponsive:** Ensure the watch is not wet. If the issue persists, a battery replacement might be necessary, or there could be an internal malfunction requiring professional service.
- **Alarm does not sound:** Check if the alarm function is activated (alarm icon visible on display). Ensure the alarm time is set correctly.

If problems persist after attempting these solutions, please contact your retailer or SKMEI customer support for further assistance.

6. SPECIFICATIONS

Detailed technical specifications for the SKMEI 1796 Digital Watch:

Feature	Specification
Brand	SKMEI
Model Number	1796
Movement Type	Digital
Crystal Material	Glass
Case Material	Zinc Alloy
Band Material	PU (Polyurethane)
Buckle Material	Stainless Steel
Water Resistance	30M (3 ATM)
Functions	Time, Chronograph (Stopwatch), Alarm, Date, Week, LED Light, 12/24 Hour Format
Case Width	39mm
Case Thickness	12mm
Band Width	18mm
Watch Length	240mm
Weight	64g
Battery Type	1 CR123A (included)
Department	Unisex



PRODUCT PARAMETER



Basic Information

BRAND: SKMEI

MODEL: 1796

WEIGHT: 64g

MOV' T: DIGITAL

CRYSTAL: GLASS

CASE: Zinc alloy

BAND: PU

BUCKLE: STAINLESS STEEL

W / P : 30M

FUNCTION: Time, Chrono, Alarm, Date, Week, LED Light, 12/24 hour clock.



Case width: 39mm



Case thickness: 12mm



Band Width: 18mm



Watch length: 240m

Figure 6.1: Product Parameters

7. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact the retailer from whom you purchased the SKMEI 1796 watch. If you require technical support or have questions not covered in this manual, please reach out to SKMEI customer service or your authorized dealer.