

[Manuals.plus](#) /

› [ROMP](#) /

› ROMP Shine X Clitoral Stimulator User Manual

ROMP Shine X

ROMP Shine X Clitoral Stimulator User Manual

Model: Shine X

1. PRODUCT OVERVIEW

The ROMP Shine X is a clitoral stimulator designed for personal pleasure. It utilizes Pleasure Air Technology to deliver contactless air pressure waves. This device is USB rechargeable, waterproof, and features multiple intensity levels.



Image: The ROMP Shine X clitoral stimulator, showcasing its ergonomic design and dual-tone pink color.

Key Features:

- **Pleasure Air Technology:** Contactless air pressure wave stimulation.
- **10 Intensity Levels:** Customizable sensations from gentle to powerful.
- **USB Rechargeable:** Convenient charging for on-the-go use.
- **Waterproof (IPX7):** Suitable for use in water and easy cleaning.
- **Body-Safe Silicone:** Made from high-quality, safe materials.

ROMP



Pleasure air technology



Run time 45mins



10 Intensity levels



Body safe silicone

Image: A graphic highlighting the key features of the ROMP Shine X, including Pleasure Air Technology, 45-minute run time, 10 intensity levels, and body-safe silicone construction.

2. SETUP AND CHARGING

Initial Charge:

1. Locate the USB charging port on your ROMP Shine X.

2. Connect the provided USB charging cable to the device and a suitable USB power source (e.g., computer, wall adapter).
3. Allow the device to charge for approximately 120 minutes (2 hours) for a full charge. A full charge provides up to 45 minutes of use.



Image: The ROMP Shine X device shown connected to its USB charging cable, indicating the charging process.

Preparation for Use:

Before each use, it is recommended to apply a water-based lubricant to the stimulation head of the device and the area you intend to stimulate. This ensures a comfortable and smooth experience.

3. OPERATING INSTRUCTIONS

Power On/Off:

- To turn the device **ON**, press and hold the **(+) button** for 2 seconds.
- To turn the device **OFF**, press and hold the **(-) button** for 2 seconds.

Adjusting Intensity:

- Once the device is on, briefly press the **(+) button** to increase the intensity level.
- Briefly press the **(-) button** to decrease the intensity level.
- The ROMP Shine X features 10 distinct intensity levels.

Usage:

1. Ensure the device is charged and lubricated.
2. Turn the device on.
3. Position the stimulation head gently over the desired area.
4. Adjust the intensity to your preference using the (+) and (-) buttons.



Image: An illustration demonstrating the recommended steps for using the ROMP Shine X, including applying lubricant and proper positioning.

4. MAINTENANCE AND CARE

Cleaning:

The ROMP Shine X is waterproof (IPX7 rated), making it easy to clean. After each use:

1. Wash the device with warm water and a mild soap.
2. Rinse thoroughly to remove all soap residue.
3. Dry the device completely with a lint-free cloth before storing.

Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone material.

ROMP



Image: The ROMP Shine X shown partially submerged in water, illustrating its waterproof design for easy cleaning.

Storage:

Store your ROMP Shine X in a clean, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent potential damage or reactions.

5. TROUBLESHOOTING

If you encounter any issues with your ROMP Shine X, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not fully charged.	Ensure the device is fully charged for 120 minutes. Press and hold the (+) button for 2 seconds to power on.

Problem	Possible Cause	Solution
Weak or no suction.	Incorrect positioning or low intensity setting.	Adjust the device position to ensure proper contact. Increase intensity using the (+) button. Ensure the device is fully charged.
Buttons are unresponsive.	Temporary software glitch or low battery.	Charge the device fully. Try turning the device off and on again.
Rubber tip detaches easily.	Normal wear or improper attachment.	Re-attach the rubber tip securely. If it continues to detach, contact customer support.

If the problem persists after attempting these solutions, please refer to the Warranty and Support section.

6. SPECIFICATIONS

- **Model:** Shine X
- **Brand:** ROMP
- **Manufacturer:** WOW Tech
- **Product Dimensions:** 7.87 x 4.13 x 2.36 inches
- **Weight:** 3.63 ounces
- **Battery:** 1 Lithium Ion battery (included)
- **Water Resistance Level:** Waterproof (IPX7)
- **Color:** Pink

ROMP



Image: A technical diagram illustrating the length and width measurements of the ROMP Shine X device.

7. WARRANTY AND SUPPORT

Warranty Information:

ROMP offers a **2-year warranty** on all its products, including the Shine X. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, concerns, or warranty claims, please contact ROMP customer support through their official website or the retailer from whom you purchased the product. Provide your model number (Shine X) and purchase details for efficient assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question