

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Dr. Scholl's Work](#) /
- › Dr. Scholl's Callus Remover Electronic Foot File Instruction Manual

Dr. Scholl's Work 90000470

Dr. Scholl's Callus Remover Electronic Foot File Instruction Manual

Model: 90000470

INTRODUCTION

The Dr. Scholl's Callus Remover Electronic Foot File is designed to gently and effectively remove tough, callused skin from your feet. Its rotating roller head works to exfoliate hard skin, promoting smoother and more comfortable feet. This manual provides essential information for proper use and care of your device.



Image: The Dr. Scholl's Callus Remover Electronic Foot File, presented in its retail packaging, highlighting its features and included batteries.

SAFETY INFORMATION

- Do not use in the same area for more than 3-4 seconds at a time.
- Stop using if skin becomes sore or inflamed.
- Keep out of reach of children.
- Avoid contact with skin and eyes.
- Do not submerge the device in water.
- This device is not suitable for diabetics or individuals with poor blood circulation. Consult a physician before use if you have these conditions.
- Remove batteries from the device when not in use for extended periods.



Image: The reverse side of the product packaging, displaying important safety warnings and usage precautions.

SETUP

1. **Battery Installation:** The device requires 4 AAA batteries (included). Open the battery compartment, insert the batteries according to the polarity indicators, and securely close the compartment.
2. **Roller Head Attachment:** Ensure the roller head is securely inserted into the unit before use. Do not operate the device without the roller head properly attached.

PERFECT FOR TRAVEL



Image: Four AAA batteries, indicating they are included for immediate use with the device.



EFFORTLESSLY EXFOLIATE even very hard skin

Image: The electronic foot file with its textured roller head securely in place, ready for operation.

OPERATING INSTRUCTIONS

1. **Power On:** Turn the device ON by pressing the power button located on the front of the unit.
2. **Application:** Gently glide the rotating roller head over areas of hard skin on your feet. The dead skin will gradually exfoliate. Do not apply excessive pressure; the device is designed to stop if pressed too hard to prevent injury.
3. **Check Progress:** Turn the device OFF periodically to check if the desired smoothness has been achieved. If further exfoliation is needed, repeat the process. Remember not to use on the same area for more than 3-4 seconds at a time. Stop immediately if skin becomes sore or inflamed.
4. **Clean Feet:** After use, wipe or rinse your feet to remove any excess dead skin particles.
5. **Moisturize:** Thoroughly dry your skin and apply a moisturizer for optimal results.



QUICKLY & GENTLY
buffs away hard, callused skin

Image: A user applying the electronic foot file to the heel area, demonstrating the gentle buffing action.



Feet feel
**SMOOTH AND
COMFORTABLE**

Image: A close-up view of the device's 360-degree rotating head as it exfoliates hard skin on the foot.

MAINTENANCE

- **Cleaning the Roller Head:** The roller head can be easily removed for cleaning. Rinse it under water to remove dead skin particles and allow it to air dry completely before reattaching or storing.
- **Device Cleaning:** Wipe the main body of the device with a dry or slightly damp cloth. Do not submerge the device in water.
- **Battery Care:** To prolong battery life and prevent corrosion, remove the AAA batteries from the device after each use or if the device will not be used for an extended period.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and moisture.

4X AAA BATTERIES INCLUDED



Image: The compact design of the electronic foot file, suitable for easy handling and storage, making it convenient for travel.

TROUBLESHOOTING

- **Device Not Turning On:**
 - Check if the batteries are inserted correctly according to polarity.
 - Replace old batteries with new AAA batteries.
- **Reduced Speed or Power:**
 - This often indicates low battery power. Replace all four AAA batteries.
 - Ensure the roller head is clean and free from debris that might impede its rotation.
 - Avoid applying excessive pressure, as the device is designed to slow down or stop under heavy load to prevent skin irritation.
- **Skin Irritation:**
 - Discontinue use immediately if skin becomes sore, red, or inflamed.
 - Ensure you are not using the device on the same area for more than 3-4 seconds at a time.
 - Do not use on broken, irritated, or infected skin.

SPECIFICATIONS

Model Number	90000470
Brand	Dr. Scholl's Work
Power Source	4 x AAA Batteries
Material	Plastic
Color	Blue
Item Weight	0.17 Kilograms (approximately 5.82 ounces)
Package Dimensions	9.69 x 3.86 x 2.13 inches

WARRANTY INFORMATION

For detailed warranty information, please refer to the documentation included with your product or visit the official Dr. Scholl's website. Warranty terms and conditions may vary.

SUPPORT

If you have any questions, require assistance, or need to report an issue with your Dr. Scholl's Callus Remover Electronic Foot File, please contact Dr. Scholl's customer service:

- **Phone:** 1-866-360-3226
- **Website:** www.drscholls.com