

## Transformers F9188

# Transformers Legacy United Voyager Class G1 Universe Soundwave Instruction Manual

Model: F9188

## INTRODUCTION

This instruction manual provides detailed guidance for the Transformers Legacy United Voyager Class G1 Universe Soundwave action figure. This collectible figure allows fans to convert Soundwave between his iconic robot mode and a classic cassette player mode. The set also includes three mini-figures: G1 Universe Buzzsaw, Ravage, and Decepticon Rumbler, each capable of transforming into cassette tape mode.

Familiarize yourself with the components and transformation steps to fully enjoy this figure.

## SAFETY INFORMATION

**WARNING: CHOKING HAZARD – Small parts may be generated. Not for children under 3 years.**

Always supervise young children during play. Keep small components away from infants and pets.

## PACKAGE CONTENTS

Your Transformers Legacy United Voyager Class G1 Universe Soundwave package should contain the following items:

- 1 x G1 Universe Soundwave Action Figure
- 1 x G1 Universe Buzzsaw Mini-Figure (converts to cassette tape)
- 1 x G1 Universe Ravage Mini-Figure (converts to cassette tape)
- 1 x G1 Universe Decepticon Rumbler Mini-Figure (converts to cassette tape)



Image: G1 Universe Soundwave in robot mode, accompanied by his three cassette-bot allies: Buzzsaw (bird-like), Ravage (panther-like), and Decepticon Rumbler (humanoid).

## SETUP AND INITIAL HANDLING

---

Carefully remove all components from the packaging. It is recommended to retain the packaging for future storage or reference. Inspect all figures for any visible defects or damage. Before attempting transformation, gently articulate the joints of each figure to ensure smooth movement. Some joints may be stiff initially and require careful manipulation.

## OPERATING INSTRUCTIONS: TRANSFORMATION

---

The Transformers Legacy United Soundwave figure and its accompanying mini-figures are designed for conversion between robot and alternate modes. Follow the general guidelines below for transformation. Refer to the visual guide for specific step sequences.

### Soundwave: Robot to Cassette Player (18 Steps)

1. Begin with Soundwave in robot mode.
2. Fold and collapse the legs to form the base of the cassette player.
3. Rotate and position the arms to align with the sides of the alternate mode.
4. Adjust the torso and head to complete the cassette player form. Ensure all panels snap securely into place.



Image: G1 Universe Soundwave transformed into his cassette player alternate mode, with Buzzsaw, Ravage, and Decepticon Rumbler in their compact cassette tape forms.

### Mini-Figures: Robot/Beast to Cassette Tape

- **G1 Universe Buzzsaw:** Converts to cassette tape in 4 steps. Fold wings, legs, and head to compact the figure into a rectangular cassette shape.
- **G1 Universe Ravage:** Converts to cassette tape in 7 steps. Collapse the legs and body, folding them into a flat, rectangular cassette form.
- **G1 Universe Decepticon Rumbler:** Converts to cassette tape in 8 steps. Fold the limbs and torso to achieve the compact cassette shape.

Once transformed into cassette mode, these mini-figures can be inserted into Soundwave's chest compartment in his cassette player mode.





Image: Visual guide illustrating the transformation sequences for G1 Universe Soundwave (18 steps), Decepticon Rumble (8 steps), Buzzsaw (4 steps), and Ravage (7 steps).

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe dust and dirt from the figures. Avoid using harsh chemicals or abrasive materials, as these can damage the paint or plastic.
- **Storage:** Store figures in a cool, dry place away from direct sunlight and extreme temperatures. Prolonged exposure to sunlight can cause discoloration.
- **Handling:** Always handle figures by their main body parts. Avoid excessive force when transforming or posing, especially on smaller joints or thin plastic sections.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
Figure parts do not align correctly in alternate mode.	Ensure all transformation steps have been followed precisely. Some panels or tabs may need to be firmly pushed into place. Refer to the visual transformation guide.
Joints are too stiff or too loose.	Stiff joints may loosen with gentle, repeated articulation. For loose joints, there is typically no user-serviceable fix. Avoid excessive force on stiff joints to prevent breakage.
Mini-figure parts (e.g., Ravage's legs) detach easily.	Some smaller parts are designed to detach and reattach for safety or transformation. Reattach the part carefully. If breakage occurs, contact customer support.
Soundwave's alt mode appears to bow or not hold together.	Double-check that all tabs and slots are fully engaged. Apply gentle, even pressure across the figure to ensure all connecting points are secure.

## SPECIFICATIONS

**Product Dimensions:** 8.74 x 4.02 x 10.51 inches

**Item Weight:** 10.6 ounces

**Model Number:** F9188

**Manufacturer Recommended Age:** 8 years and up

**Release Date:** October 1, 2024

**Language:** English

**Manufacturer:** Hasbro

## WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please contact the manufacturer, Hasbro. You can typically find contact information on the official Hasbro website or through the retailer where the product was purchased. Please have your model number (F9188) and purchase details ready when contacting support.

## OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were provided in the product data for this manual. For additional visual guides or demonstrations, please check the official Transformers or Hasbro channels online.

