

Xprinter XP-P323B

Xprinter XP-P323B Portable Thermal Printer User Manual

Model: XP-P323B

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Xprinter XP-P323B Portable Thermal Printer. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage. The XP-P323B is designed for printing receipts and labels, offering portability and high-speed capabilities for various business needs.

2. SAFETY INFORMATION

- Do not expose the printer to water or excessive moisture.
- Avoid dropping the printer or subjecting it to strong impacts.
- Use only the specified power adapter and accessories.
- Keep the printer away from heat sources and direct sunlight.
- Do not attempt to disassemble or repair the printer yourself. Contact qualified service personnel.
- Ensure proper ventilation during operation.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Xprinter XP-P323B Portable Thermal Printer
- Power Adapter (not explicitly listed but standard)
- USB Cable (not explicitly listed but standard)
- Sample Thermal Paper Roll (not explicitly listed but standard)
- User Manual (this document)

4. PRODUCT OVERVIEW

The Xprinter XP-P323B is a compact and efficient thermal printer designed for various printing tasks. It supports

NV logo download and picture printing (BMP format), along with concentration adjustment for print quality.

4.1. Printer Components



Figure 1: Front view of the Xprinter XP-P323B Portable Thermal Printer, showing the power button, display, and a sample label being printed.



Figure 2: Side view of the Xprinter XP-P323B, highlighting its compact design and the Xprinter logo.



Figure 3: Underside view of the Xprinter XP-P323B, showing the base and the removable battery compartment.

5. SETUP

5.1. Charging the Battery

1. Connect the power adapter to the printer's charging port.
2. Plug the power adapter into a wall outlet.
3. The charging indicator light will illuminate. Allow the printer to charge fully before first use.

5.2. Loading Thermal Paper/Labels

1. Open the paper compartment cover by gently pushing the release latch.
2. Insert the thermal paper roll with the printing surface facing the print head. Ensure the roll is seated correctly.
3. Pull a small amount of paper out past the print head.
4. Close the paper compartment cover firmly until it clicks into place.

5.3. Connecting to a Device

The XP-P323B supports USB and Bluetooth connectivity.

5.3.1. USB Connection

1. Connect the printer to your computer using the provided USB cable.
2. Install the necessary printer drivers (available from the Xprinter website or included software).

5.3.2. Bluetooth Connection (for Smartphones/iOS)

1. Ensure the printer is powered on.
2. On your smartphone or iOS device, go to Bluetooth settings and enable Bluetooth.
3. Search for available devices and select 'XP-P323B' (or similar name).
4. Enter the pairing PIN if prompted (refer to printer documentation for default PIN, often '0000' or '1234').
5. Once paired, you can use a compatible printing application to send print jobs.

6. OPERATING THE PRINTER

6.1. Basic Printing

1. Ensure the printer is connected to your device and has paper loaded.
2. Open the document or image you wish to print on your connected device.

- 3. Select the print option within your application.
- 4. Choose 'XP-P323B' as the printer.
- 5. Adjust print settings as needed (e.g., paper size, print quality).
- 6. Initiate the print job.

6.2. NV Logo and Picture Printing

The printer supports downloading and printing NV (Non-Volatile) logos and BMP format pictures. This functionality typically requires specific software or commands. Refer to the advanced programming guide or software documentation for detailed instructions on how to upload and print custom logos or images.

6.3. Adjusting Print Concentration

Print concentration can be adjusted to optimize print quality. This setting is usually accessible through the printer driver software on a computer or within the settings of a compatible mobile printing application. Consult your software's help section for specific steps.

7. MAINTENANCE

7.1. Cleaning the Printer

- **Exterior:** Wipe the exterior of the printer with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Print Head:** The thermal print head should be cleaned periodically to ensure optimal print quality. Use a cotton swab lightly dampened with isopropyl alcohol. Gently wipe the print head surface. Allow it to dry completely before closing the cover and resuming operation.
- **Paper Path:** Remove any paper dust or debris from the paper path using a soft brush or compressed air.

7.2. Storage

When not in use for extended periods, store the printer in a cool, dry place, away from direct sunlight and extreme temperatures. Remove the paper roll if storing for a very long time to prevent dust accumulation.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer does not power on	Low battery; Power adapter not connected; Faulty power adapter	Charge the battery; Ensure power adapter is securely connected; Try a different power outlet or adapter
No print output	No paper; Paper loaded incorrectly; Printer not connected; Driver issue	Load paper correctly; Re-establish connection; Reinstall printer drivers
Poor print quality	Dirty print head; Low print concentration; Low battery	Clean the print head; Adjust print concentration in software; Charge the battery
Bluetooth connection fails	Bluetooth off on device; Incorrect pairing PIN; Printer out of range	Enable Bluetooth; Re-enter correct PIN; Move device closer to printer

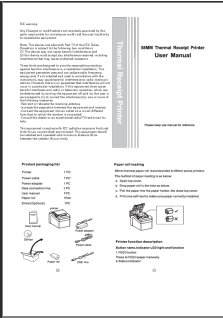 
9. SPECIFICATIONS


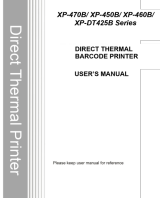 
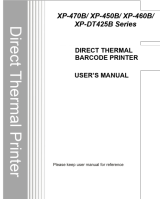 
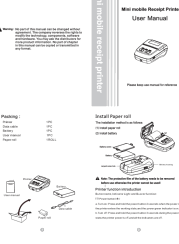 
Brand	Xprinter
Model Number	XP-P323B
Item Dimensions (D x W x H)	15D x 7W x 10H centimeters
Connectivity Technology	USB
Printer Technology	Thermal
Special Features	Portable
Color	Grey
Compatible Devices	Smartphones
Controller Type	iOS
Maximum Media Size	4 x 6 inch
Print Media	Labels
Paper Size	4 x 6 inch
Printer Output	Monochrome
Maximum Print Speed (Black and White)	40 mm/s (estimated from context)
Item Weight	300 Grams

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Xprinter website. Keep your purchase receipt as proof of purchase for warranty claims.

Related Documents - XP-P323B

	<p>58MM Thermal Receipt Printer User Manual</p> <p>User manual for the 58MM Thermal Receipt Printer, detailing FCC compliance, product packaging, paper loading instructions, and printer function descriptions.</p>
---	--

	<p>Thermal Receipt Printer User Manual - Xprinter</p> <p>User manual for the Xprinter Thermal Receipt Printer, covering setup, operation, DIP switch functions, troubleshooting, and maintenance.</p>
	<p>Xprinter XP-470B/XP-450B/XP-460B/XP-DT425B Series Direct Thermal Barcode Printer User Manual</p> <p>User manual for the Xprinter XP-470B, XP-450B, XP-460B, and XP-DT425B series direct thermal barcode printers. This guide covers setup, operation, maintenance, troubleshooting, and LED/button functions.</p>
	<p>Xprinter XP-470B/XP-450B/XP-460B/XP-DT425B Series Direct Thermal Barcode Printer User's Manual</p> <p>User's manual for the Xprinter XP-470B, XP-450B, XP-460B, and XP-DT425B series direct thermal barcode printers. This guide covers setup, operation, maintenance, troubleshooting, and advanced features for optimal performance.</p>
	<p>Xprinter XP-P810 Mini Mobile Receipt Printer User Manual</p> <p>Comprehensive user manual for the Xprinter XP-P810 Mini Mobile Receipt Printer. Includes setup guide, operational instructions, maintenance tips, and troubleshooting advice for this portable thermal receipt printer.</p>
	<p>Mini Mobile Receipt Printer User Manual - XP-P501A</p> <p>User manual for the Mini Mobile Receipt Printer, model XP-P501A, detailing its features, installation, operation, maintenance, and compliance information.</p>



[pdf] Datasheet

p323b 2021052001 cdr Administrator Брошура характеристик принтера этикеток Xprinter XP P323B
Мобильный принтер СТЦ Исток datasheet xprinter xp istok stc ua ru index controller attachment id 1093
Мобільний P323B Істок 8 alpha numeric bitmap fonts Windows are able from software Scan QR code to
checkout website for more update information uk ИстокМобільний Істок8 information datasheet
istokdatasheet istok16214960716413stc 1093stc 1093img5541 weyesimg xprintertech addon
16214960716413 |||

...

lang: score:12 filesize: 1.07 M page_count: 2 document date: 2021-05-20