

## Sokany SK-275

# Sokany Kitchen Master Stand Mixer SK-275 User Manual

Model: SK-275 | Brand: Sokany

## 1. INTRODUCTION

---

Thank you for choosing the Sokany Kitchen Master Stand Mixer SK-275. This appliance is designed to simplify your baking and cooking tasks with its powerful 1800W motor, 8-liter capacity, and 6-speed settings. Please read this manual carefully before operating the mixer to ensure safe and efficient use. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before use.
- Do not immerse the motor unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Always ensure the mixer head is locked down before operation.

### 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Sokany Kitchen Master Stand Mixer.



Image showing the complete Sokany Kitchen Master Stand Mixer SK-275 with its main components: the motor unit, stainless steel mixing bowl, and various attachments.

#### Main Components:

- **Motor Unit:** The main body housing the motor and control panel.
- **Mixing Bowl:** An 8-liter stainless steel bowl for ingredients.

- **Dough Hook:** For kneading heavy doughs (e.g., bread, pizza).
- **Beater:** For mixing medium-heavy mixtures (e.g., cakes, cookies, batters).
- **Whisk:** For whipping light ingredients (e.g., egg whites, cream).
- **Splash Guard:** To prevent ingredients from splashing out of the bowl during mixing.

## 4. SETUP

---

1. **Unpack:** Carefully remove all parts from the packaging. Dispose of packaging materials responsibly.
2. **Clean:** Before first use, wash the mixing bowl, dough hook, beater, whisk, and splash guard in warm, soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the mixer on a clean, dry, flat, and stable surface. Ensure there is enough space around the mixer for ventilation and operation.
4. **Attach Bowl:** Place the stainless steel mixing bowl onto the base and turn it clockwise until it locks securely into place.
5. **Attach Accessory:** Select the desired attachment (dough hook, beater, or whisk). Insert the attachment into the shaft and turn it slightly until it locks.
6. **Lower Head:** Lower the mixer head until it clicks into the locked position.

## 5. OPERATING INSTRUCTIONS

---

1. **Add Ingredients:** Place your ingredients into the mixing bowl. Do not overfill the bowl.
2. **Secure Splash Guard:** If desired, attach the splash guard to the mixer head.
3. **Plug In:** Connect the power cord to a suitable electrical outlet.
4. **Select Speed:** Use the control panel (touch controls) to select the desired speed from 1 to 6. Start with a low speed and gradually increase as needed to avoid splashing.
5. **Mix:** Allow the mixer to operate until ingredients are thoroughly combined or to the desired consistency.
6. **Stop:** Turn the speed control to the '0' (off) position to stop the mixer.
7. **Unplug:** Always unplug the mixer from the power outlet after use.
8. **Remove Attachment and Bowl:** Lift the mixer head, then remove the attachment and the mixing bowl.

### Recommended Speed Settings:

- **Speed 1-2:** For kneading dough, mixing heavy batters.
- **Speed 3-4:** For mixing cakes, cookies, and general batters.
- **Speed 5-6:** For whipping egg whites, cream, and light mixtures.

## 6. CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your mixer.

1. **Before Cleaning:** Always unplug the mixer from the power outlet and allow it to cool down before cleaning.
2. **Attachments and Bowl:** The stainless steel mixing bowl, dough hook, beater, whisk, and splash guard can be washed in warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots or corrosion. **Note: This item is NOT dishwasher safe.**

3. **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the motor unit in water or any other liquid.
4. **Storage:** Store the mixer and its accessories in a clean, dry place. Ensure the power cord is neatly wrapped and not kinked.

## 7. TROUBLESHOOTING

If you encounter any issues with your mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet faulty; mixer head not locked.	Ensure power cord is securely plugged in. Test outlet with another appliance. Ensure mixer head is fully locked down.
Attachments not rotating.	Attachment not properly installed.	Remove and re-install the attachment, ensuring it clicks into place.
Unusual noise or smell.	Overloading; foreign object; motor issue.	Reduce the amount of ingredients. Turn off and unplug, check for any obstructions. If problem persists, contact customer support.
Mixer stops during operation.	Overheating protection activated.	Turn off and unplug the mixer. Allow it to cool down for at least 30 minutes before restarting. Reduce load for next use.

If the problem persists after trying these solutions, please contact customer support.

## 8. SPECIFICATIONS

<b>Brand Name</b>	Sokany
<b>Model Number</b>	SK-275
<b>Color</b>	Black
<b>Material</b>	Stainless Steel
<b>Special Features</b>	Scratch Resistant
<b>Capacity</b>	8 Liters
<b>Power</b>	1800 Watts
<b>Number of Speeds</b>	6
<b>Control Type</b>	Touch
<b>Item Weight</b>	2000 grams
<b>Dishwasher Safe</b>	No

<b>Included Components</b>	Stainless Steel Bowl
<b>Blade Material</b>	Stainless Steel
<b>Bowl Material</b>	Stainless Steel

## 9. WARRANTY AND SUPPORT

This Sokany Kitchen Master Stand Mixer SK-275 comes with a **12-month warranty** from the date of purchase, covering manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For technical support, troubleshooting assistance, or warranty inquiries, please contact our customer service department. Contact details can typically be found on the product packaging or the retailer's website where you purchased the product.