

## Darlee 201010-7PC-60GD

# Darlee Santa Barbara 7 Piece Cast Aluminum Patio Fire Pit Dining Set User Manual

Model: 201010-7PC-60GD

## INTRODUCTION

---

This manual provides essential information for the safe assembly, operation, and maintenance of your Darlee Santa Barbara 7 Piece Cast Aluminum Patio Fire Pit Dining Set. Please read all instructions carefully before assembly and use to ensure proper function and longevity of your product.

## SAFETY INFORMATION

---

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, or injury to persons.

- Keep children and pets away from the fire pit area.
- Do not use the fire pit in an enclosed space. Ensure adequate ventilation.
- Ensure the fire pit is on a level, non-combustible surface.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Always turn off the gas supply when the fire pit is not in use.
- Allow the fire pit to cool completely before moving or covering.

## PACKAGE CONTENTS

---

Verify all components are present before beginning assembly.

- 1 x 60-inch Round Fire Pit Dining Table
- 6 x Dining Arm Chairs
- 6 x Sesame Polyester Cushions
- 1 x Lid for Fire Pit Burner
- 1 x Bag of Ocean Blue Fire Glass

- Hardware Pack (bolts, washers, nuts, wrench)



Image: The complete Darlee Santa Barbara 7 Piece Cast Aluminum Patio Fire Pit Dining Set, showing the round fire pit table and six dining armchairs with cushions, set up in an outdoor patio area.

## SETUP AND ASSEMBLY

---

Assembly requires two adults and approximately 1-2 hours. Do not overtighten bolts until all components are loosely assembled.

### Tools Required:

- Adjustable Wrench (provided)
- Phillips Head Screwdriver (not provided)

### Assembly Steps:

### 1. Step 1: Assemble Dining Chairs

Attach the chair back to the seat frame using the provided bolts and washers. Then, attach the front legs to the seat frame. Ensure all connections are secure but do not fully tighten yet.



Image: A close-up view of the Darlee Santa Barbara dining armchair, showcasing its intricate cast aluminum backrest design and



sturdy frame, without the cushion.

Once all parts are aligned, fully tighten all bolts. Repeat for all six chairs.

## 2. **Step 2: Assemble Fire Pit Dining Table Base**

Connect the side panels of the fire pit table base. Ensure the propane tank access door is correctly oriented.

## 3. **Step 3: Attach Tabletop to Base**

Carefully place the 60-inch round tabletop onto the assembled base. Align the pre-drilled holes and secure with bolts. Ensure the fire pit burner opening is centered.



Image: A detailed view of the Darlee Santa Barbara 60-inch round fire pit dining table with the fire lit, showing the intricate tabletop design and the central fire pit with blue fire glass.

## 4. **Step 4: Install Fire Pit Components**

Place the burner pan into the tabletop opening. Connect the gas hose from the burner to the propane tank regulator. Distribute the Ocean Blue fire glass evenly over the burner pan.



Image: An overhead view of the Darlee Santa Barbara 60-inch round fire pit dining table, highlighting the detailed woven pattern of the cast aluminum tabletop and the central fire pit area.

#### 5. **Step 5: Place Cushions**

Place the sesame polyester cushions onto the assembled dining chairs.





Image: A close-up view of the Darlee Santa Barbara dining armchair with a sesame polyester cushion placed on the seat, showing the comfort and design of the chair.

## OPERATING INSTRUCTIONS (FIRE PIT)

---

## Connecting Propane Tank:

1. Ensure the fire pit control knob is in the "OFF" position.
2. Place a standard 20 lb. propane tank (not included) into the designated compartment within the table base.
3. Connect the regulator hose from the fire pit to the propane tank valve. Hand-tighten firmly.
4. Check for gas leaks using a soapy water solution on all connections. Bubbles indicate a leak. Do not operate if a leak is detected.

## Lighting the Fire Pit:

1. Open the propane tank valve slowly.
2. Push and turn the control knob to the "LOW" position.
3. Press the igniter button repeatedly until the burner ignites.
4. Once lit, continue to hold the control knob for 15-20 seconds to allow the thermocouple to heat up.
5. Release the knob. If the flame extinguishes, repeat the lighting procedure.
6. Adjust the flame height by turning the control knob between "LOW" and "HIGH".

## Turning Off the Fire Pit:

1. Turn the control knob to the "OFF" position.
2. Close the valve on the propane tank.
3. Allow the fire pit to cool completely before covering or storing.

## MAINTENANCE AND CARE

---

Proper maintenance will extend the life and appearance of your patio set.

- **Cleaning Frames:** Wipe with a dry cloth as per manufacturer's instructions. For deeper cleaning, use a mild soap and water solution. Rinse thoroughly and dry immediately to prevent water spots. Avoid harsh chemicals or abrasive cleaners.
- **Cushion Care:** The sesame polyester cushions are moisture resistant. Clean spills immediately with a damp cloth. For deeper cleaning, use a mild soap solution and air dry. Store cushions indoors during inclement weather or prolonged periods of non-use to prevent fading and mildew.
- **Fire Pit Care:** Keep the burner area clean and free of debris. Use the provided lid to protect the burner when the fire pit is not in use. Periodically check gas connections for leaks.
- **Winter Storage:** During winter months or extended periods of non-use, it is recommended to cover the entire set with a weather-resistant cover or store it in a dry, protected area to preserve its finish and components.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fire pit does not ignite.	Gas tank valve closed. Low propane level. Igniter not sparking. Air in gas line.	Open gas tank valve. Replace or refill propane tank. Check igniter battery (if applicable) or connections. Purge air by turning knob to "OFF", waiting 5 minutes, then re-attempting ignition.
Flame is low or inconsistent.	Low propane level. Partially closed gas tank valve. Obstructed burner ports.	Replace or refill propane tank. Fully open gas tank valve. Clean burner ports with a soft brush.
Gas odor detected.	Gas leak. Loose connection.	Immediately turn off gas supply. Check all connections with soapy water. Tighten if loose. Do not operate if leak persists. Contact a qualified service technician.

## SPECIFICATIONS

---

- **Model:** 201010-7PC-60GD
- **Brand:** Darlee
- **Material:** Cast Aluminum Frame, Polyester Cushions
- **Finish:** Antique Bronze (Powder-Coated)
- **Table Dimensions:** 60 inches (W) x 60 inches (D) x 29 inches (H)
- **Chair Dimensions:** 24 inches (W) x 25 inches (D) x 36.5 inches (H)
- **Seat Height:** 16.5 inches
- **Arm Height:** 25.5 inches
- **Fuel Type:** Propane (Standard 20 lb. tank)
- **Included:** Fire Pit Dining Table, 6 Dining Arm Chairs, 6 Sesame Cushions, Ocean Blue Fire Glass, Burner Lid.
- **Product Care:** Wipe with Dry Cloth

## WARRANTY INFORMATION

---

Darlee products are manufactured with high-quality materials and craftsmanship. For specific warranty details regarding your Santa Barbara Patio Fire Pit Dining Set, please refer to the warranty card included with your purchase or visit the official Darlee website. Keep your proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

---

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Darlee customer support. Please have your model number (201010-7PC-60GD) and purchase information ready when



contacting support.

For further assistance, please visit the [Darlee Brand Store on Amazon](#) or refer to the contact information provided in your product packaging.

