

[Manuals.plus](#) /

> [COBIZI](#) /

> COBIZI 10x15 Pop Up Canopy Instruction Manual

COBIZI COBIZI-5913-W-NS-2

COBIZI 10x15 Pop Up Canopy Instruction Manual

Model: COBIZI-5913-W-NS-2

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions and safety warnings before assembling, using, or disassembling this product. Failure to follow these instructions may result in product damage, personal injury, or property damage.


- **Weather Conditions:** This canopy is designed for temporary use. Do not use in extreme weather conditions such as heavy rain, strong winds, hail, or snow. High winds can cause the canopy to lift and become a hazard.
- **Anchoring:** Always secure the canopy with the provided ropes and stakes. For additional stability, consider using sandbags or weight bags (not included) on each leg.
- **Fire Safety:** Keep all flame and heat sources away from the canopy fabric. The fabric is not fireproof.
- **Assembly:** Assembly requires at least two people. Ensure all locking mechanisms are fully engaged before use.
- **Clearance:** Ensure adequate clearance around the canopy to prevent contact with trees, power lines, or other structures.
- **Children:** Keep children away from the assembly area. Do not allow children to play with or around the canopy unsupervised.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

PACKLISTE


1 x Portable Bag

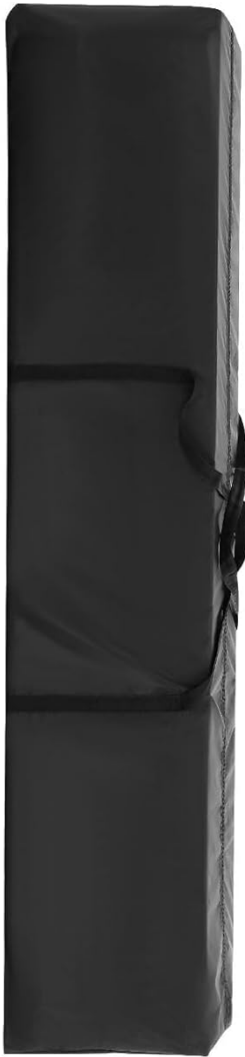

1 x Frame



1 x Top Cover

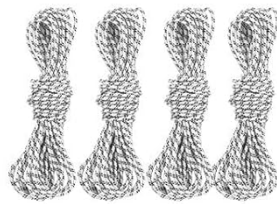

4 x Rope



8 x Tent Stakes



Image: All components included in the COBIZI 10x15 Pop Up Canopy package.

- 1x Canopy Frame (Pre-assembled)
- 1x Canopy Roof Fabric
- 1x Carry Bag
- 4x Wind Ropes
- 8x Tent Stakes

SETUP INSTRUCTIONS

The COBIZI 10x15 Pop Up Canopy is designed for quick and easy setup by 1-2 people without the need for tools.

EASY TO INSTALL WITHOUT TOOLS



Step 1

Pull up the frame and cover it with the roof. Secure the four corners of the roof with Velcro fasteners.

Step 2

Pull up the frame



Step 3

Push it up until the frame is completely open.



Image: Visual guide for the three main steps of canopy assembly.

1. Step 1: Expand the Frame and Attach Roof Fabric

With two people, gently pull the frame apart to partially expand it. Drape the canopy roof fabric over the partially expanded frame. Secure the four corners of the roof fabric to the frame using the integrated Velcro fasteners.

2. Step 2: Fully Expand the Frame

Continue pulling the frame outwards until it is almost fully expanded. Ensure the roof fabric is properly aligned and not snagged.

3. Step 3: Lock the Frame and Adjust Height

Push up on the central hub of the frame until it clicks into place, indicating the frame is fully open and locked. Extend each leg to the desired height by pressing the thumb button and sliding the leg section until it locks into one of the three height adjustment positions.

For a visual demonstration of the setup process, please watch the official product video below:

Video: Official video demonstrating the setup process and key features of the COBIZI 10x15 Pop Up Canopy.

Securing the Canopy

Once the canopy is set up, use the provided wind ropes and tent stakes to anchor it firmly to the ground. Attach the ropes to the canopy's corners and stake them into the ground at an angle for maximum stability.

OPERATING INSTRUCTIONS

Your COBIZI 10x15 Pop Up Canopy is designed for various outdoor activities, providing shade and protection from light weather conditions.



Image: The canopy providing shade in a garden setting.

Height Adjustment

The canopy features a 3-level height adjustment system. To adjust the height, press the thumb button on each leg and slide the inner leg section up or down until it locks into the desired position. Ensure all four legs are adjusted to the same height for stability.



Image: Close-up of the thumb lock system for adjusting leg height.

Disassembly and Storage

To disassemble, reverse the setup steps. Lower the legs, unlock the central frame, and gently push the frame inwards until it collapses. Remove the roof fabric, fold it neatly, and place all components into the carry bag for storage. Store in a cool, dry place.

MAINTENANCE

Proper maintenance will extend the life of your COBIZI Pop Up Canopy.

- **Cleaning Fabric:** Clean the canopy fabric with mild soap and water. Do not use harsh detergents or bleach, as this can damage the waterproof coating and UV protection. Allow the fabric to air dry completely before folding and storing to prevent mildew.
- **Frame Care:** Inspect the steel frame regularly for any signs of rust or damage. Clean any dirt or debris from the frame. If rust appears, clean it and apply a rust-inhibiting paint.
- **Lubrication:** Periodically lubricate the moving parts of the frame, such as the joints and locking mechanisms, with a silicone-based spray to ensure smooth operation.
- **Storage:** Always store the canopy and frame in the provided carry bag in a dry, protected area when not in use.



Image: Close-up view of the waterproof fabric, showing water beading on the surface.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Canopy difficult to open/close	Frame joints are stiff or dirty.	Lubricate joints with silicone spray. Ensure no fabric is caught in the frame.
Canopy unstable or wobbly	Not properly anchored; legs uneven; locking mechanisms not fully engaged.	Ensure all legs are at the same height and fully locked. Use all provided stakes and ropes. Add weight bags if necessary.
Water pooling on roof	Insufficient tension in the roof fabric or improper setup.	Ensure the frame is fully extended and locked. Check that the roof fabric is taut and securely attached at all points.
Fabric tear or hole	Sharp object contact; excessive tension; wear and tear.	Patch small holes with a waterproof repair kit. For large tears, replacement fabric may be needed.

SPECIFICATIONS

Detailed product specifications for the COBIZI 10x15 Pop Up Canopy.

10 x 15FT POP UP CANOPY



ROST
FREE

Image: Diagram showing the dimensions of the 10x15 ft canopy.

- **Model Number:** COBIZI-5913-W-NS-2
- **Dimensions (L x W x H):** 180"L x 120"W x 125"H (15 ft x 10 ft x 10.4 ft)
- **Coverage:** 150 Square Feet
- **Material (Fabric):** 420D Oxford fabric with two layers of PU coating (280gsm)
- **Material (Frame):** Powder-coated Alloy Steel/Iron
- **UV Protection:** UPF 50+, blocks 99% of UV rays
- **Water Resistance:** 100% Waterproof (heat-sealed seams)
- **Item Weight:** 27.6 Kilograms (approx. 60.8 lbs)
- **Leg Tube Size:** 30 x 30 x 0.65 mm (outer), 25 x 25 x 0.65 mm (inner)
- **Cross Tube Size:** 13 x 25 x 0.65 mm
- **Height Adjustment:** 3 adjustable levels
- **Included Accessories:** Carry Bag, 4 Wind Ropes, 8 Tent Stakes

WARRANTY AND SUPPORT

COBIZI is committed to providing quality products and customer satisfaction. If you have any questions or encounter issues during use, please do not hesitate to contact our customer service team. We aim to provide satisfactory service and support.

Please refer to your purchase documentation or the retailer's website for specific warranty details and contact information.