

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [PERFASCIN](#) /

> [PERFASCIN Replacement Remote Control User Manual for FreeSat GTmedia Satellite Receivers](#)

## PERFASCIN V8 Super V8 Golden V8 Nova V9 Pro Remote

# PERFASCIN Replacement Remote Control User Manual

For FreeSat GTmedia V8 Super, V8 Golden, V8 Nova, V9 Pro Digital Satellite Receivers

## 1. INTRODUCTION

---

This manual provides instructions for the PERFASCIN replacement remote control, designed for use with various FreeSat and GTmedia Digital Satellite Receiver Decoder models, including V8 Super, V8 Golden, V8 Nova, and V9 Pro. This remote control operates via infrared technology and requires no programming or pairing. Simply install batteries to begin use.

## 2. SETUP

---

### 2.1 Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

**Note:** This remote control does not require any programming or pairing. Once batteries are installed, it is ready for use with compatible devices.



Image 1: Angled view of the PERFASCIN replacement remote control, showing its general shape and button layout.

### 3. OPERATING INSTRUCTIONS

---

Point the remote control directly at your FreeSat GTmedia satellite receiver. Ensure there are no obstructions between the remote and the receiver's infrared sensor.

#### 3.1 Key Functions Overview



Image 2: Top-down view of the PERFASCIN replacement remote control, highlighting the various buttons and their labels.

- **Power (Red Button):** Turns the satellite receiver on or off.
- **TV/IN:** Switches between TV input sources.
- **V+/V-:** Adjusts the volume level.
- **CH+/CH-:** Changes channels up or down.
- **Number Buttons (0-9):** Directly enters channel numbers.
- **MENU:** Accesses the main menu of the satellite receiver.
- **OK:** Confirms selections or displays channel information.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **EXIT:** Exits current menu or screen.
- **EPG:** Displays the Electronic Program Guide.
- **INFO:** Shows program information.
- **AUDIO:** Selects audio tracks or languages.
- **REC/PVR.LIST:** Records programs or accesses recorded content.
- **PLAY/PAUSE/STOP/FF/REW:** Controls media playback.

- **SAT:** Switches between satellite lists.
- **FAV:** Accesses favorite channel lists.
- **Color Buttons (Red, Green, Yellow, Blue):** Functions vary depending on the current menu or program.

## 4. MAINTENANCE

---

### 4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

### 4.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe the remote and immediately dry it with a clean, dry cloth. Do not use abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface or internal components.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure fresh AAA alkaline batteries are correctly installed.
  - Check for any obstructions between the remote control and the satellite receiver's infrared sensor.
  - Make sure you are within the effective range and pointing the remote directly at the receiver.
  - Verify that the satellite receiver is powered on.
- **Specific buttons not working:**
  - This remote is a direct replacement and does not require programming. If specific buttons are not functioning, ensure the remote is compatible with your exact receiver model.
  - Try replacing the batteries even if some functions work, as low power can affect certain operations.

## 6. SPECIFICATIONS

---

- **Product Dimensions:** 6 x 5 x 0.55 inches
- **Item Weight:** 1.4 ounces
- **Color:** Black
- **Special Features:** Ergonomic design, No Programming Required
- **Compatible Devices:** FreeSat GTmedia V8 Super, V8 Golden, V8 Nova, V9 Pro Digital Satellite Receiver Decoder DVB-S2/T2/C HD IPTV
- **Power Source:** 2 x AAA Alkaline Batteries (not included)

## 7. SUPPORT

---

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you have further questions regarding your PERFASCIN replacement remote control, please contact the seller or manufacturer for assistance. Refer to your purchase documentation for specific contact information.

