

[Manuals.plus](#) /

› [HIFI WALKER](#) /

› HIFI WALKER M7 Portable MP3 Player User Manual

HIFI WALKER M7

HIFI WALKER M7 Portable MP3 Player User Manual

Model: M7 | Brand: HIFI WALKER

1. PRODUCT OVERVIEW

The HIFI WALKER M7 is a versatile portable MP3 player designed for music enthusiasts. It features a 2.4-inch screen, Bluetooth 5.0 connectivity, a built-in speaker, and various functions including voice recording, e-book reading, and video/photo playback. Its compact design makes it ideal for on-the-go use.



Figure 1.1: HIFI WALKER M7 MP3 Player and Earphones

Device Layout



Figure 1.2: M7 MP3 Player Labeled Diagram

The device features a clear display and intuitive touch buttons for easy navigation. Key components include:

- **Display Screen:** 2.4-inch large glass screen for clear viewing.
- **Touch Buttons:** 7 high-sensitivity backlit touch buttons for silent operation.
- **Built-in Speaker:** Allows audio playback without headphones.
- **Headphone Socket:** Standard 3.5mm audio jack.

- **USB-C Socket:** For charging and data transfer.
- **TF-Card Slot:** For memory expansion up to 128GB.
- **Recording Button:** Dedicated button for one-touch voice recording.

2. WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:



Figure 2.1: Package Contents

- HIFI WALKER M7 MP3 Player (with 64GB internal memory)
- 64GB Micro SD Card (pre-installed or included separately)
- Earphones
- USB-C Charging/Data Cable
- User Manual (this document)

3. SETUP

3.1 Charging the Device

Before first use, fully charge your HIFI WALKER M7. The device uses 1 Lithium Polymer battery.

- Connect the provided USB-C cable to the player's USB-C port.
- Plug the other end of the USB cable into a USB power adapter (not included) or a computer's USB port.
- The charging indicator on the screen will show charging status. A full charge takes less than 4 hours.



Figure 3.1: Charging the MP3 Player

3.2 Inserting a Micro SD Card

The player comes with 64GB internal memory and supports expansion up to 128GB via a Micro TF card. A 64GB TF card is included.

- Locate the TF-Card slot on the side of the device (refer to Figure 1.2).
- Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
- To remove, push the card inwards until it clicks, then release to eject.

Portable Powerful Media Player



Figure 3.2: Inserting Micro SD Card

3.3 Transferring Files (Music, Videos, E-books)

You can transfer files from your computer to the MP3 player's internal storage or the inserted Micro SD card.

1. Connect the MP3 player to your computer using the provided USB-C cable.
2. The player will appear as a removable disk drive (e.g., 'M7') on your computer.
3. Open the 'M7' drive. You will see folders like 'Music', 'RECORD', 'video', etc.
4. Drag and drop your desired music files (MP3, WMA, WAV, APE, FLAC), video files (AVI, AMV), or e-book files (TXT) into the corresponding folders.
5. Once transfer is complete, safely eject the 'M7' drive from your computer before disconnecting the cable.

Your browser does not support the video tag.

Video 3.1: How to Download and Delete Songs in M7 Music Player. This video demonstrates connecting the player to a computer, deleting unwanted files, and loading new music files onto the device's hard drive.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

Use the touch buttons below the screen to navigate the menu:

- **Up/Down Arrows:** Scroll through menu options.
- **Left/Right Arrows:** Navigate within options or fast-forward/rewind during playback.
- **Play/Pause/Confirm Button:** Select an option or control media playback.
- **Return Key:** Go back to the previous screen.
- **Menu Key:** Access context-sensitive options.

4.2 Music Playback

The M7 supports various music formats including MP3, WMA, WAV, APE, and FLAC.

- From the main menu, select 'Music'.
- Browse your music by artist, album, genre, or folder.
- Select a song and press the Play/Pause button to start playback.
- Adjust volume using the dedicated Vol+ and Vol- buttons on the side.

BUILT-IN 64GB

Support expansion up to 128G TF SD card.

4.3 Bluetooth Connectivity

The player features Bluetooth 5.0 for stable wireless connection to headphones or speakers.

1. From the main menu, select 'Bluetooth'.
2. Turn on Bluetooth and select 'Search for devices'.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. Select your device from the list to pair.

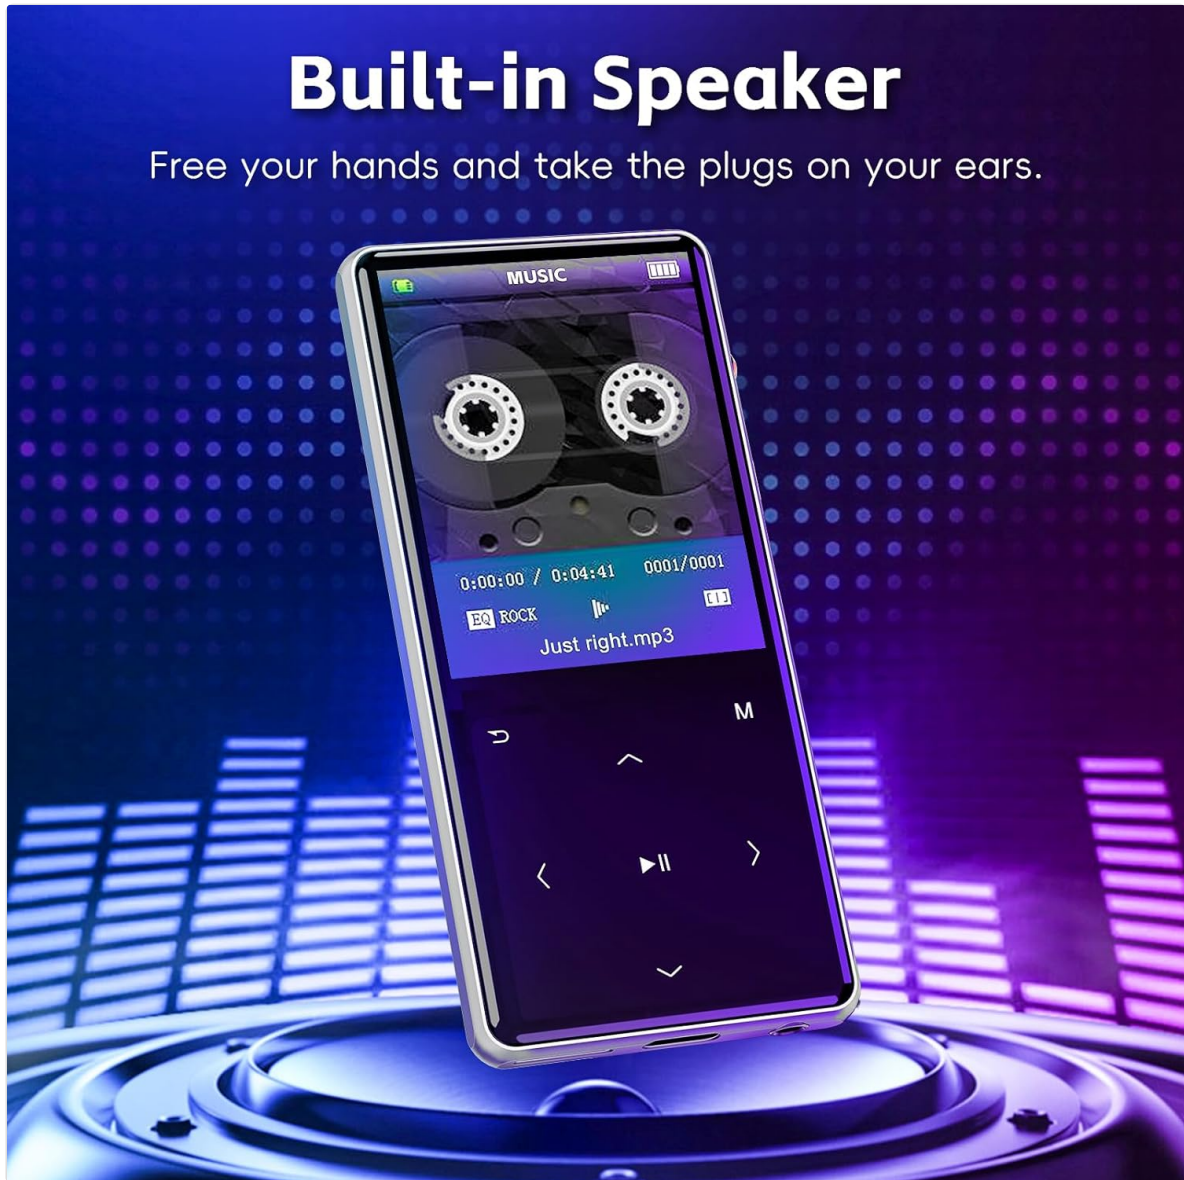


Figure 4.2: Bluetooth 5.0 Connectivity

4.4 Voice Recording

The M7 includes a powerful built-in recording function for high-quality voice capture.

- Press the dedicated 'Recording' button on the side of the device.
- The recording interface will appear. Press the Play/Pause button to start/stop recording.
- Recordings are saved in the 'RECORD' folder and can be accessed via the 'Folder View' or 'Record' menu option.

Advanced Bluetooth 5.0 Tech



Figure 4.3: One-Touch Recording

4.5 Other Functions (Video, Photo, E-Book, Speaker)

- **Video Playback:** Supports AVI and AMV formats. Select 'Movie' from the main menu to browse and play videos.
- **Photo Viewing:** Select 'Photo' to browse and view images on the 2.4-inch screen.
- **E-Book Reading:** Supports TXT format only. Select 'E-Book' to read text files.
- **Built-in Speaker:** The player has an integrated speaker for convenient listening without headphones. Audio will automatically play through the speaker if headphones are not connected.

Support Multiple Music Formats

MP3

WMA

APE

WAV

FLAC



Figure 4.4: Built-in Speaker

5. MAINTENANCE

5.1 Cleaning the Device

- Use a soft, dry, lint-free cloth to clean the screen and body of the player.
- Avoid using abrasive cleaners, solvents, or aerosol sprays.
- Do not expose the device to excessive moisture.

5.2 Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use, to maintain battery health.
- Store the device in a cool, dry place when not in use for extended periods.

5.3 Storage Management

Regularly manage your files to optimize storage space and device performance.

- Delete unwanted files or folders from the device's internal memory or SD card.
- Organize your media into appropriate folders for easier access.
- Consider backing up important files to a computer or cloud storage.

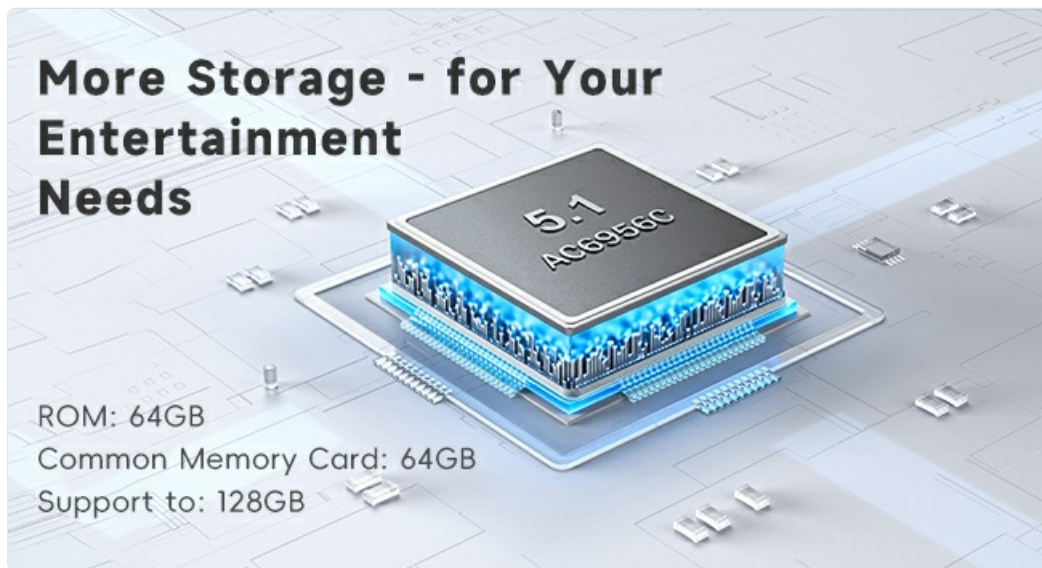


Figure 5.1: Storage Capacity Overview

6. TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot connect to Bluetooth device.	Ensure Bluetooth is enabled on both devices and they are in pairing mode. Move devices closer. Try unpairing and re-pairing.
Files not appearing after transfer.	Ensure files were transferred to the correct folders. Safely eject the device from your computer before disconnecting. Restart the MP3 player.
Poor audio quality.	Check headphone connection or Bluetooth signal strength. Ensure audio files are not corrupted. Adjust equalizer settings if available.
Device is unresponsive.	Press and hold the power button for 10-15 seconds to force a restart.

7. SPECIFICATIONS

Feature	Detail
Model Number	M7

Feature	Detail
Memory Storage Capacity	128 GB (64GB internal + 64GB Micro SD card included)
Expandable Memory	Up to 128GB Micro TF card
Screen Size	2.4 Inches
Connectivity Technology	Bluetooth 5.0
Supported Audio Formats	MP3, WMA, WAV, APE, FLAC
Supported Video Formats	AVI, AMV
Supported E-book Format	TXT
Special Features	Built-In Speaker, Video Playback, Voice Recorder, E-Book, A-B Repeat, Alarm Clock, Folders, Time Screensaver
Battery Type	1 Lithium Polymer battery (included)
Charging Time	Less than 4 hours
Music Playback Time	Up to 30 hours (approx.)
Item Weight	0.005 ounces (approx. 3.7 ounces as per feature bullets)
Color	Soot-black

8. WARRANTY AND SUPPORT

8.1 Product Warranty

This HIFI WALKER M7 Portable MP3 Player comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use.

Please retain your proof of purchase for warranty claims.

8.2 Customer Support

If you have any questions, encounter issues, or require technical assistance with your HIFI WALKER M7 MP3 Player, please do not hesitate to contact the seller, **QtumTek**, directly through the Amazon platform. They are committed to providing prompt and helpful support.

For general inquiries or to explore more products, you may visit the official HIFI WALKER store on Amazon: [HIFI WALKER Store](#)

