

KRIB BLING XQB201B

KRIB BLING XQB201B Full Automatic Portable Washing Machine User Manual

Model: XQB201B | Capacity: 25 lbs

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance to ensure safe and efficient operation. Retain this manual for future reference.

General Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.

Electrical Safety

- Plug the appliance into a grounded outlet. Do not remove the grounding prong.
- Do not use an adapter or extension cord.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not operate any appliance with a damaged cord or plug, or if it is malfunctioning or has been dropped or damaged in any manner.

2. PRODUCT OVERVIEW

The KRIB BLING XQB201B is a full automatic portable washing machine designed for convenience and efficiency in various living spaces such as RVs, apartments, dorms, and camping environments. It features a 2-in-1 wash and spin function, an LED display, and multiple program selections.

Key Features

- **Full Automatic Operation:** Select program and water level, and the machine operates independently.
- **Portable and Space-Saving Design:** Ideal for limited spaces.
- **Integrated Drain Pump:** Facilitates drainage from various angles.
- **Multi-functional Control Panel:** Features 10 washing programs, 4 water level modes, and 8 water level selections.
- **LED Display:** Clearly shows laundry time and settings.
- **Child Lock:** Ensures safe operation and protects family members.
- **Automatic Imbalance Adjustment:** Minimizes shaking and noise during wash and spin cycles.
- **Large Capacity:** 25 lbs capacity, suitable for 5-6 members.
- **Stainless Steel Inner Tub:** Durable honeycomb tub structure for effective stain removal.
- **Built-in Filter:** Helps collect lint and debris.

Included Components

- Adaptor
- Drain Hose
- Inlet Hose
- Washing Impeller



Image 2.1: KRIB BLING XQB201B Portable Washing Machine, 25 lbs capacity.

Product size



Image 2.2: Product dimensions: 40 inches (height), 24 inches (width), 24 inches (depth).



Image 2.3: Key components including inlet hose, water inlet, stainless steel inner tub, built-in filter, and washing impeller.

3. SETUP AND INSTALLATION

Proper setup is crucial for the washing machine's performance and longevity. Follow these steps carefully.

Unpacking and Initial Inspection

- Carefully remove the washing machine from its packaging.
- Inspect the appliance for any signs of damage during transit. Contact customer support if damage is found.
- **Important:** Remove the bottom foam and plastic bracket used for motor protection during transportation. Failure to do so will result in loud noise or improper operation.

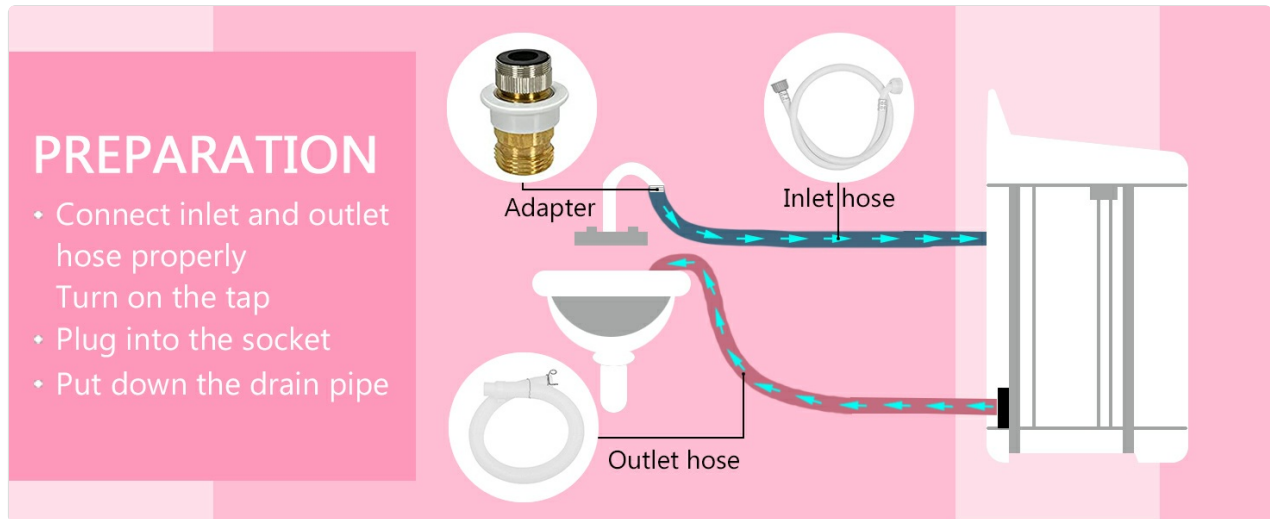


Image 3.1: Illustration showing the bottom foam and plastic bracket that must be removed before first use.

Connecting Water Inlet Hose

The washing machine comes with an inlet hose and an adaptor for faucet connection.

1. Connect the 'L' shape pipe end of the inlet hose to the washing machine's water inlet.
2. Connect the straight pipe end to your faucet or the provided adaptor.
3. If using the adaptor, ensure the extra O-ring is placed into the straight pipe end before connecting to the adaptor.
4. Tighten all connections firmly to prevent leaks. A wrench may be needed for a secure fit.
5. Turn on the tap to check for any leaks.



Image 3.2: Diagram illustrating two methods for connecting the water inlet hose to a faucet, with or without an adapter.

Connecting Drain Hose

The washing machine is equipped with a drain pump. Ensure the drain hose is positioned correctly for effective

drainage.

- Place the drain hose into a sink, bathtub, or a dedicated drain pipe.
- For optimal drainage, the drain outlet should be positioned lower than the machine's drain pump. Avoid placing the drain hose too high, as this can cause drainage issues (E2 error). A height of a few inches above the floor is generally suitable.

Power Connection

- Plug the washing machine's power cord into a standard grounded electrical outlet.



Image 3.3: Overview of preparation steps: connecting inlet and outlet hoses, turning on the tap, plugging into the socket, and positioning the drain pipe.

4. OPERATING INSTRUCTIONS

The KRIB BLING XQB201B features an intuitive control panel with an LED display.

Control Panel Overview

Smart control panel with LED display



Image 4.1: Detailed view of the smart control panel with LED display, showing program, water level, and delay start options. The control panel includes:

- **Power On/Off Button:** To turn the machine on or off.
- **Start/Pause Button:** To begin, pause, or resume a wash cycle.
- **Program Selection:** Choose from 10 washing programs (e.g., Standard, Soft, Quick Wash, Heavy Duty, Tub Clean, Spin Only, Soak Wash, Water Recycle).
- **Water Level Selection:** Adjust the water level (8 selections available).
- **Powder Levels:** 4 powder level modes.
- **Delay Start:** Set a delayed start time (up to 24 hours).
- **LED Display:** Shows remaining time and current settings.
- **Child Lock:** Activates to prevent accidental changes during operation.

Loading Laundry

- Open the top lid and load clothes into the stainless steel inner tub.
- Do not overload the machine. The maximum capacity is 25 lbs. Refer to the image below for typical garment weights.
- Close the lid securely before starting a cycle.



Image 4.2: Guide to 25 lbs capacity with example garment weights (T-shirt 250g, Shirts 300g, Jacket 250g, Jeans 400g).

Starting a Wash Cycle

1. Press the Power On/Off button.
2. Select your desired washing program using the program selection buttons.
3. Adjust the water level if necessary. The machine may automatically detect the load and suggest a water level.
4. Add detergent to the dispenser.
5. Press the Start/Pause button to begin the cycle.
6. To activate the Child Lock, refer to the control panel instructions (usually a combination of buttons or a long press).

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

Cleaning the Built-in Filter

- The washing machine has a built-in filter to collect lint.
- Regularly check and clean the filter to prevent blockages and maintain washing efficiency.
- To clean, remove the filter, rinse it under running water, and reinsert it.

Tub Cleaning

- Use the 'Tub Clean' program periodically to clean the inner tub and prevent odor buildup.
- You can also run a cycle with hot water and a washing machine cleaner or vinegar for deeper cleaning.

Exterior Cleaning

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

Storage

- If storing the machine for an extended period, ensure the tub is dry and clean.
- Disconnect water hoses and power cord.
- Store in a dry, temperate environment.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your KRIB BLING washing machine.



ATTENTION TO USING PROBLEMS

▲ QUESTION 1

Why is the washing machine leaking?

▲ ANSWER 1

The water pipe comes with a gasket, and a second gasket needs to be installed. Both ends of the water pipe need to be tightened to ensure that the gasket is supported to avoid water leakage.

▲ QUESTION 2

What if the bottom of the washing machine is broken?

▲ ANSWER 2

The foam pad and bottom bracket are used to protect the motor during transportation. Please be sure to remove it when using the washing machine. If you don't remove it, it will cause loud noise or the washing machine will not work directly.

▲ QUESTION 3

Why is there water in the washing machine?

▲ ANSWER 3

The residual water in the washing machine is from the production drain test process, the machine is not the old machine, this drain test proves that the purchased washing machine is a qualified product after water testing! It's not a secondary sale or quality problem.

Image 6.1: Common questions and answers regarding washing machine operation.

Common Issues and Solutions


Problem	Possible Cause / Solution
Washing machine is leaking.	The water pipe comes with a gasket, and a second gasket needs to be installed. Both ends of the water pipe need to be tightened to ensure that the gasket is supported to avoid water leakage. Check all hose connections for tightness.
Loud noise or machine not working correctly.	The foam pad and bottom bracket used to protect the motor during transportation were not removed. Please ensure to remove them before use.
Residual water in the machine.	This is normal. Residual water is from the production drain test process. It indicates the machine is new and has been quality tested.

Problem	Possible Cause / Solution
E2 Error Code (Drainage Fault).	The drainage pipe might be positioned too high, preventing proper water flow. Ensure the drain pipe is placed at a lower level (e.g., in a bathtub or low sink) to allow gravity-assisted drainage. Check for kinks or blockages in the drain hose.
Excessive shaking or vibration.	Ensure the machine is on a level surface. The machine has an automatic imbalance adjustment system, but extreme imbalances can still cause vibration. Redistribute the laundry load evenly in the tub. Confirm the bottom foam and bracket have been removed.
Clothes are not clean.	Check if the correct wash program and water level were selected for the load. Ensure adequate detergent was used. Clean the built-in filter. Do not overload the machine.
No hot or cold water option.	This model typically has a single water inlet. To achieve warm water, you may need to use a 'Y' connector at your faucet to mix hot and cold water before it enters the machine.

7. SPECIFICATIONS

Specification	Detail
Brand	KRIB BLING
Model Number	XQB201B
Item Weight	57.2 pounds
Product Dimensions (D x W x H)	24 x 24 x 40 inches
Capacity	25 Pounds
Noise Level	58 dB
Installation Type	Freestanding
Special Features	Auto imbalance adjustment
Color	Dark grey
Control Console	Knob
Access Location	Top Load
Voltage	110 Volts
Operation Mode	Fully Automatic
Inner Tub Dimension (Diameter)	17.32 inches

Washing Machine Inner tub Dimension

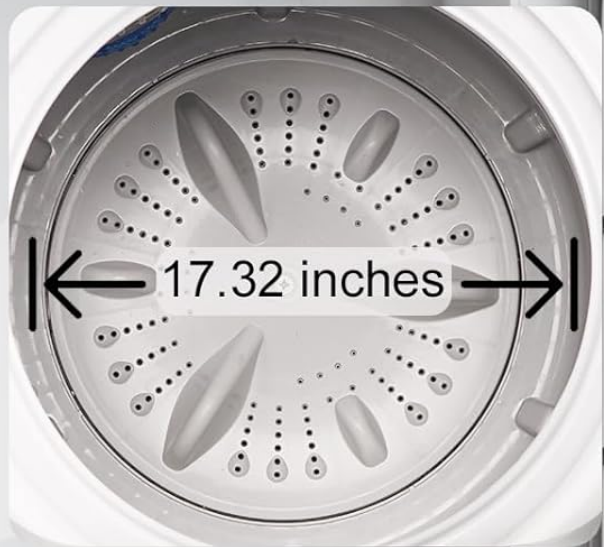

25 LBS


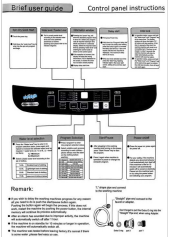




Image 7.1: Inner tub dimension showing a diameter of 17.32 inches.

8. WARRANTY AND SUPPORT


Specific warranty details are not provided in the product information. Please refer to your purchase documentation or contact the seller directly for warranty information and customer support.

For any operational issues or questions not covered in this manual, please reach out to the KRIB BLING customer service or the retailer from whom you purchased the product.

Related Documents - XQB201B

	<p>KRIB BLING Automatic Washing Machine Instruction Manual</p> <p>Comprehensive instruction manual for the KRIB BLING Automatic Washing Machine, covering installation, usage, safety, and troubleshooting. Includes model numbers XQB201B-GOLD9 and XQB201B-GREY9.</p>
	<p>Washing Machine User Guide and Danco Aerator Installation Instructions</p> <p>Comprehensive user guide for a Krib Bling washing machine, including control panel instructions, error code troubleshooting, and installation guidance for Danco water-saving aerators. Features information on water conservation and California Proposition 65 warnings.</p>
	<p>Krib Bling Automatic Washing Machine Instruction Manual</p> <p>Instruction manual for the Krib Bling Automatic Washing Machine, models XQB60-201B and XQB70-618B. Includes safety warnings, installation guides, usage instructions, troubleshooting, and parts information.</p>
	<p>KRIB BLING Automatic Washing Machine Instruction Manual (XQB60-201B, XQB70-618B)</p> <p>This instruction manual provides detailed information on the installation, operation, safety, and troubleshooting of the KRIB BLING Automatic Washing Machine, models XQB60-201B and XQB70-618B.</p>
	<p>KRIB BLING Automatic Washing Machine Instruction Manual</p> <p>Comprehensive instruction manual for the KRIB BLING Automatic Washing Machine, covering installation, usage, troubleshooting, and safety precautions for models XQB60-201B and XQB70-618B.</p>
	<p>KRIB BLING Automatic Washing Machine User Manual</p> <p>Comprehensive user manual for the KRIB BLING Automatic Washing Machine (Models XQB201A-GOLD5, XQB201A-GREY5), covering safety, installation, operation, and troubleshooting.</p>

Documents - KRIB BLING – XQB201B

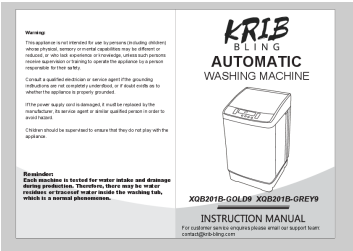

[KRIB BLING Automatic Washing Machine Instruction Manual](#)

Comprehensive instruction manual for the KRIB BLING Automatic Washing Machine, covering installation, usage, safety, and troubleshooting. Includes model numbers XQB201B-GOLD9 and XQB201B-GREY9.

lang:en score:29 filesize: 5.07 M page_count: 8 document date: 2023-09-09

