



Manuals.plus /

› KRIB BLING /

› KRIB BLING 25 lbs Full Automatic Washing Machine Instruction Manual (Model XQB201A-GOLD9)

KRIB BLING XQB201A-GOLD9

KRIB BLING 25 lbs Full Automatic Washing Machine Instruction Manual

Model: XQB201A-GOLD9

1. INTRODUCTION

Thank you for choosing the KRIB BLING 25 lbs Full Automatic Washing Machine. This appliance is designed for convenience and efficiency, featuring an LED display, multiple wash programs, and water level selections. Its compact and portable design makes it suitable for various living spaces, including apartments, dorms, and RVs. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.



25LBS
24*24*40 in

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub is moving.
- Do not install or store this appliance where it will be exposed to the weather or freezing temperatures.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.

3. PRODUCT OVERVIEW

3.1 Key Features

- **Full Automatic Operation:** 2-in-1 compact washer with automatic washing and spinning programs.
- **LED Display:** Clear digital display for laundry time and settings.
- **Multiple Programs:** 10 washing programs for various fabric types and soil levels.
- **Water Level Selections:** 8 water level options for efficient water usage.
- **Automatic Imbalance Adjustment:** Reduces shaking and noise during operation.
- **Portable Design:** Space-saving and easy to store, ideal for small living spaces.
- **Large Capacity:** 25 lbs capacity suitable for families of 3-4 members.
- **Drain Pump:** Equipped with a powerful drain pump for flexible drainage.
- **Child Lock:** Ensures safe operation and prevents accidental changes to settings.

3.2 Components and Dimensions



Figure 2: Key components of the KRIB BLING Washing Machine. Includes fill hose, glass cover, built-in filter, stainless steel inner tub, and sturdy impeller.

Product Size



Figure 3: Product dimensions of the washing machine: 24 inches (D) x 24 inches (W) x 40 inches (H).



Figure 4: Inner tub dimension (17.32 inches diameter) and 25 lbs capacity.

4. SETUP

Before operating your washing machine, ensure it is properly set up:

1. **Unpacking:** Carefully remove the washing machine from its packaging. Inspect for any damage.

2. **Placement:** Place the washing machine on a flat, stable surface. Use the adjustable leveling legs to ensure the machine is balanced.
3. **Water Connection:** Connect the inlet hose to a water tap and to the water inlet on the back of the machine. Ensure connections are secure to prevent leaks.
4. **Drainage:** Position the drain hose to allow for proper water discharge. The built-in drain pump allows for flexible drainage options.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet (120 Volts).



Figure 5: Preparation before washing: Connect water pipe, turn on tap, plug into socket, and position drain pipe.

5. OPERATING INSTRUCTIONS

The KRIB BLING washing machine features a user-friendly control panel with an LED display.

5.1 Control Panel Overview



Figure 6: Control Panel with LED Display. Features Power ON/OFF, Water Level, Program selection, and Start/Pause buttons.

5.2 Washing Procedure

1. **Load Laundry:** Open the glass cover and place your clothes into the stainless steel inner tub. Do not overload the machine (maximum 25 lbs).
2. **Add Detergent:** Add the appropriate amount of detergent and any other laundry additives.
3. **Power On:** Press the 'Power ON/OFF' button.
4. **Select Water Level:** Press the 'Water Level' button to choose from 8 available water levels (e.g., High, Middle, Low, Minimum).
5. **Select Program:** Press the 'Program' button to cycle through the 10 wash programs (e.g., Standard, Soft, Quick Wash, Heavy Duty, Soak Wash, Wash Only, Spin Only, Tub Clean, Tub Air-Dry, Water Recycle).
6. **Start Cycle:** Press the 'Start/Pause' button to begin the wash cycle. The LED display will show the remaining time.
7. **Child Lock:** To activate the child lock, press and hold the 'Water Level' and 'Program' buttons simultaneously for a

few seconds. Repeat to deactivate.

5.3 Load Capacity Guide

The 25 lbs capacity is suitable for various items. Refer to the image below for examples of suitable clothing types.



Figure 7: Examples of clothing items suitable for the 25 lbs capacity, including T-shirts, socks, shirts, dresses, jackets, coats, jeans, and knitwear.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Filter

The washing machine includes a built-in filter to collect lint and debris. Clean it regularly to prevent blockages and maintain washing efficiency.

1. Ensure the machine is powered off and unplugged.
2. Locate the built-in filter (refer to Figure 2).
3. Remove the filter and clean any accumulated lint or debris under running water.
4. Reinsert the filter securely.

6.2 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.3 Tub Cleaning

Utilize the 'Tub Clean' program periodically to clean the inner tub and prevent odor buildup.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; 'Start/Pause' not pressed.	Check power connection; Ensure lid is fully closed; Press 'Start/Pause'.
No water filling	Water tap off; Water inlet hose kinked; Water supply cut off.	Turn on water tap; Straighten hose; Check water supply.
Water not draining	Drain hose kinked or blocked; Drain pump malfunction.	Straighten or clear drain hose; Contact support if pump issue persists.
Excessive vibration/noise	Machine unbalanced; Overloaded; Clothes unevenly distributed.	Adjust leveling legs; Reduce load size; Redistribute clothes.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	KRIB BLING
Model Number	XQB201A-GOLD9
Product Dimensions (D x W x H)	24"D x 24"W x 40"H
Capacity	25 Pounds
Color	Grey
Access Location	Top Load
Operation Mode	Fully Automatic
Number of Programs	10
Water Level Selections	8
Controls Type	Touch
Display	LED
Voltage	120 Volts
Noise Level	50 Decibels
Material (Drum)	Stainless Steel
Included Components	Drain Hose, Fill Hose, Glass Cover, Venting Duct

9. WARRANTY AND SUPPORT

9.1 Manufacturer's Warranty

This KRIB BLING washing machine comes with a manufacturer warranty for 365 days from the date of purchase. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact KRIB BLING customer support. Refer to the product packaging or the official KRIB BLING website for contact details.