

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FEELNEEDY](#) /
- › [FEELNEEDY 3.2L Cat Water Fountain \(Model FN-W06\) Instruction Manual](#)

FEELNEEDY FN-W06

FEELNEEDY 3.2L Cat Water Fountain (Model FN-W06) Instruction Manual

Model: FN-W06 | Brand: FEELNEEDY

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your FEELNEEDY 3.2L Cat Water Fountain, Model FN-W06. This automatic pet water fountain is designed to encourage your pets to drink more fresh, filtered water, contributing to their overall health and hydration.



Image: The FEELNEEDY 3.2L Cat Water Fountain (Model FN-W06) in pink, featuring a faucet-style water stream and three replacement filters. This image illustrates the complete product package.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- Water Fountain Unit (Base, Water Tray, Lid)
- Water Pump
- Faucet Attachment
- Filter (x3)
- Center Sponge
- Adapter
- Cleaning Brush
- User Manual

Your browser does not support the video tag.

Video: This video demonstrates the unboxing and identification of all components included with the FEELNEEDY 3.2L Cat Water Fountain, ensuring you have everything needed for setup.

SETUP INSTRUCTIONS

1. **Prepare the Filter:** Soak the new filter in a bowl of clean water for 5 minutes before first use. This helps to remove any loose carbon dust and ensures proper filtration.

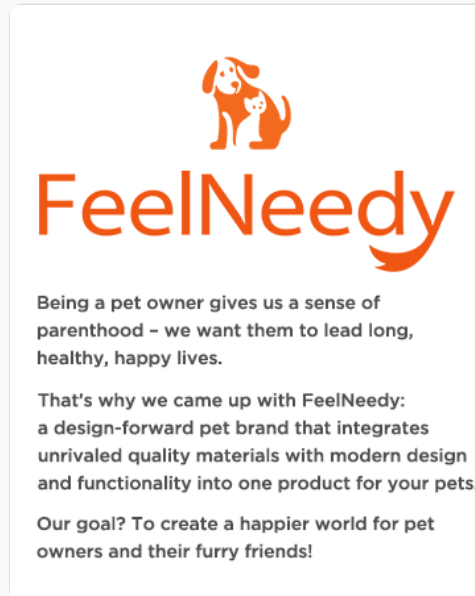


Image: A hand submerging a circular filter into a bowl of water, illustrating the pre-soaking step for the filter.

2. **Install the Water Pump:** Thoroughly insert the water pump into its designated slot at the bottom of the fountain base. Ensure it is securely in place.

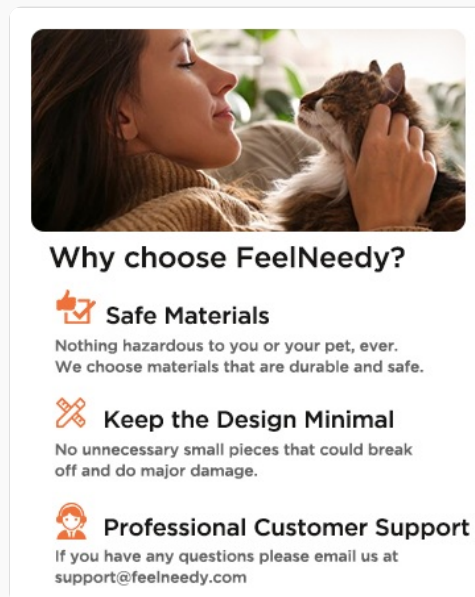


Image: Close-up of hands inserting the white water pump into the base of the fountain, showing the connection point.

3. **Place the Filter and Sponge:** Position the center sponge over the pump, then place the pre-soaked filter on top of the sponge.



Image: An exploded diagram showing the individual components of the fountain, including the hair catcher, ion exchange resin, coconut-shell activated carbon, and primary cotton filter layers, indicating their assembly order.

4. **Assemble the Water Tray and Lid:** Place the water tray onto the base, ensuring it aligns correctly. Then, secure the lid on top. The fountain features a lock-up design to prevent accidental removal by pets.

Safety Lock Lid

The lock-up design prevents paw attack.

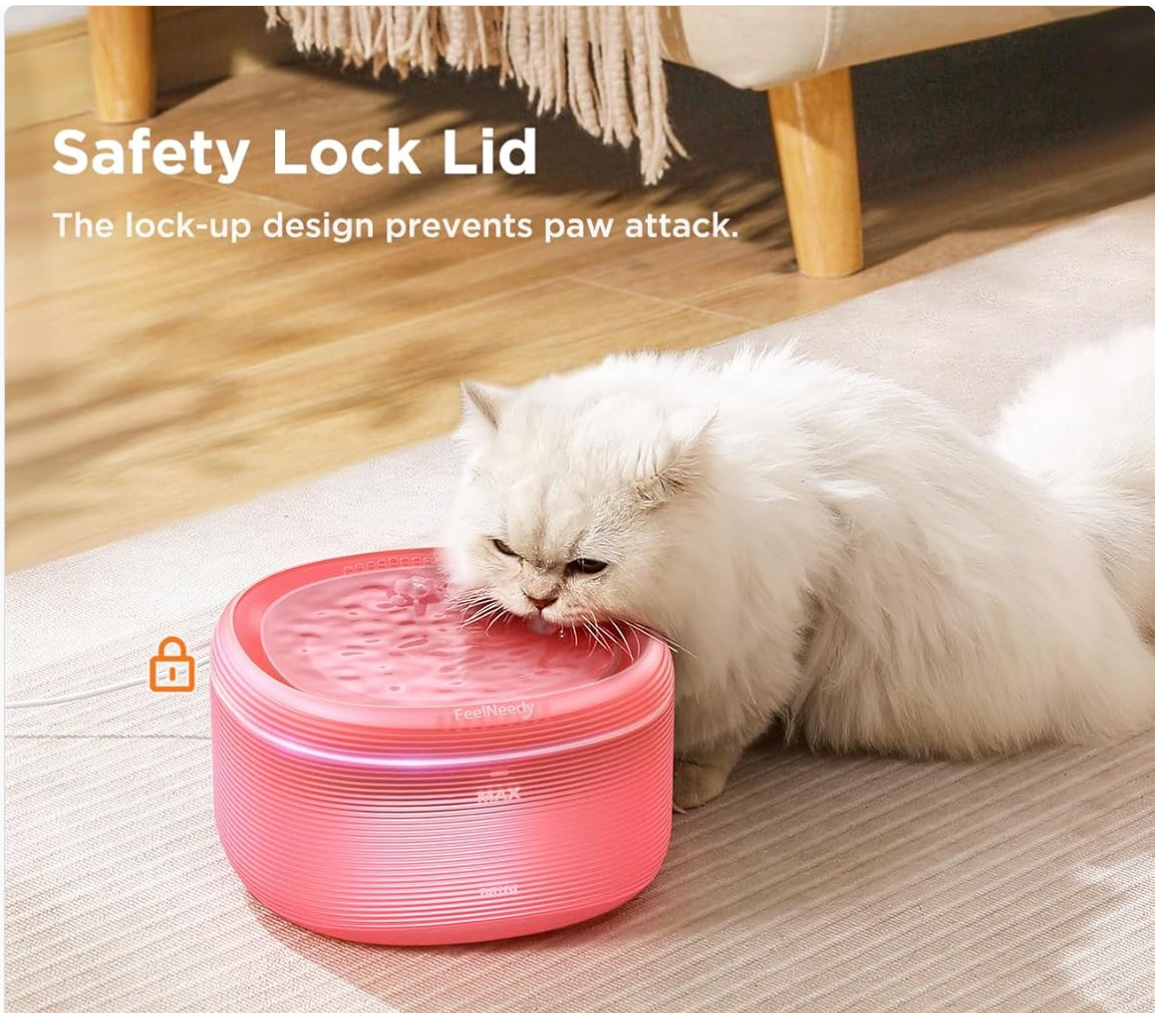


Image: A white cat interacting with the pink water fountain, highlighting the "Safety Lock Lid" feature designed to prevent pets from opening it.

5. **Attach the Faucet:** Insert the faucet attachment into the designated opening on the lid.
6. **Fill with Water:** Fill the fountain with clean water up to the MAX line. The fountain has a 3.2L capacity.



Image: A close-up view of the water fountain, indicating a "3200ml Large Capacity" with visible MAX and MIN water level lines.

7. **Connect Power:** Plug the adapter into a power outlet. The fountain will begin operating.

OPERATING INSTRUCTIONS

The FEELNEEDY Cat Water Fountain is designed for continuous operation, providing fresh water for your pets.

- **Water Flow Modes:** The fountain offers two water flow modes: a gentle bubbling surface and a faucet-style stream. These dynamic flows encourage pets to drink more.

Attract Your Pet to Drink More

Two water flow modes



Image: Two cats drinking from the fountain, illustrating the two available water flow modes: a bubbling surface and a faucet stream, designed to attract pets.

- **Water Level Monitoring:** The semi-transparent basin allows for easy visual monitoring of the water level.
- **Low Water Level Indicator:** A bright LED light will flash when the water level is low, indicating that a refill is needed.
- **Automatic Shut-off:** The pump automatically turns off when the fountain runs dry to prevent damage.
- **Emergency Water Tray:** In case of a power outage, the stable water tray can still provide approximately 110ml of water for your pet.



Image: A visual representation of the fountain's emergency water storage, indicating that 210ml of water remains available for pets during a power outage.

- **Quiet Operation:** The fountain operates with a super quiet pump and sound-absorbing sponge, maintaining a low noise level (as low as 25 decibels) for a peaceful environment.



Image: An illustration showing a cat sleeping next to the fountain, emphasizing its "Extra Quiet" operation with a sound level indicator ranging from 10dB to 50dB.

Your browser does not support the video tag.

Video: This video showcases the FEELNEEDY 3.2L Cat Water Fountain in operation, demonstrating its water flow and features, including the low water level indicator.

MAINTENANCE

Regular cleaning and filter replacement are essential for maintaining the fountain's performance and your pet's health.

Cleaning the Water Pump

Clean the water pump regularly to extend its service life. Follow these steps:

1. Disconnect the power adapter.
2. Remove the pump from the fountain.
3. Remove the sponge and the cover of the pump.
4. Remove the cap of the impeller.
5. Use the provided tweezers (or a small tool) to remove the impeller.
6. Completely clean the inside of the pump and all removed parts with the cleaning brush and water.

7. Reassemble all parts in reverse order.

Your browser does not support the video tag.

Video: This video provides a step-by-step guide on how to disassemble and clean the water pump of the FEELNEEDY Cat Water Fountain, ensuring proper maintenance and longevity.



Image: A series of five images illustrating the detailed steps for cleaning the water pump, including removing the sponge, cover, impeller cap, and impeller, then cleaning the internal components.

Filter Replacement

The 4-layer filter system (primary hair stopper, high density cotton, Ion exchange resin, coconut shell activated carbon) should be replaced regularly, typically every 2-4 weeks, depending on usage and water quality.

- Always pre-soak new filters for 5 minutes before installation.
- Ensure the hair catcher is clean to prevent contamination of the filter.

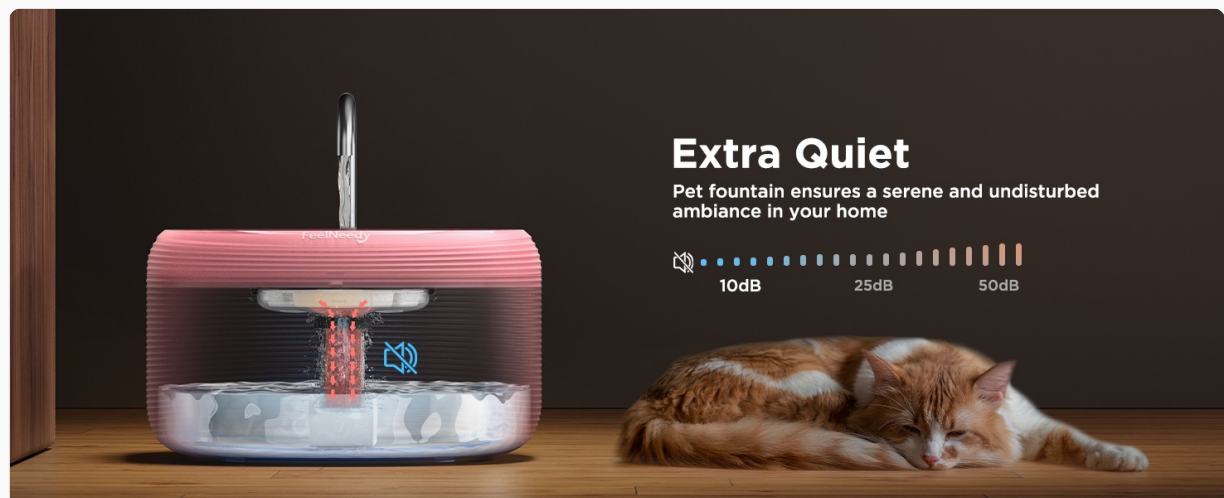


Image: A close-up view of the "Hair Catcher" component, highlighting its function in preventing hair from contaminating the filter.

TROUBLESHOOTING

- **Fountain not dispensing water:**
 - Check if the power adapter is securely plugged in.
 - Ensure the water level is above the MIN line.

- Clean the water pump as described in the Maintenance section. A blocked pump can prevent water flow.
- **Fountain is noisy:**
 - Check the water level; low water can cause pump noise.
 - Clean the water pump. Debris inside the pump can cause vibrations and noise.
 - Ensure the pump is securely seated in its slot.
- **Red light flashing:**
 - A flashing red light indicates the pump is blocked. Refer to the pump cleaning instructions.
 - A constant red light indicates a low water level. Refill the fountain.

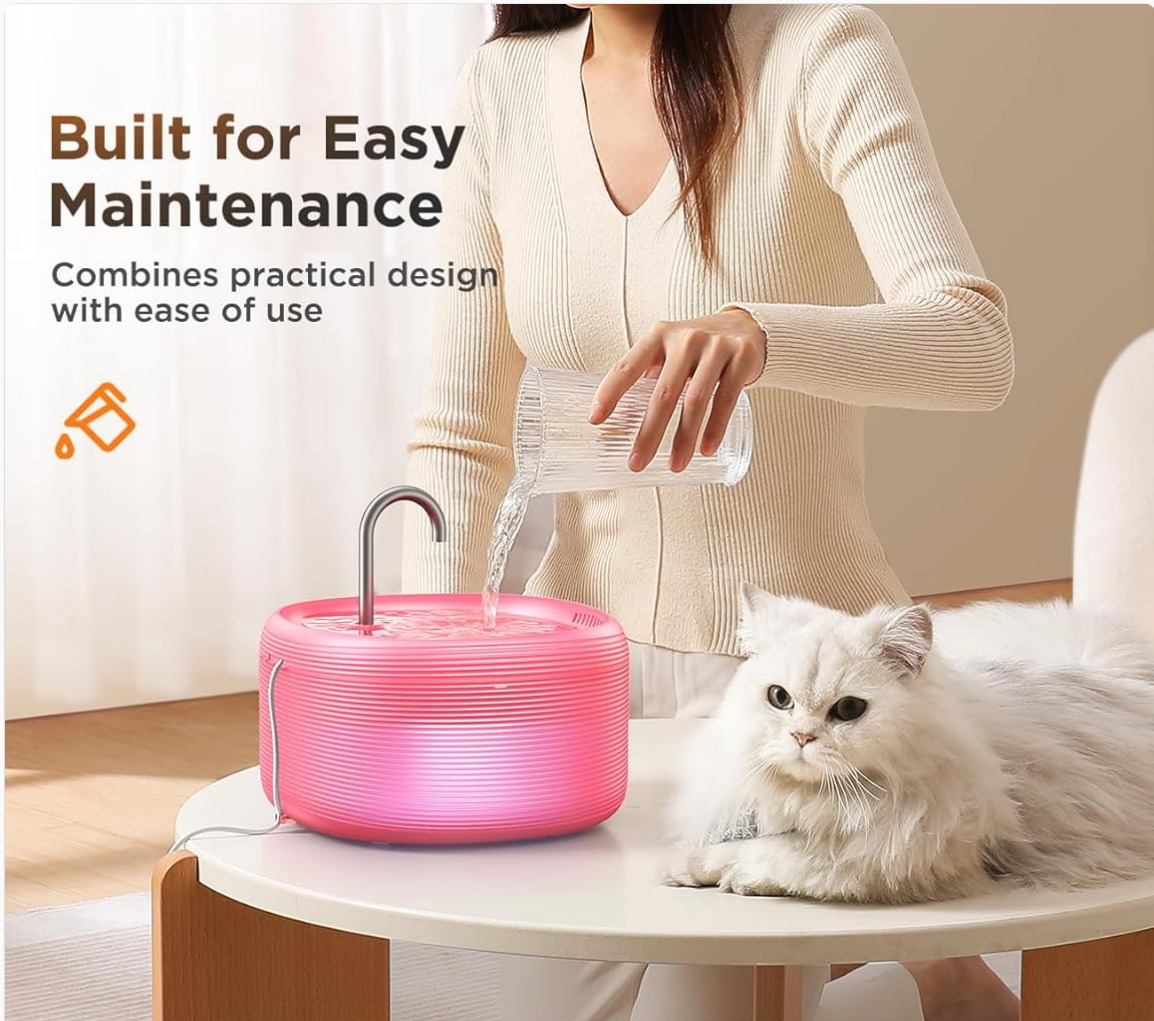


Image: Two diagrams illustrating the LED light indicators: one showing a flashing red light for a "Pump Blocked Alarm" and another showing a constant red light for a "Low Level Alarm."

- **Water overflow:**

- Ensure the water level does not exceed the MAX line.
- The fountain is designed with a 3cm gap and spillway holes to prevent overflow. Check if these are obstructed.



Image: A close-up of the fountain's design, highlighting the "3 cm gap" and "Spillway holes" engineered to prevent splash and overflow during operation.

SPECIFICATIONS

Feature	Detail
Brand	FEELNEEDY

Model Number	FN-W06
Capacity	3.2 Liters (108 fl oz)
Material	Stainless Steel (faucet), Plastic (body)
Item Weight	0.8 Kilograms (1.76 Pounds)
Product Dimensions (LxWxH)	8.66 x 8.66 x 5.12 inches
Noise Level	As low as 25 decibels
Filter System	4-layer (primary hair stopper, high density cotton, Ion exchange resin, coconut shell activated carbon)

WARRANTY AND SUPPORT

FEELNEEDY offers a 2-year warranty for this product, which includes a free replacement promise. For any questions or support, please contact customer service.

Email: support@feelneedy.com



Image: An icon displaying "2 Year Warranty" with text below stating "Free Replacement Promise" and "24/7 Customer Service," indicating product support.