

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [USX MOUNT](#) /

› [USX MOUNT Full Motion TV Wall Mount Instruction Manual](#)

USX MOUNT XMM908

USX MOUNT Full Motion TV Wall Mount Instruction Manual

Model: XMM908 | Brand: USX MOUNT

INTRODUCTION

This instruction manual provides comprehensive guidance for the installation, operation, and maintenance of your USX MOUNT Full Motion TV Wall Mount. Designed for most 32-70 inch TVs weighing up to 99 lbs, this mount offers universal compatibility with VESA patterns from 75x75mm to 400x400mm. Its dual articulating arms allow for smooth extension, retraction, swivel, and tilt adjustments, providing optimal viewing angles and reducing glare. Constructed from sturdy cold-rolled steel, it ensures secure and safe mounting for your television.

SAFETY INFORMATION

Please read all instructions carefully before installation. Improper installation may result in property damage, serious injury, or death. If you do not understand these instructions or have doubts about the safety of the installation, please contact qualified personnel for assistance.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 99 lbs (45 kg).
- **TV Size:** This mount is designed for TVs between 32-70 inches. Ensure your TV's VESA pattern is within 75x75mm to 400x400mm.
- **Wall Type:** This TV mount is designed for installation on 12/16 inch wood studs, solid concrete, or brick walls **DO NOT mount on drywall alone.**
- **Stud Spacing:** Ensure your wood studs are spaced appropriately for the wall plate.
- **Tools:** Use appropriate tools for installation. Always wear safety glasses.
- **Children:** Keep children away from the installation area.
- **Check Connections:** Periodically check that all screws and connections are secure.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, contact customer support.

- Wall Plate Assembly
- TV Brackets (2 pieces)
- Mounting Hardware (various screws, washers, spacers, lag bolts, concrete anchors)

- Small Bubble Level
- Cable Ties (Velcro straps)
- Instruction Manual

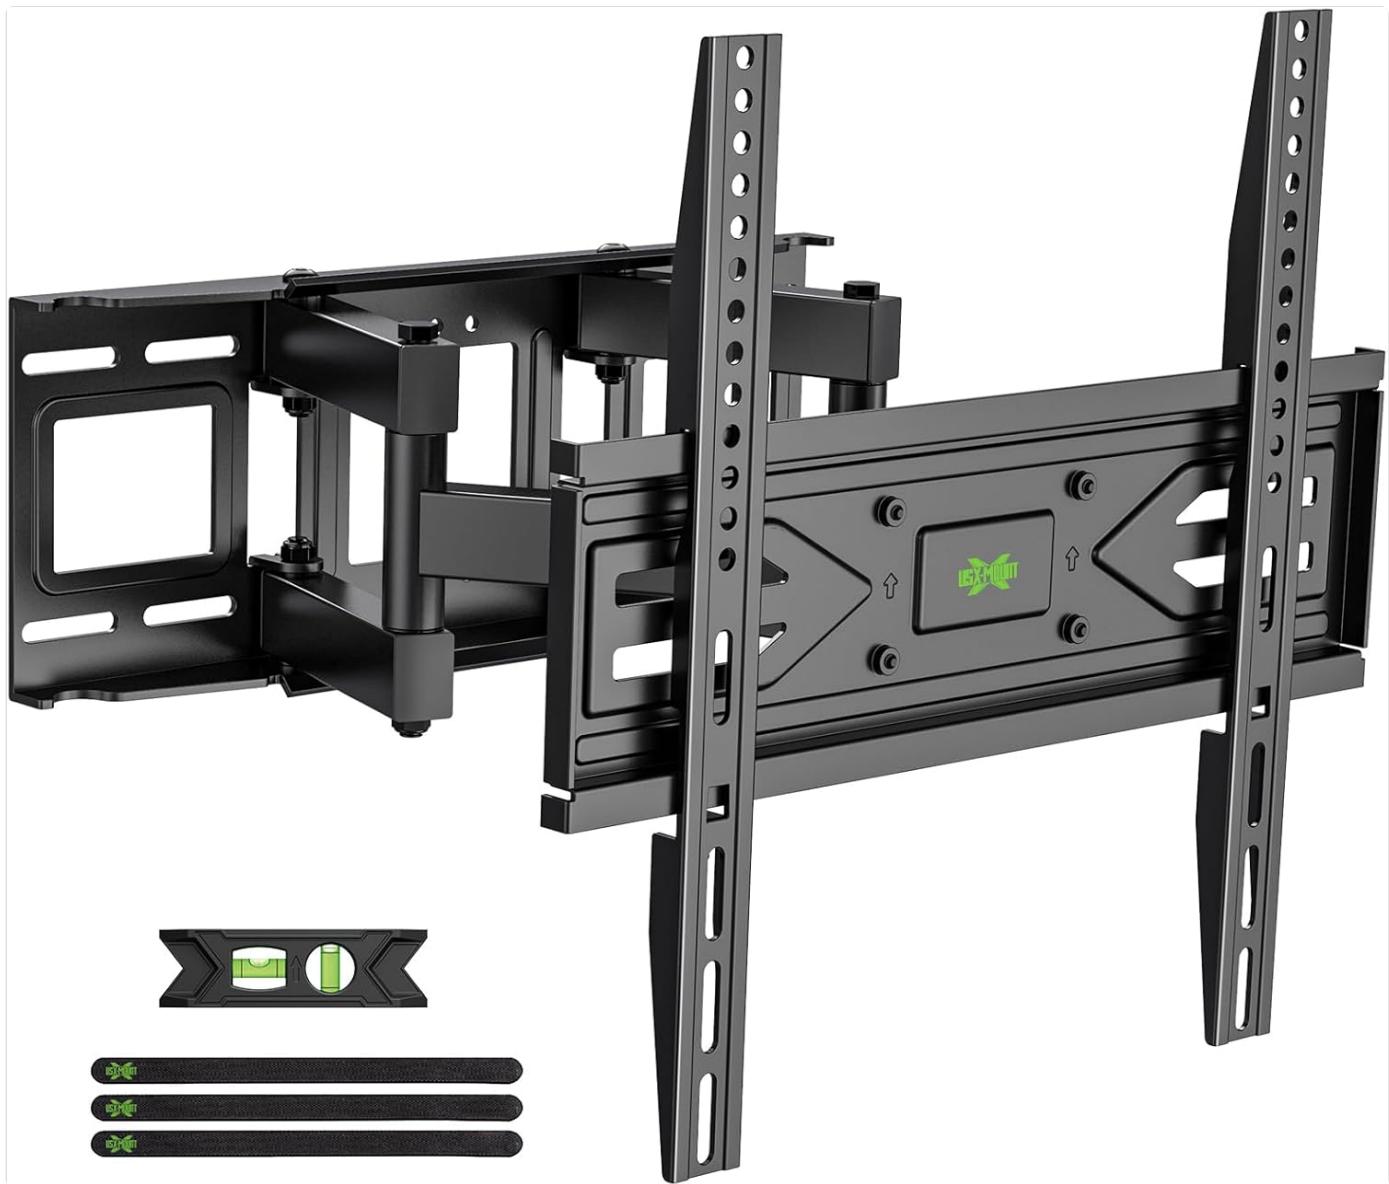


Figure 1: Main components of the USX MOUNT Full Motion TV Wall Mount, showing the articulated arm assembly, a small bubble level for installation, and Velcro cable ties for cable management.

SETUP (INSTALLATION)

Follow these steps for a secure and successful installation. It is recommended to have at least two people for TV mounting.

Step 1: Attach Brackets to TV Back

Carefully place your TV face down on a soft, clean surface. Attach the two TV brackets to the back of your television using the appropriate screws, washers, and spacers from the provided hardware kit. Ensure the brackets are securely fastened and aligned with your TV's VESA mounting holes.

Easy 3-Step Installation

Step 01.

Attach Brackets to TV Back



Step 02.

Install Wall Plate



Step 03.

Hang TV on to Wall Plate



Figure 2: Visual representation of the easy 3-step installation process. Step 1 shows attaching the TV brackets to the back of the television.

Step 2: Install Wall Plate

Locate the desired mounting position on your wall. Use a stud finder to identify wood studs if mounting on drywall with studs. Mark the drill holes for the wall plate. For wood studs, use lag bolts. For concrete or brick walls, use concrete anchors (contact customer support if needed). Ensure the wall plate is level using the provided bubble level before tightening all fasteners securely.

Level After Installation



Figure 3: The wall plate features leveling bolts for fine-tuning the horizontal alignment of the TV after installation, allowing for a ±4° adjustment.



Figure 4: This mount is compatible with 12/16 inch wood studs, concrete, and brick walls. It is crucial not to mount the TV on drywall alone.

Step 3: Hang TV on Wall Plate

With assistance, carefully lift the TV with the attached brackets and hook them onto the wall plate. Ensure the brackets are properly seated on the wall plate. Secure the TV to the wall plate using the locking screws or mechanisms provided, typically located at the bottom of the TV brackets.

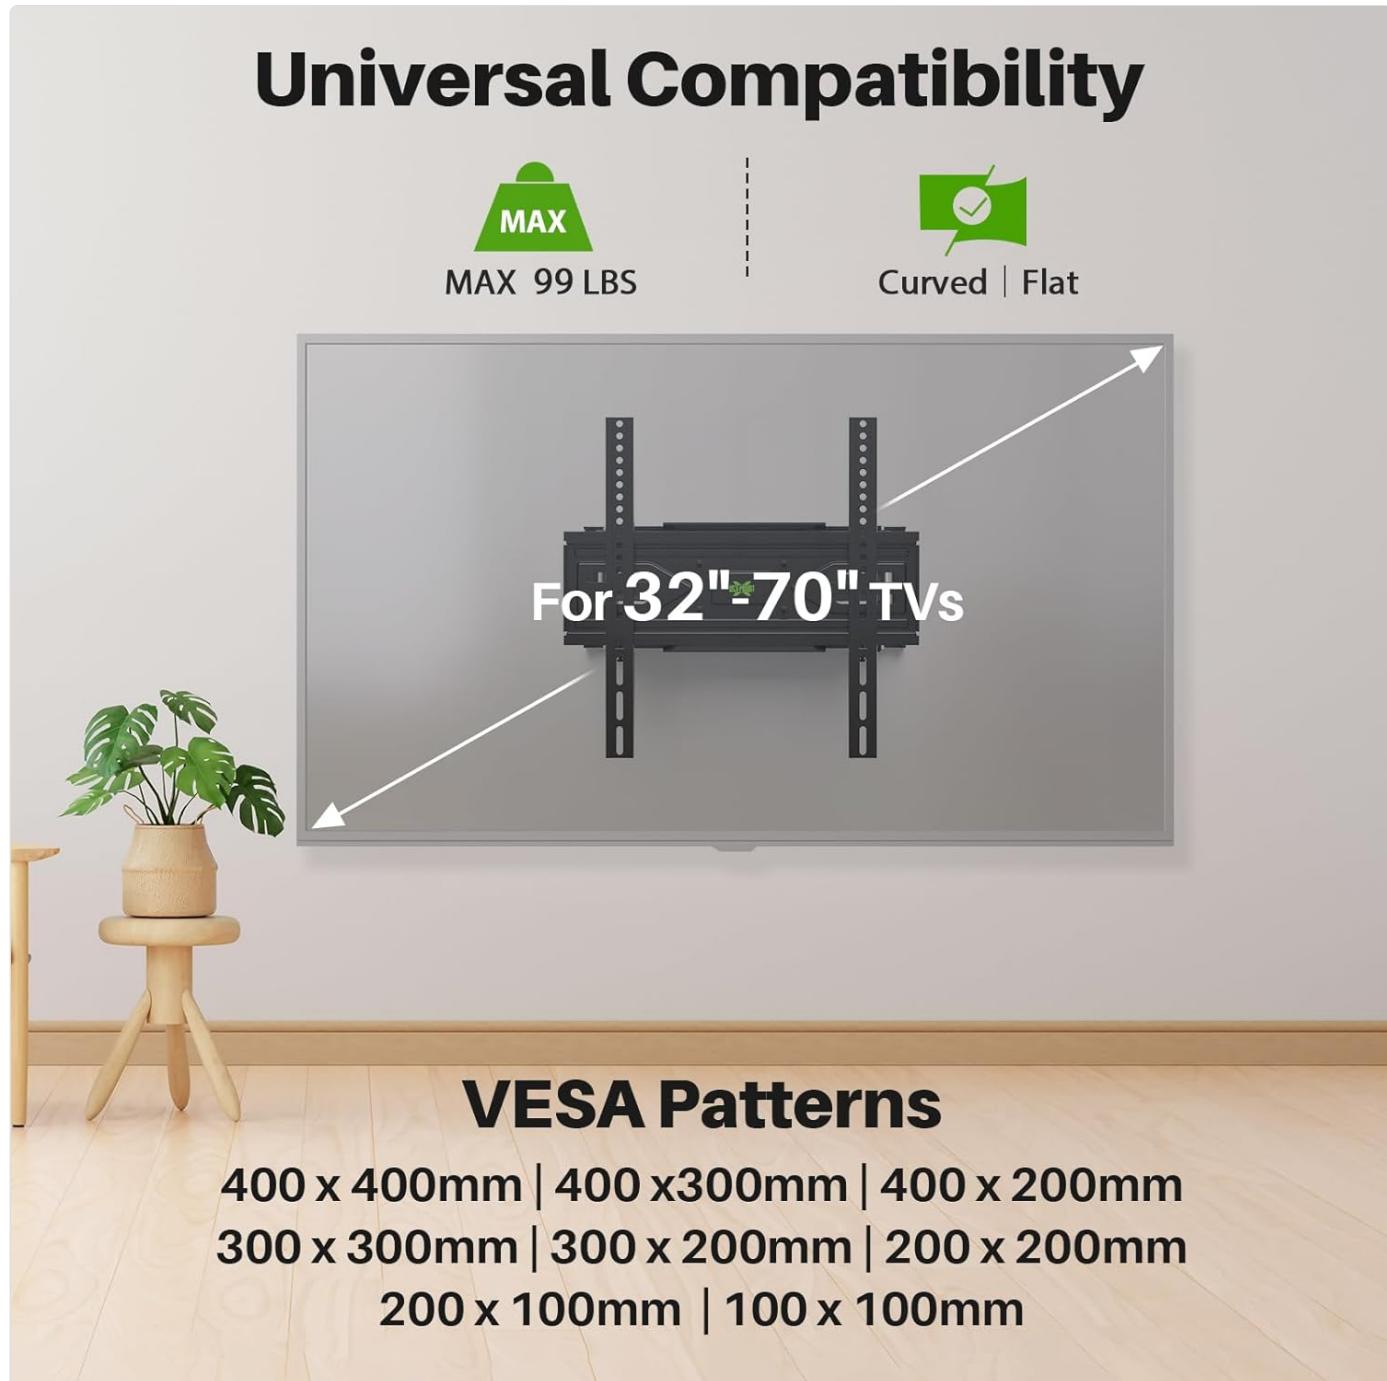


Figure 5: The mount supports TVs from 32 to 70 inches with a maximum weight of 99 lbs, and is compatible with VESA patterns up to 400x400mm.

Installation Videos

For a visual guide on the installation process, please refer to the official product videos below:

Your browser does not support the video tag.

Video 1: Official guide for installing the USX MOUNT TV Wall Mount for 55-65 inch TVs, demonstrating key steps and features.

Your browser does not support the video tag.

Video 2: Official product video showcasing the installation of the USX MOUNT TV Wall Mount for 55 inch TVs, highlighting ease of use.

OPERATING THE MOUNT

Your full motion TV wall mount allows for flexible viewing adjustments:

- **Swivel:** The dual articulating arms allow the TV to swivel left or right up to $\pm 45^\circ$, providing optimal viewing from various seating positions.
- **Tilt:** Adjust the tilt angle from -12° (downward) to $+5^\circ$ (upward) to reduce glare from lights or windows and achieve the perfect viewing angle.
- **Extension & Retraction:** The mount can extend your TV up to 15.7 inches (398.78mm) from the wall and retract back to a slim 3.4 inches (86.36mm), saving space when not in use.

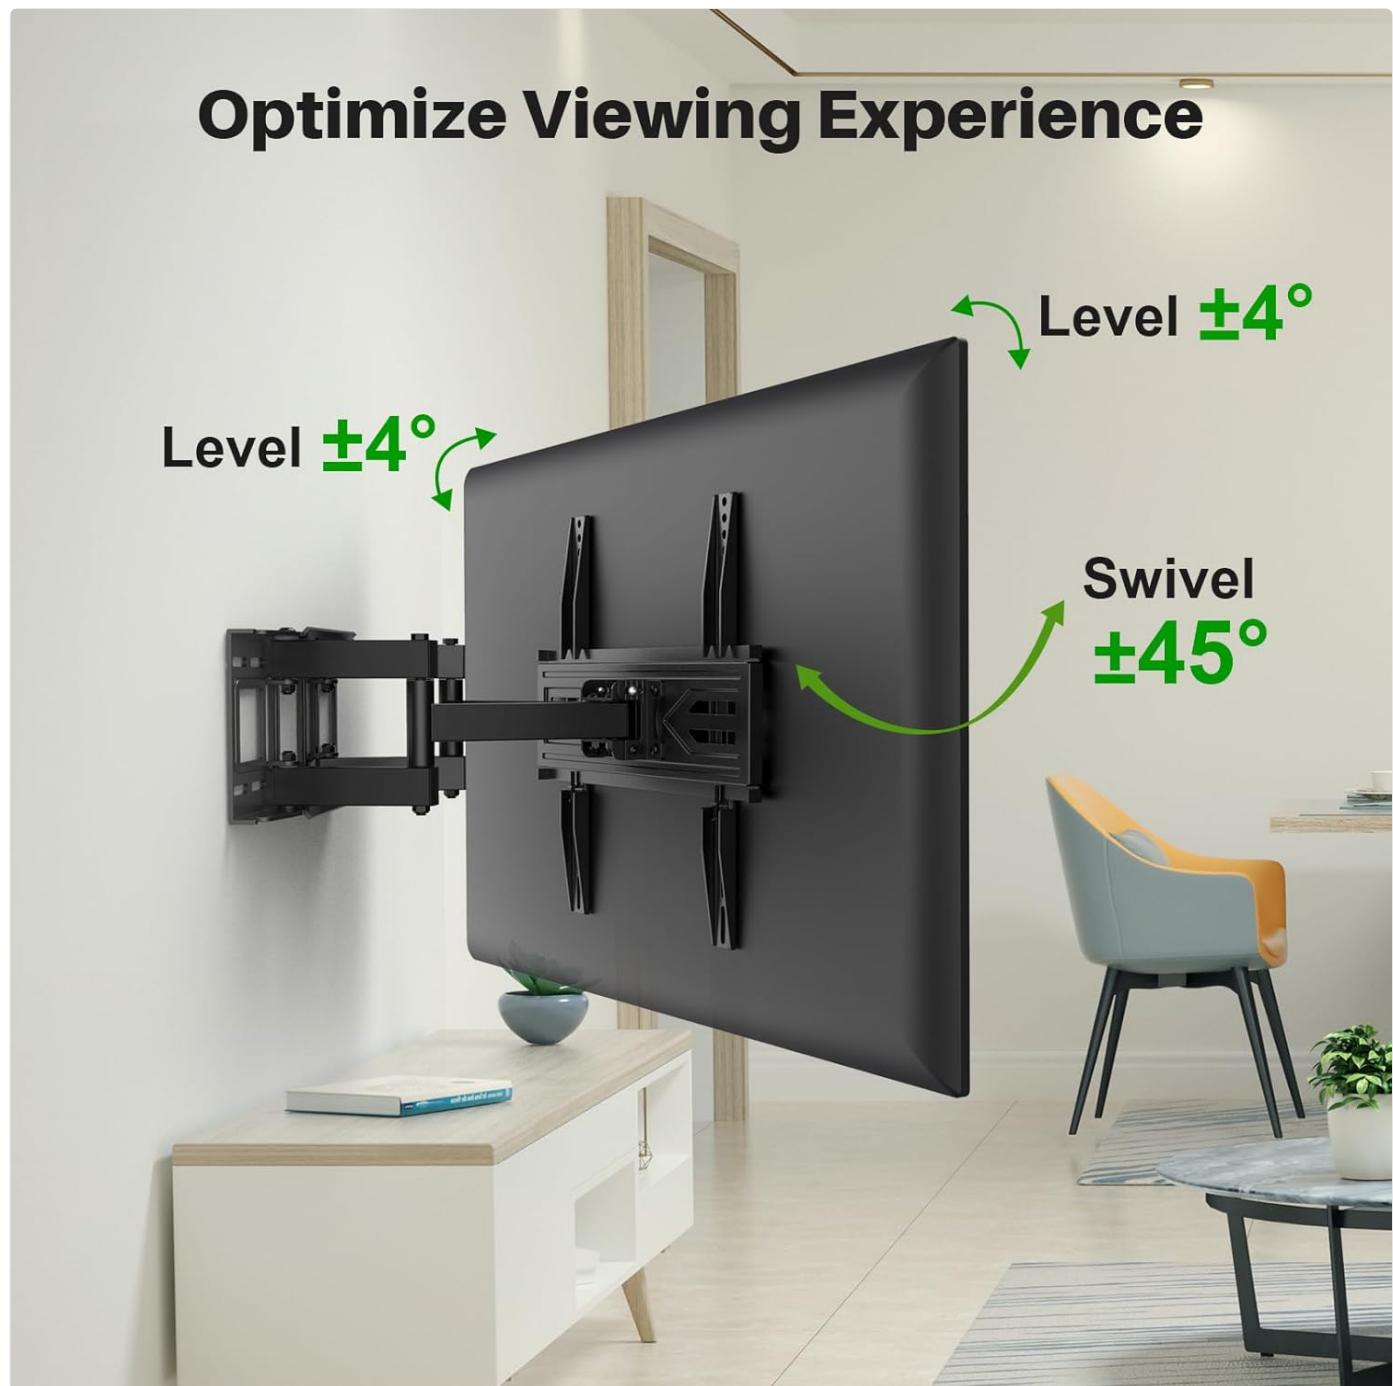


Figure 6: Optimize your viewing experience with the mount's swivel capability, allowing the TV to turn up to $\pm 45^\circ$ for flexible positioning.

Less Glare & Reflection



Figure 7: Reduce glare and reflection with the mount's tilt function, offering adjustments from $+5^\circ$ to -12° . The mount also extends up to 13.89 inches and retracts to 2.59 inches.

MAINTENANCE

To ensure the longevity and safe operation of your TV wall mount, perform the following maintenance tasks:

- **Regular Inspection:** Periodically check all screws, bolts, and connections to ensure they remain tight and secure.
- **Cleaning:** Wipe the mount with a soft, dry cloth to remove dust. Avoid using abrasive cleaners or solvents that could damage the finish.
- **Lubrication:** If the articulating arms become stiff over time, apply a small amount of silicone-based lubricant to the moving joints.

TROUBLESHOOTING

If you encounter any issues with your TV wall mount, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
TV is not level after installation.	Minor misalignment during installation.	Use the post-installation leveling bolts on the wall plate to adjust the TV's horizontal alignment (up to $\pm 4^\circ$).
Difficulty swiveling or extending the TV.	Joints may be stiff or require lubrication.	Apply a small amount of silicone-based lubricant to the articulating joints. Ensure no cables are obstructing movement.
Mount feels unstable.	Loose fasteners or incorrect installation.	Immediately remove the TV from the mount. Re-check all wall plate and TV bracket fasteners for tightness. Ensure the mount is installed into solid wood studs, concrete, or brick, not drywall alone. Consult a professional if unsure.

SPECIFICATIONS

Feature	Detail
Brand	USX MOUNT
Model Number	XMM908
Compatible TV Size	32-70 inches
Maximum Weight Capacity	99 lbs (45 kg)
VESA Compatibility	75x75mm - 400x400mm
Movement Type	Swivel, Tilt, Articulating, Level, Full Motion
Tilt Angle	-12° to +5°
Swivel Angle	$\pm 45^\circ$
Extension from Wall	15.7 inches (398.78mm)
Retraction from Wall	3.4 inches (86.36mm)
Material	Alloy Steel
Color	BLACK
Product Dimensions	17.32 x 16.54 x 2.58 inches
Item Weight	8.8 pounds
UPC	797505421545

WARRANTY AND SUPPORT

USX MOUNT is committed to providing quality products and excellent customer service. Our dedicated customer support team, based in the US, is available to help you every day of the week. Don't hesitate to contact us with any inquiries about using or installing your TV wall mount.

For assistance, please visit the [USX MOUNT Store on Amazon](#) or refer to the contact information provided in your product packaging.