

EAGLE PEAK 10x20



EAGLE PEAK Custom Printed Aluminum Canopy Tent 10x20 ft

Instruction Manual

INTRODUCTION


This manual provides essential instructions for the safe and proper setup, operation, maintenance, and troubleshooting of your EAGLE PEAK Custom Printed Aluminum Canopy Tent (10x20 ft). Please read all instructions carefully before assembly and use to ensure optimal performance and longevity of your product. Retain this manual for future reference.

SETUP INSTRUCTIONS

Follow these steps for a safe and efficient setup of your canopy tent. It is recommended that two or more people assist with the assembly.

1. **Step 1: Partially Open the Frame.** Place the folded frame in the desired location. With a person at each end, gently pull the frame outwards until it is partially open. Do not fully extend yet.
2. **Step 2: Attach the Canopy Top.** Unfold the custom printed canopy top and drape it over the partially opened frame. Align the corners of the canopy with the frame corners. Secure the canopy top to the frame using the attached Velcro straps or ties. Ensure the canopy is centered and evenly distributed.
3. **Step 3: Lock the Frame.** From each corner, lift the outer leg and pull the frame outwards until the frame locks into place. Ensure all four corners are fully extended and locked.
4. **Step 4: Adjust the Height.** Press the push buttons on each leg to extend the telescopic legs to your preferred height. Ensure all legs are extended to the same height for stability.
5. **Step 5: Secure the Canopy.** Use the provided stakes and guy ropes to anchor the canopy to the ground. Attach ropes to the canopy corners and secure them firmly with stakes. This is crucial for stability, especially in windy conditions.

EASY SETUP

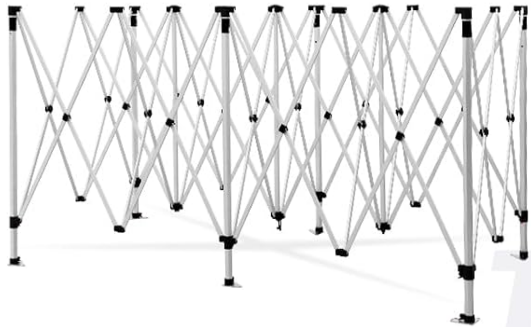

STEP 1 Partially open the frame



STEP 2 Attach the canopy top



STEP 3 Lock the Frame



STEP 4 Adjust the height to preferred shade.

Image: Visual guide for the four-step easy setup process, showing frame extension, canopy attachment, frame locking, and height adjustment.

Frame and Canopy Details

The canopy features a robust aluminum frame and a durable polyester top designed for stability and longevity.

STABLE & STURDY ALUMINUM FRAME



**Reinforced Ceiling
Frame Construction**



**Pinch Free Push
Button Adjust**



Sturdy Foot Plate

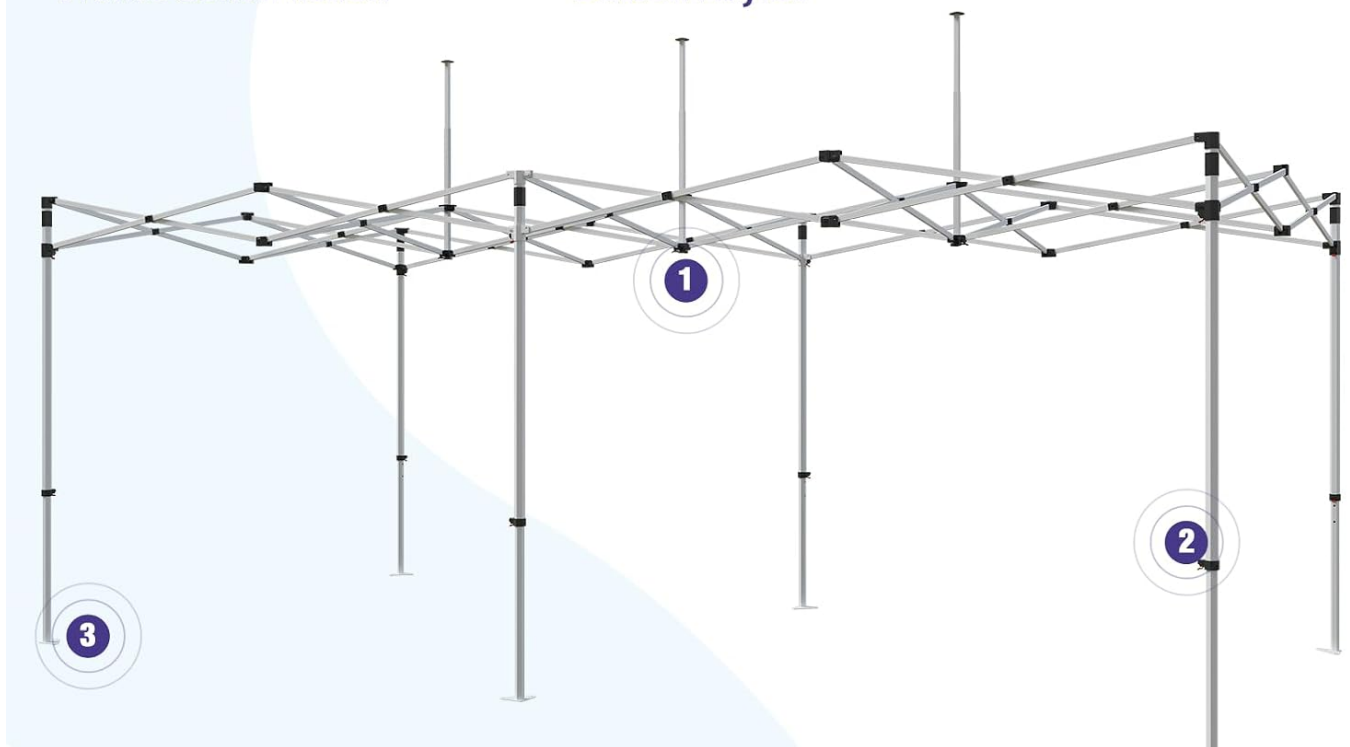 


Image: Detailed view of the aluminum frame components, including reinforced ceiling frame construction, pinch-free push button adjusters, and sturdy foot plates.

DETAILS



 
Heavy Duty Eave Connection



600D PU Fabric



Custom Dye Sublimation Printing

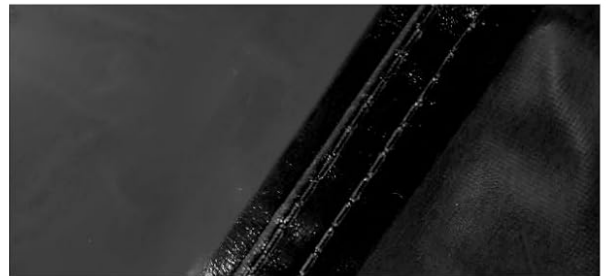

Double Stitched Heat Sealed Seams

Image: Close-up details of the canopy, showing the heavy-duty eave connection, 600D PU fabric, custom dye sublimation printing, and double-stitched heat-sealed seams.

OPERATING INSTRUCTIONS

Your EAGLE PEAK canopy tent is designed for temporary outdoor use, providing shade and shelter for various events.

- **General Use:** Ensure the canopy is always securely anchored to the ground using stakes and ropes, especially in outdoor environments.
- **Wall Panel Installation:** The included wall panel can be attached to any side of the canopy frame using the integrated Velcro fasteners. This provides additional shade, privacy, or protection from wind.
- **Height Adjustment:** The canopy height can be adjusted by pressing the push buttons on each leg. Always adjust all legs evenly to maintain stability.
- **Weather Conditions:** While the canopy top is waterproof and UV protected, it is not designed for extreme weather conditions.

In strong winds, heavy rain, or snow, disassemble and store the canopy to prevent damage.



Image: An EAGLE PEAK custom printed canopy tent set up for an outdoor fitness club event, demonstrating typical usage.



Image: An EAGLE PEAK custom printed canopy tent providing shelter at an outdoor auto art event.

Reinforced Corner Fabric



Image: Illustration showing different configurations of the canopy tent with no walls, one full wall, one full and two half walls, and three full walls.

MAINTENANCE

- **Cleaning the Canopy Top:** Clean the polyester canopy top with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the fabric and printing. Rinse thoroughly and allow to air dry completely before storage.
- **Cleaning the Frame:** Wipe the aluminum frame with a damp cloth to remove dirt and debris. Ensure all moving parts are free of obstructions.
- **Storage:** Always ensure the canopy top and frame are completely dry before folding and storing. Store the tent in its roller bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the frame for any signs of damage or wear. Check the canopy fabric for tears or loose stitching. Address any issues promptly to prevent further damage.

TROUBLESHOOTING

Problem	Solution
Frame is difficult to open or close.	Ensure all locking mechanisms are disengaged. Check for any bent or obstructed parts. Apply a silicone-based lubricant to moving joints if necessary.
Canopy top does not fit correctly.	Verify that the canopy top is oriented correctly and aligned with the frame corners. Ensure the frame is fully extended before attempting to secure the canopy.
Water pooling on canopy top.	Ensure the canopy is taut and properly stretched over the frame. Adjust leg heights if possible to create a slight slope for water runoff.
Canopy is unstable in light wind.	Confirm that all stakes and guy ropes are properly installed and securely anchored to the ground. Consider using additional weight bags (not included) on the legs for extra stability.

SPECIFICATIONS

- Brand:** EAGLE PEAK
- Model:** Custom Printed Aluminum Canopy Tent
- Size:** 10x20 ft (234.6"L x 118.1"W x 133"H)
- Frame Material:** Heavy-duty 40mm Hexagonal Aluminum
- Canopy Material:** 600D Polyester with Pigmented PU Back Coating
- Printing:** 100% Coverage Photographic Dye-Sublimation
- Water Resistance:** Waterproof (Heat-sealed seams)
- UV Protection:** Yes
- Flame Resistance:** Certified to meet NFPA 701 and CPAI-84 standards
- Assembly Required:** Yes
- Package Includes:** (1) Commercial 40mm Aluminum Frame, (1) Custom Canopy Top, (1) Full Wall, (1) Roller Bag, (8) Stakes, (4) Guy Ropes

DIMENSIONS

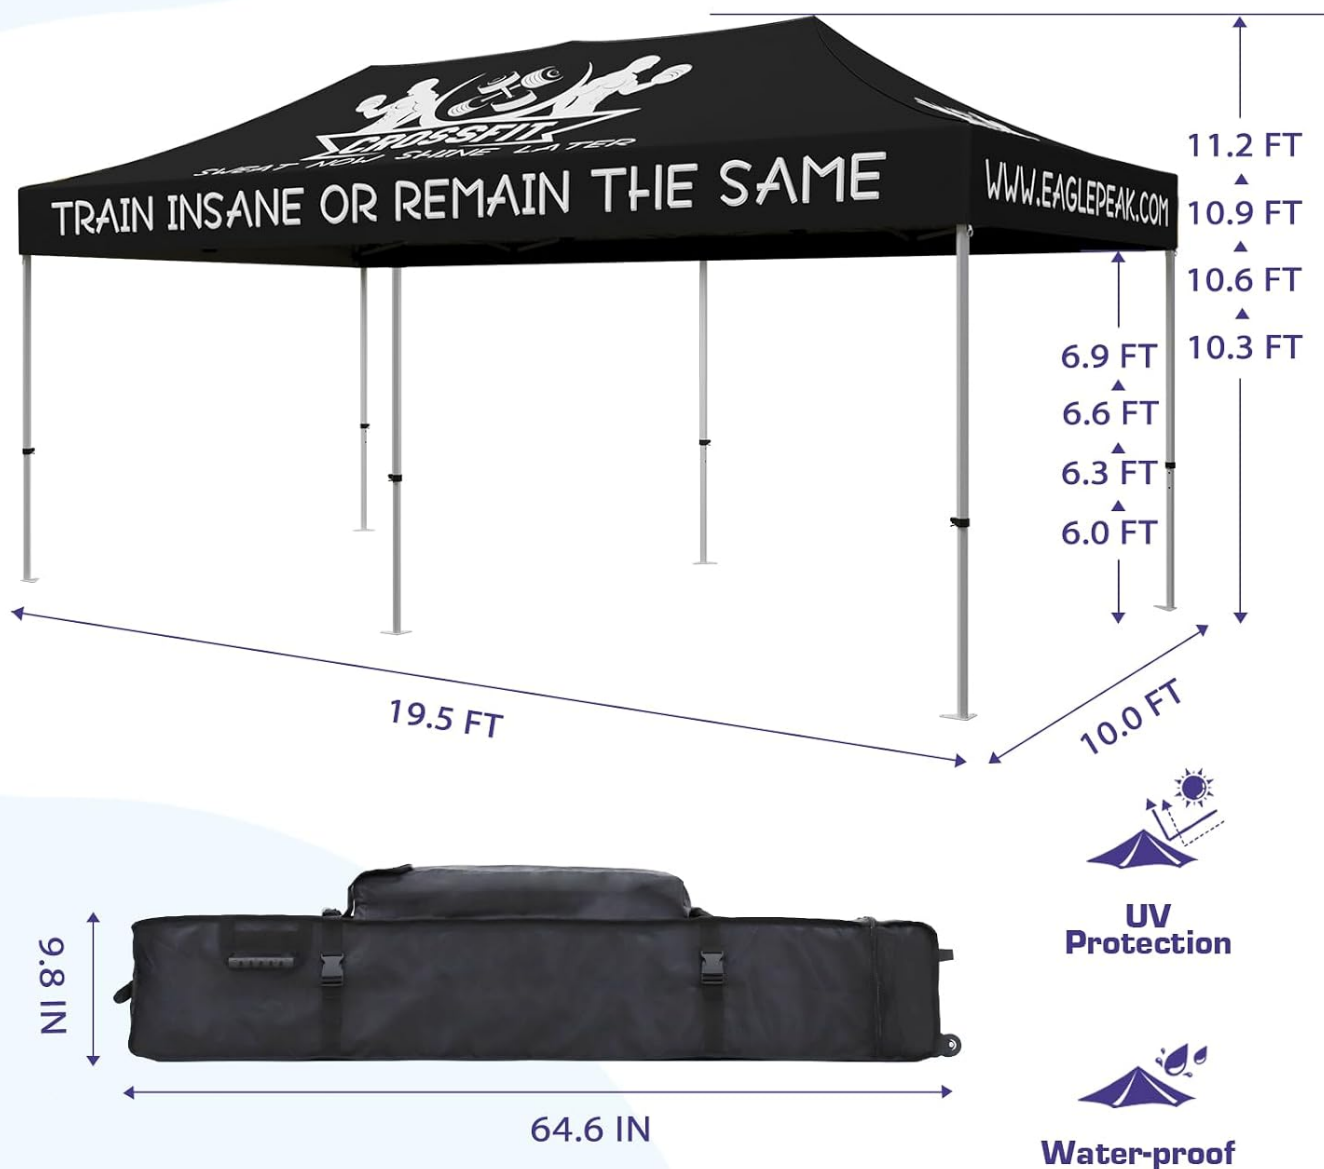 


Image: Diagram illustrating the dimensions of the 10x20 ft canopy tent and its packed size, along with icons indicating UV protection and waterproof features.

WARRANTY INFORMATION

EAGLE PEAK provides the following warranty for this product:

- **Frame Warranty:** 3 years
- **Printed Top Warranty:** 1 year

This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

SUPPORT

For any questions, assistance, or warranty claims regarding your EAGLE PEAK canopy tent, please contact our professional service team. Refer to the contact information provided with your purchase or visit the official EAGLE PEAK website for support.

details.

You can visit the EAGLE PEAK Store for more information: [EAGLE PEAK Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question