

[Manuals.plus](#) /

› [TECKNET](#) /

› TECKNET Wireless Rechargeable Silent Mouse User Manual (Model TK-MS009)

TECKNET TK-MS009

TECKNET Wireless Rechargeable Silent Mouse User Manual

Model: TK-MS009

INTRODUCTION

Thank you for choosing the TECKNET Wireless Rechargeable Silent Mouse. This manual provides detailed instructions to help you get the most out of your new device. Please read it carefully before use and keep it for future reference.

PACKAGE CONTENTS

- TECKNET Wireless Rechargeable Silent Mouse
- USB Receiver
- USB-C Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the mouse components:

- 1 Pulsante Avanti
- 2 Pulsante Indietro
- 3 Pulsante di Sinistra
- 4 Bottone Giusto
- 5 Interruttore di Scorrimento
- 6 Pulsante di Commutazione DPI



- Porta di Ricarica di Tipo C 7
- Tappetino Antiscivolo 8
- 2.4G/Spento 9
- Ricevitore Usb 10
- Spia 11



Figure 1: Mouse Components Diagram

1. Forward Button
2. Backward Button
3. Left Button
4. Right Button
5. Scroll Wheel
6. DPI Switch Button
7. Type-C Charging Port
8. Anti-slip Pad
9. 2.4G/Off Switch
10. USB Receiver Storage
11. Indicator Light

SETUP INSTRUCTIONS

1. Charging the Mouse

Before first use, it is recommended to fully charge the mouse. Connect the provided USB-C charging cable to the mouse's Type-C charging port and the other end to a USB power source (e.g., computer USB port, USB wall adapter).

Durata Della Batteria di Lunga Durata

Dura mesi con una singola carica

700mAh



The mouse features a 700mAh built-in battery, providing extended usage on a single charge. The indicator light will show charging status.

Ricarica Rapida e Durata Della Batteria di Lunga Durata

1.5-2Ore

Completamente Carico

90 Giorni(2 Ore/Giorno)

Durata Della Batteria A Piena Carica



Porta di Tipo C



Ricevitore Usb



Risparmio Energetico



A full charge takes approximately 1.5-2 hours and can last up to 90 days (based on 2 hours/day usage).

2. Connecting the USB Receiver

The mouse uses a 2.4GHz wireless connection for reliable data transmission.

- Locate the USB receiver stored in the compartment on the underside of the mouse.
- Plug the USB receiver into an available USB port on your computer (PC, laptop, Chromebook, etc.).
- Turn on the mouse using the 2.4G/Off switch located on the underside.
- Your computer should automatically detect and install the necessary drivers. The mouse is plug-and-play, requiring no additional software.



The effective working distance is up to 15 meters.



Ensure the mouse is switched on after plugging in the receiver.

OPERATING INSTRUCTIONS

DPI Adjustment

The mouse features 6 adjustable DPI levels (800/1200/1600/2400/3200/4800) to suit various tasks, from precise targeting to fast gaming movements. Press the DPI switch button (Component 6 in Figure 1) to cycle through the DPI settings.

6 Livelli di DPI ad Alta Precisione

Sensibilità fino a 4800 DPI, soddisfa facilmente diverse esigenze come ufficio, design, giochi, ecc.

4800 DPI



Controllo Preciso

Adjust DPI for optimal cursor speed and precision.



800 - 1600 DPI Per un Targeting Preciso



1600 - 2400 DPI Per la Produttività Quotidiana



2400 - 3200 DPI
Per una Maggiore Velocità del Cursore



3200 - 4800 DPI
Per un Movimento di Gioco Rapido

4800 DPI



DPI settings for different usage scenarios.

Silent Click Feature

The mouse is designed for silent operation, reducing click noise by up to 90%. This allows for a quiet working environment without disturbing others.



Clic Silenzioso

Suono del clic impercettibile, silenzioso e concentrato, senza disturbare gli altri



Enjoy a quiet working experience.



0-20dB
Suono dei Fiori che Sbocciano

20-30dB
Suono del Clic del Pulsante

40-50dB
Suono Della Biblioteca

60-70dB
Suono del Tocco Della Tastiera

Godetevi il Mondo Della Tranquillità

Pulsante Mute, Riduzione del Rumore del 90%, Clic più Silenzioso.

Sound level comparison demonstrating reduced click noise.

Ergonomic Design

The mouse is ergonomically designed to fit the natural curvature of your hand, reducing muscle pressure by up to 30% and ensuring comfortable use for extended periods. Soft natural rubber grips on the sides provide a secure and comfortable hold.



Design Ergonomic


Si adatta alla curvatura naturale del palmo umano per mantenere una sensazione confortevole



Ergonomic shape for comfortable use.

Misura la Dimensione Della Tua Mano

Questo mouse wireless è più adatto per mani di piccole e medie dimensioni. Tuttavia, se hai le mani più grandi ma ti piace un mouse più piccolo, potrebbe piacerti anche questo. (Solo per riferimento)

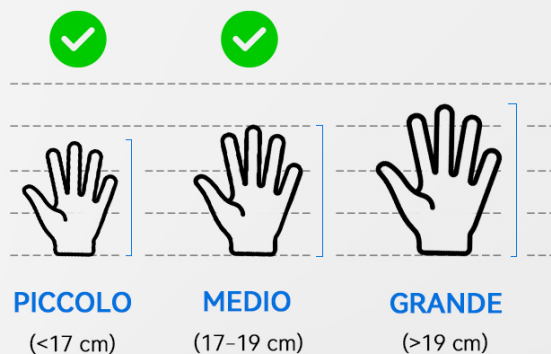

This mouse is suitable for small to medium hand sizes. Refer to the guide for reference.

Power Saving Features

The mouse includes intelligent power-saving features:

- **Auto Sleep Mode:** If inactive for 10 seconds, the mouse enters standby mode. After 10 minutes of inactivity, it enters deep sleep mode to conserve battery.
- **Wake-up Function:** Press any button to wake the mouse from sleep mode.



Power saving modes for extended battery life.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no moisture enters the device.
- **Charging:** Recharge the mouse when the indicator light signals low battery. Avoid completely draining the battery frequently to prolong its lifespan.
- **Storage:** When not in use for extended periods, turn off the mouse and store the USB receiver in its designated compartment.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mouse not responding	Low battery; USB receiver not connected; Mouse switched off; Driver issue.	Charge the mouse; Ensure USB receiver is securely plugged in; Turn on the mouse; Try a different USB port; Restart computer.
Intermittent connection or lag	Interference from other wireless devices; Distance from receiver; Obstructions.	Move closer to the receiver; Remove obstructions; Avoid using near other 2.4GHz devices; Try a different USB port.
Cursor movement is erratic or imprecise	Dirty optical sensor; Unsuitable surface; Incorrect DPI setting.	Clean the optical sensor; Use a mouse pad or a smooth, non-reflective surface; Adjust DPI settings.
Mouse does not charge	Faulty charging cable; Faulty USB port; Mouse issue.	Try a different USB-C cable; Try a different USB power source; Contact customer support if the issue persists.

SPECIFICATIONS

Brand	TECKNET
Model Number	TK-MS009
Color	White
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Special Features	Rechargeable, Long Battery Life, Silent Click, Ergonomic Design
Movement Detection Technology	Optical
Number of Buttons	6
Hand Orientation	Right-handed
Compatible Devices	Laptop, PC, Chromebook, Computer
Operating Systems	Windows 11/10/8.1/8/7/Vista/XP, Linux, Mac OS (side buttons not available on Mac OS)
Average Battery Life	1050 Hours (approx. 1-2 months on 2-hour charge)
Max Sensitivity	4800 DPI
Wireless Range	15 meters

Dimensions (L x W)	10.6L x 6.8W cm
Material	Plastic

WARRANTY AND SUPPORT

TECKNET offers a **36-month warranty** for registered users. If you encounter any issues during the use of your mouse, please contact our professional customer service team as soon as possible. We are committed to assisting you in resolving any problems.

For support, please visit the official TECKNET website or refer to the contact information provided with your product packaging.

Online Resources:

- [TECKNET Official Store on Amazon](#)
- [User Manual \(PDF\)](#)