

[Manuals.plus](#) /

› [ADUST](#) /

› ADUST Camping Battery Operated Powered Fan with LED Lantern Light 20000mAh Rechargeable Portable Oscillating Fan with 360° Rotation Hanging Hook for Tents, Cordless USB Desk Fan(Orange) User Manual

ADUST F6

ADUST Camping Fan User Manual

Model: F6

Brand: ADUST

1. INTRODUCTION

Thank you for choosing the ADUST F6 Camping Fan. This versatile device combines a powerful fan, a bright LED lantern, and a convenient power bank, making it an essential companion for camping, outdoor activities, or as a reliable backup for home use. This manual provides detailed instructions for safe and efficient operation, setup, and maintenance of your new fan.



The ADUST F6 Camping Fan, showcasing its fan, LED light, remote control, and power bank capabilities.

2. PRODUCT FEATURES

- **20000mAh Battery with Power Bank Function:** High-capacity battery provides 12-138 hours of continuous use depending on settings. Features 5V/3A Type-C input/output and 5V/3A USB output for charging mobile devices.
- **Quiet Sleep Mode:** Long press the sleep mode button to shut off noisy beeping sounds and indicator lights for undisturbed rest.
- **Dual Control Modes:** Operate the fan via on-device buttons or the included remote control for convenience.
- **Versatile Movement:** Offers selectable 45°/90° auto oscillation, 270° manual pivoting, and a 360° hanging hook for flexible placement and airflow direction.
- **4 Wind Speed Levels:** Adjust airflow from gentle breeze (Speed 1: 58 hours) to powerful gust (Speed 4: 12 hours).
- **Multi-functional LED Lantern:** Features 3 levels of light brightness (Low: 138 hours, High: 39 hours) and 3 color temperatures (warm, cold, warm & cold) to illuminate your environment.
- **Timer Function:** Set the fan to operate for 1, 2, 4, or 8 hours.

- **Multiple Scenarios:** Ideal for indoor use as a desk or floor fan, and perfect for outdoor activities like camping, beach trips, or job sites.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing:

- ADUST F6 Camping Fan
- Remote Control
- USB Charging Cable (Type-C)

4. SETUP INSTRUCTIONS

4.1 Initial Charging

Before first use, fully charge the fan. Connect the provided USB Type-C cable to the fan's Type-C input/output port and plug the other end into a 5V/3A (or less) USB power adapter (not included). The battery indicator will show charging status.

20000mAh Rechargeable Battery



USB Output 5V/3A

Type C Input/Output 5V/3A

The fan's charging ports, including USB-C input/output and USB-A output for power bank functionality.

4.2 Remote Control Preparation

The remote control comes with an insulating plate in the battery slot. Remove this plate before attempting to use the remote.

Dual Control Modes

Button Control



Short Press: Choose light's brightness



Long Press: Switch color temperature (Only work on button mode)



Short Press: Turn on&off indicator light



Long Press: Mute/Un-Mute button's response sound (Only work on button mode)




Switch fan speed



Choose 1H/2H/4H/8H timer



Choose 45°/90° auto oscillation

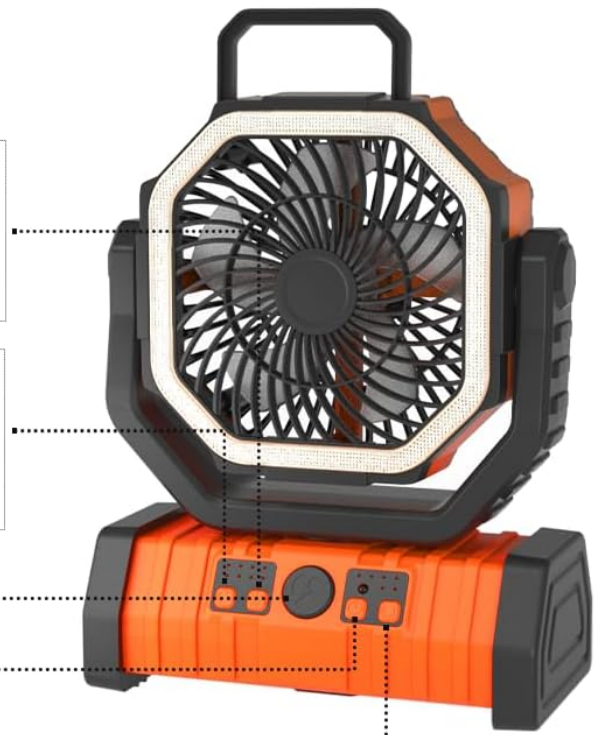

Remote Control



Choose light's brightness



Switch fan speed



OFF: Shut down completely



Choose 1H/2H/4H/8H timer



Turn on&off indicator light




Choose 45°/90° auto oscillation

Illustration of the fan's button controls and the remote control layout.

4.3 Placement Options

- **Table/Floor Use:** Place the fan on a flat, stable surface. The rubber feet on the bottom provide stability.
- **Hanging:** Utilize the integrated 360° hanging hook to suspend the fan from a tent ceiling, canopy, or other suitable structure.

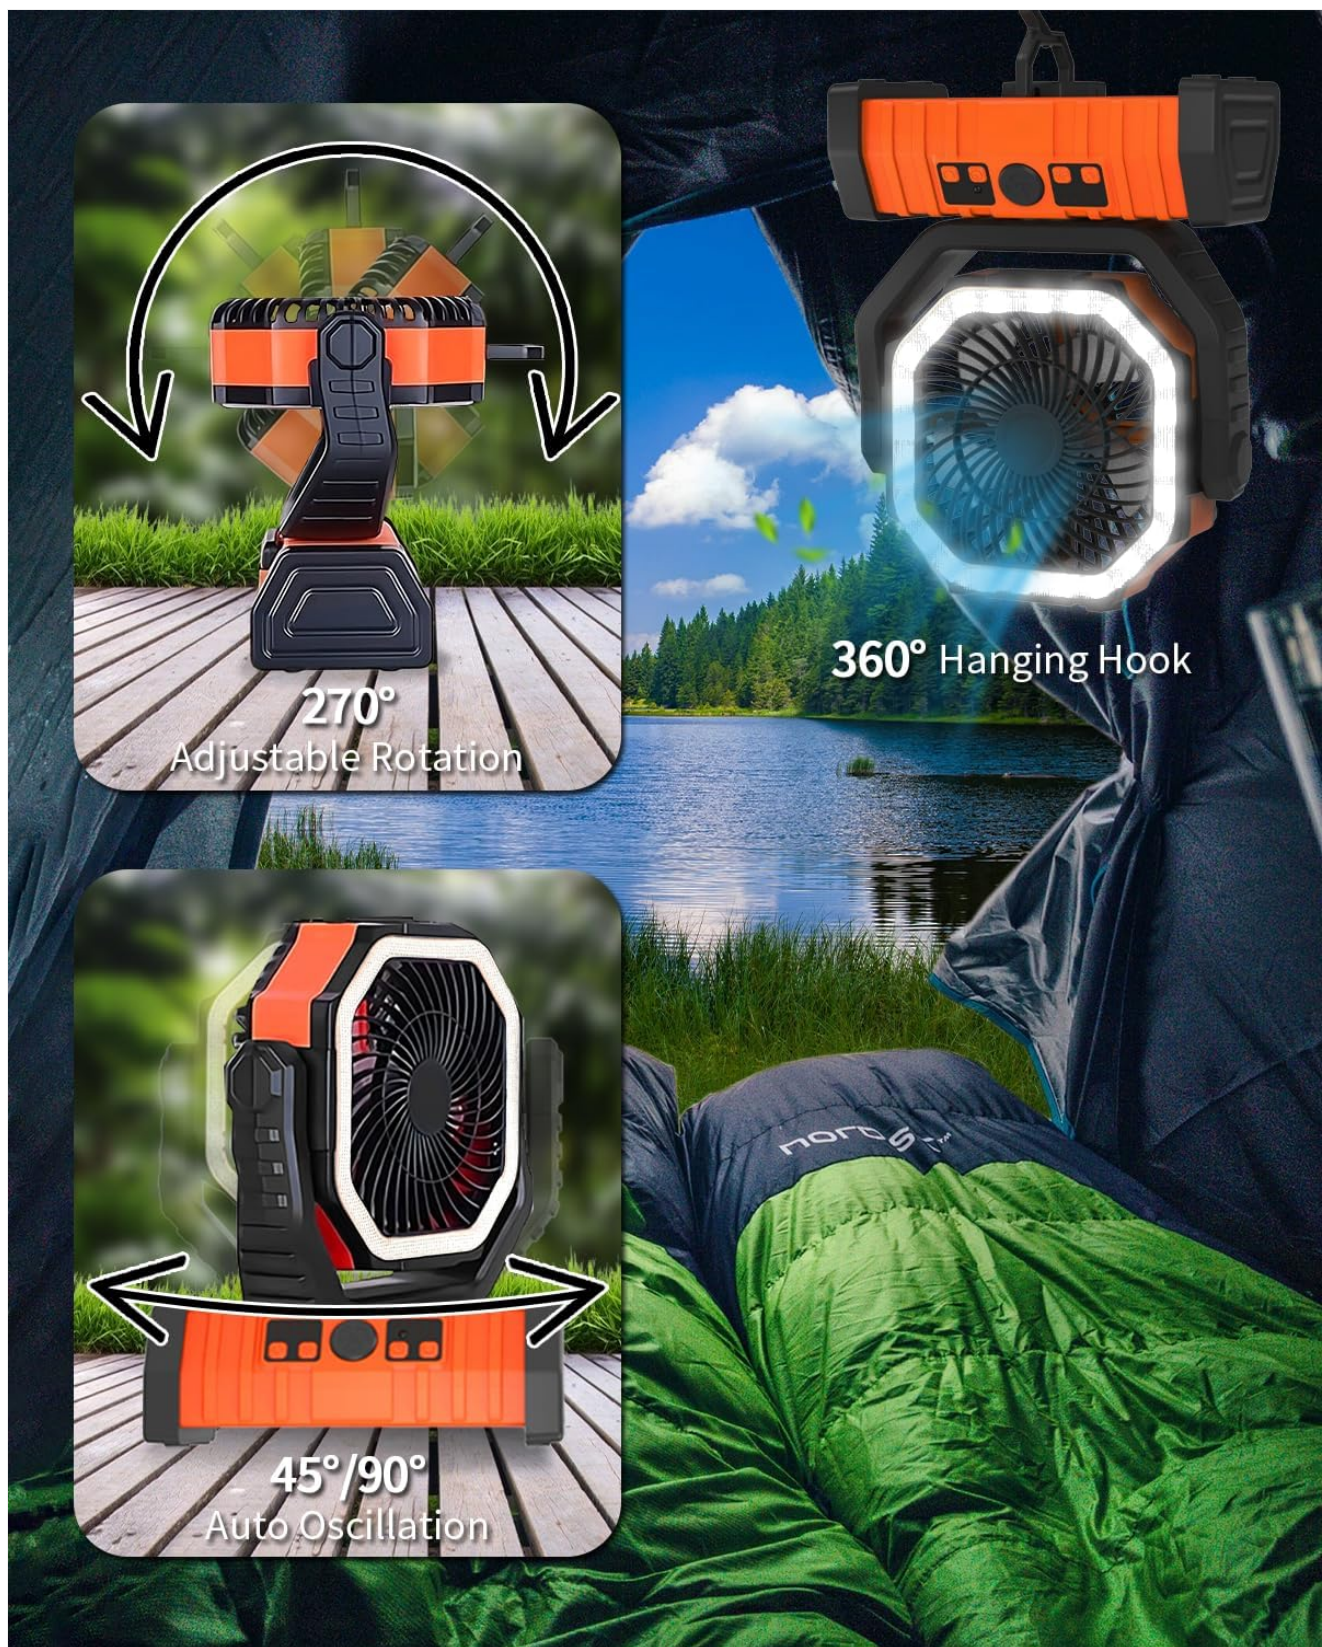

Demonstration of the fan's adjustable rotation, hanging hook, and auto oscillation features.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Buttons:** Press the power button on the fan base to turn on/off.
- **Remote:** Press the 'OFF' button on the remote to shut down completely.

5.2 Fan Speed Adjustment

The fan has 4 wind speed levels.

- **Buttons:** Short press the fan button on the base to cycle through speeds.
- **Remote:** Use the 'Wind Plus' and 'Wind Decrement' buttons to adjust speed.



Visual representation of the four fan speed settings and their approximate battery durations.

5.3 LED Lantern Operation

The LED lantern offers adjustable brightness and color temperature.

- **Brightness:** Short press the lamp button on the base or use 'Brightness Plus'/'Brightness Reduction' on the

remote.

- **Color Temperature:** Long press the lamp button on the base to cycle through warm, cold, and warm&cold light.

Whole Circle Light and More Light Choice



Overview of the fan's LED light options, including color temperatures and brightness levels with battery life estimates.

5.4 Oscillation and Pivoting

- **Auto Oscillation:** Use the oscillation button on the base or remote to select 45° or 90° automatic oscillation. The angle can also be fixed.
- **Manual Pivoting:** Manually adjust the fan head 270° up or down to direct airflow.

5.5 Timer Function

Set a timer for automatic shut-off.

- **Buttons:** Short press the timer button on the base to select 1H, 2H, 4H, or 8H.
- **Remote:** Use the 'Timing settings' button on the remote.

5.6 Sleep Mode

For a quiet environment, activate sleep mode.

- **Mute Response Sound:** Long press the 'Sleep Mode' button on the base to mute/unmute the fan's response sound.
- **Turn Off Indicator Lights:** Short press the 'Sleep Mode' button on the base to turn off the indicator lights.

Shut off the Noisy Beeping

Enjoy all-day **serenity and comfort** when you're in sleep or in forest camping trips.



The fan operating in sleep mode, designed for serenity and comfort during rest.

5.7 Power Bank Function

Use the fan's built-in battery to charge other devices.

- Connect your device to the fan's 5V/3A USB output port using a compatible charging cable.

6. MAINTENANCE

- **Cleaning:** Ensure the fan is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe down the

exterior. Do not use abrasive cleaners or immerse the fan in water.

- **Storage:** Store the fan in a cool, dry place when not in use. If storing for an extended period, charge the battery to approximately 50% every 3 months to maintain battery health.
- **Battery Care:** Avoid fully discharging the battery frequently. Recharge the fan when the battery level is low to prolong its lifespan.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB Type-C cable.
Remote control not working.	Insulating plate not removed from remote.	Remove the clear insulating plate from the remote's battery compartment.
Noisy beeping sound.	Sleep mode not activated.	Long press the 'Sleep Mode' button on the base to mute the response sound.
Indicator lights are on at night.	Indicator lights not turned off.	Short press the 'Sleep Mode' button on the base to turn off indicator lights.
Device not charging from fan (power bank function).	Fan battery is low or cable is incompatible.	Ensure fan has sufficient charge. Use a compatible USB cable for your device.

8. SPECIFICATIONS

Feature	Detail
Brand	ADUST
Model Name	F6
Power Source	Battery Powered
Battery Capacity	20000mAh (2 Lithium Ion batteries included)
Input/Output	5V/3A Type-C (Input/Output), 5V/3A USB (Output)
Wattage	15 watts
Voltage	5 Volts
Fan Speeds	4 Levels
Light Type	LED
Light Brightness	3 Levels
Light Color Temperature	3 (Warm, Cold, Warm&Cold)
Oscillation	45°/90° Auto Oscillation

Feature	Detail
Pivoting	270° Manual
Hanging Hook	360° Rotation
Timer	1/2/4/8 Hours
Control Method	Remote, Push Button
Product Dimensions	4.5"D x 8.8"W x 11.2"H
Item Weight	2.76 pounds
Material	Plastic

9. WARRANTY AND SUPPORT

ADUST products are designed for reliability and performance. For any questions, concerns, or technical support regarding your ADUST F6 Camping Fan, please refer to the product's packaging for specific warranty information or contact ADUST customer service directly through the retailer's platform or the official ADUST website. Please have your model number (F6) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

