

[Manuals.plus](#) /

› [WMARK](#) /

› WMARK NG-9003 Professional Hair Clipper User Manual

WMARK NG-9003

WMARK NG-9003 Professional Hair Clipper User Manual

Model: NG-9003

1. INTRODUCTION

Thank you for choosing the WMARK NG-9003 Professional Hair Clipper. This high-performance grooming tool is designed for efficient and precise hair cutting, featuring a powerful magnetic motor and adjustable stainless steel blades. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new hair clipper.

Product display



Image 1.1: The WMARK NG-9003 Professional Hair Clipper on its charging stand.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance.

- This product is battery-powered. Keep the appliance away from water sources to prevent electric shock.
- The blades are sharp. Exercise caution during use and cleaning to avoid skin irritation or injury.
- Always follow recommended cleaning and maintenance procedures to ensure safe operation and longevity of the product.
- Do not attempt to disassemble or repair the clipper yourself. Contact qualified service personnel for assistance.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- WMARK NG-9003 Hair Clipper
- Charging Stand
- Power Adapter
- 6 Guide Combs (various sizes: 1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm)
- Cleaning Brush
- Lubricating Oil
- Extra Hair Clipper Cover (optional, may vary by package)



Image 3.1: Overview of the WMARK NG-9003 hair clipper and included accessories.



Image 3.2: Detailed view of the six guide combs provided with the clipper.

4. PRODUCT FEATURES

The WMARK NG-9003 Professional Hair Clipper offers advanced features for a superior grooming experience:

- **High-Speed Magnetic Motor:** Equipped with a powerful 10,000 RPM microchipped magnetic motor for efficient and quick hair cutting.
- **Adjustable Stainless Steel Blades:** Features 5 levels of adjustable stainless steel blades (440C fade blade) for precise trimming and easy maintenance.
- **Long-Lasting Battery:** Integrated 3200mAh lithium battery provides approximately 120 minutes of use after a 3-hour full charge.
- **Versatile Use:** Ideal for facial and body hair grooming, suitable for all hair types.
- **Convenient Charging:** Includes a dedicated charge stand for easy and convenient recharging.
- **Durable & Lightweight Design:** Weighing approximately 1.03 kg, designed for comfort and durability during extended



FEATURES

 
-  High speed magnetic motor.
-  440C stainless steel fade blade
-  3 hours full charge for 120 mins use.
-  With 5 adjustable cutting length.
-  3200mAh lithium battery

Image 4.1: Key features of the WMARK NG-9003 hair clipper.

High Performance Precision Blades

With precision engineered stainless steel blades for easy smooth cutting



Image 4.2: High-performance precision blades and magnetic motor.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the clipper for approximately 3 hours.
2. Connect the power adapter to the charging stand.
3. Place the clipper onto the charging stand, ensuring proper contact. The indicator light will show charging status.
4. Once fully charged, disconnect the adapter.

5.2 Attaching Guide Combs

1. Ensure the clipper is turned off before attaching or removing guide combs.
2. Select the desired guide comb length (e.g., 1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm).

3. Align the comb with the clipper blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.

6. OPERATING INSTRUCTIONS

6.1 Turning On/Off

Locate the power switch on the clipper body. Slide it to the 'ON' position to start the clipper and to the 'OFF' position to turn it off.

6.2 Adjusting Blade Length

The clipper features 5 levels of adjustable blades. Use the taper lever on the side of the clipper to adjust the cutting length without a guide comb, allowing for fine-tuning and blending.

6.3 Hair Cutting Techniques

1. Ensure hair is clean and dry before cutting.
2. Attach the desired guide comb for the initial cut length.
3. Hold the clipper with the blade teeth pointing upwards and flat against the head.
4. Move the clipper slowly against the direction of hair growth.
5. For blending and fading, use shorter guide combs or adjust the taper lever.
6. Regularly clear cut hair from the blades during use to maintain performance.



Trim your hair to your desired length



Trim your beard to your desired length

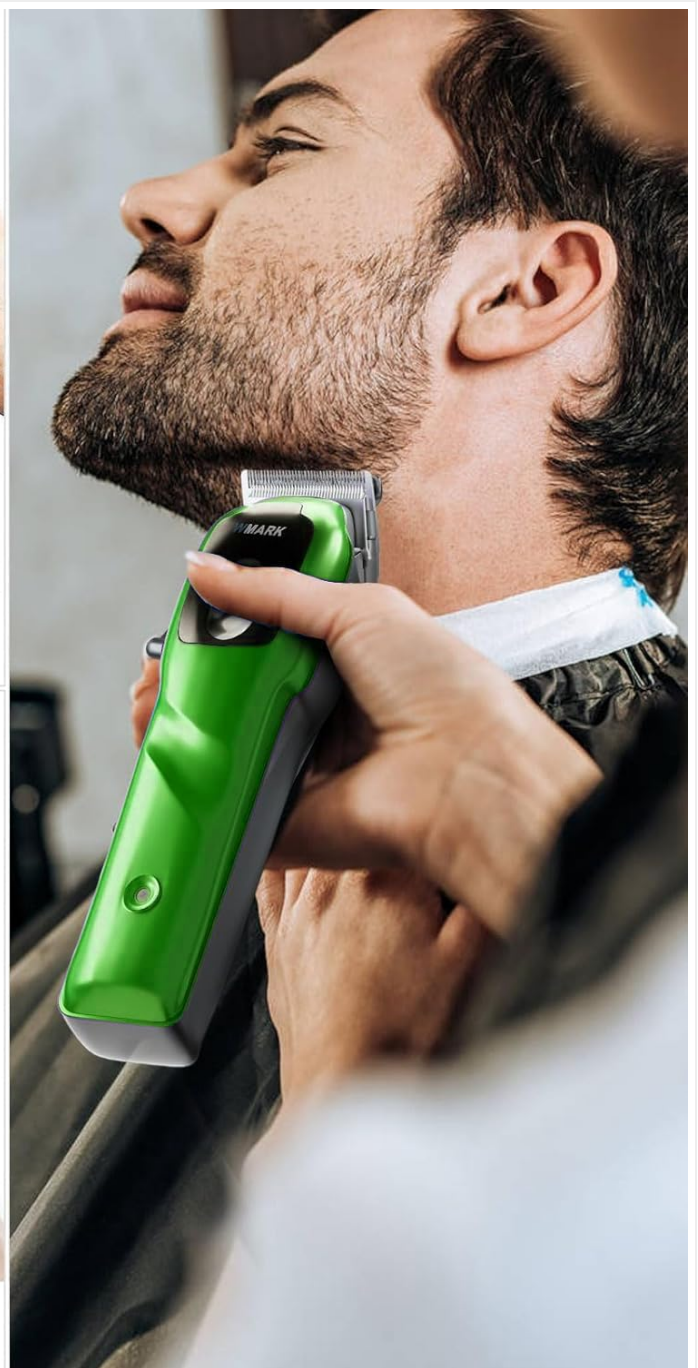


Image 6.1: Examples of using the clipper for hair and beard trimming.

7. MAINTENANCE

7.1 Cleaning the Blades

1. Turn off the clipper and disconnect it from the power source.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to remove loose hair from the blades and the clipper body.
4. For a more thorough clean, the blades can be carefully detached (refer to specific instructions if provided with your model for blade removal).

7.2 Oiling the Blades

1. After cleaning, apply 1-2 drops of the provided lubricating oil across the top of the blades.

- 2. Turn the clipper on for a few seconds to allow the oil to distribute evenly.
- 3. Wipe off any excess oil with a soft cloth.
- 4. Oiling regularly (after every few uses) helps maintain blade sharpness and smooth operation.

7.3 Storage

Store the clipper in a cool, dry place, away from direct sunlight and moisture. Ensure the clipper is clean and oiled before storing for extended periods.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.
Clipper pulls hair or cuts poorly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If blades are dull, consider professional sharpening or replacement.
Clipper makes unusual noise.	Blades are misaligned or internal issue.	Ensure blades are properly aligned. If noise persists, contact customer support.
Clipper overheats.	Extended continuous use or blocked ventilation.	Allow the clipper to cool down. Ensure ventilation ports are clear.

9. SPECIFICATIONS

Feature	Detail
Model Number	NG-9003 (Item model number: SB-88)
Motor Speed	10,000 RPM
Blade Material	Stainless Steel (440C Fade Blade)
Adjustable Blade Levels	5 levels
Battery Type	3200mAh Lithium Battery
Charging Time	Approx. 3 hours
Operating Time	Approx. 120 minutes
Power Source	Battery Powered
Item Weight	1.03 kg (2.27 pounds)
Package Dimensions	9.41 x 5.51 x 4.13 inches
Hair Type Compatibility	All
Specific Uses	Dry Shaving, Multigroomer



Image 9.1: Product dimensions and accessory overview.

10. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the seller directly. The manufacturer, WMARK, is committed to providing quality products and customer satisfaction. You can visit the [Sodaer Store on Amazon](#) for more information or to contact customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question