

ANTEMPER D116

ANTEMPER 10.1-inch Android Tablet D116 User Manual

Model: D116

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ANTEMPER 10.1-inch Android Tablet D116. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your user experience.

The ANTEMPER D116 tablet features a 10.1-inch IPS display, an Octa-Core processor, 128GB internal storage (expandable), 16GB RAM (8GB physical + 8GB virtual), 5G WiFi connectivity, and runs on Android 13. It is designed for versatile use, from entertainment to productivity.

2. WHAT'S IN THE BOX

Upon opening the package, verify that all the following items are included:

- ANTEMPER 10.1-inch Android Tablet D116
- Wireless Bluetooth Keyboard
- Wireless Mouse
- Foldable Case
- Stylus
- Charger
- USB-C Cable
- User Manual (this document)



Image: ANTEMPER D116 Tablet with its complete accessory kit, including a keyboard, mouse, foldable case, stylus, charger, and USB-C cable.

3. PRODUCT OVERVIEW

3.1 Components and Controls

Familiarize yourself with the physical components and controls of your tablet:

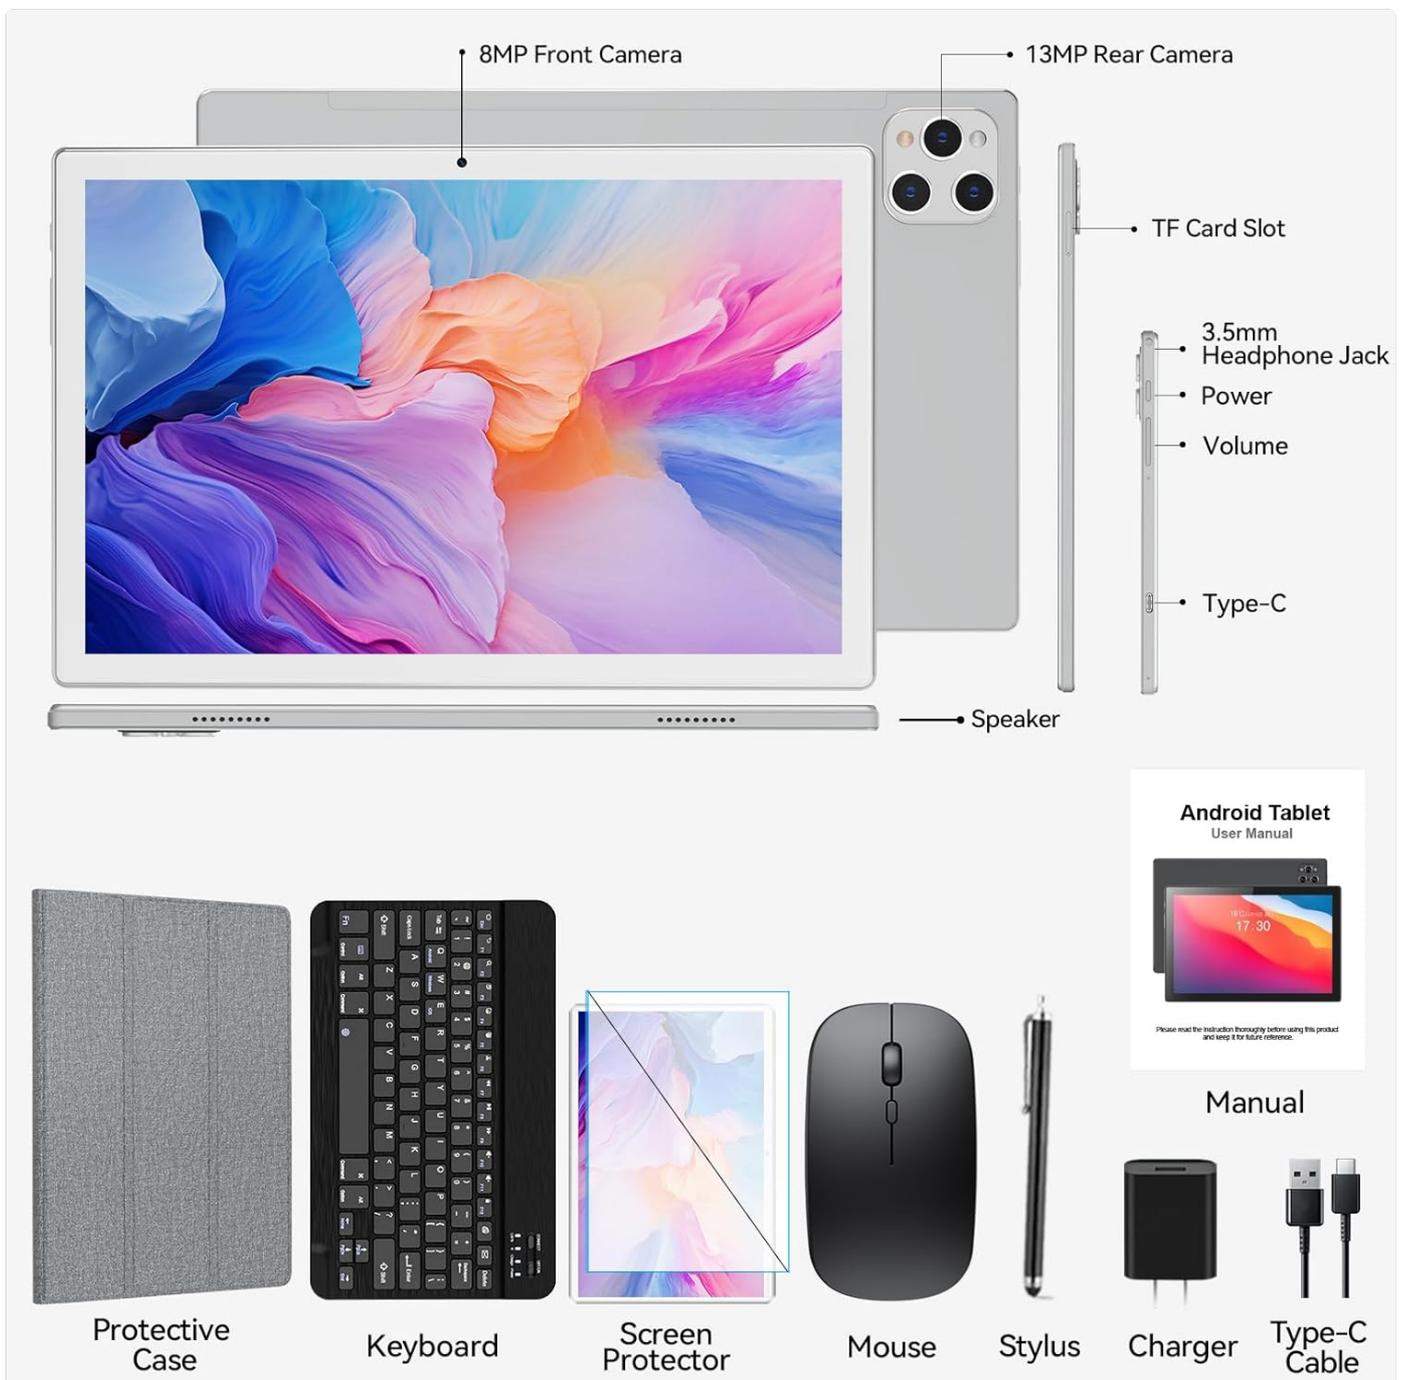


Image: Detailed diagram illustrating the location of the 8MP front camera, 13MP rear camera, TF card slot, 3.5mm headphone jack, power button, volume buttons, Type-C port, and speaker on the ANTEMPER D116 Tablet.

- **Front Camera (8MP):** For video calls and selfies.
- **Rear Camera (13MP):** For capturing photos and videos.
- **TF Card Slot:** Insert a microSD card for expanded storage (up to 1TB, sold separately).
- **3.5mm Headphone Jack:** Connect headphones or external audio devices.
- **Power Button:** Press and hold to power on/off or restart. Press briefly to sleep/wake the screen.
- **Volume Buttons:** Adjust the audio volume.
- **Type-C Port:** Connect the charger or USB-C cable for data transfer.
- **Speaker:** Audio output.

4. SETUP

4.1 Initial Power On and Configuration

1. **Charge the Tablet:** Before first use, connect the tablet to the charger using the provided USB-C cable and power adapter. Allow it to charge fully.
2. **Power On:** Press and hold the Power Button until the ANTEMPER logo appears on the screen.
3. **Initial Setup Wizard:** Follow the on-screen prompts to select your language, connect to a Wi-Fi network, set up your Google account, and configure basic settings.

4.2 Connecting Accessories

Your tablet comes with several accessories to enhance its functionality:

- **Bluetooth Keyboard and Mouse:**
 - a. Ensure the keyboard and mouse are charged or have fresh batteries.
 - b. Turn on the keyboard and mouse.
 - c. On your tablet, go to **Settings > Connected devices > Bluetooth**.
 - d. Enable Bluetooth and scan for available devices.
 - e. Select the keyboard and mouse from the list to pair them. Follow any on-screen pairing instructions.
- **Stylus:** The stylus can be used for more precise input on the touchscreen. No pairing is required for basic touch functionality.
- **Foldable Case:** Insert the tablet into the foldable case for protection and to use it as a stand.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

- **Touch Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Access your apps and widgets.
- **Notifications Panel:** Swipe down from the top of the screen to view notifications and quick settings.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.

5.2 Multitasking

The Octa-Core processor supports efficient multitasking. You can use split-screen mode to run two applications simultaneously:

1. Open the first application.
2. Tap the recent apps button (usually a square icon) to view open applications.
3. Long-press the icon of the first app at the top of its card, then select "Split screen".
4. Choose a second application from the recent apps list or app drawer to fill the other half of the screen.

Multitasking with powerful 2.0GHz Octa-Core MTK8183

maximize your efficiency with 2.0GHz processor and
split-screen operation

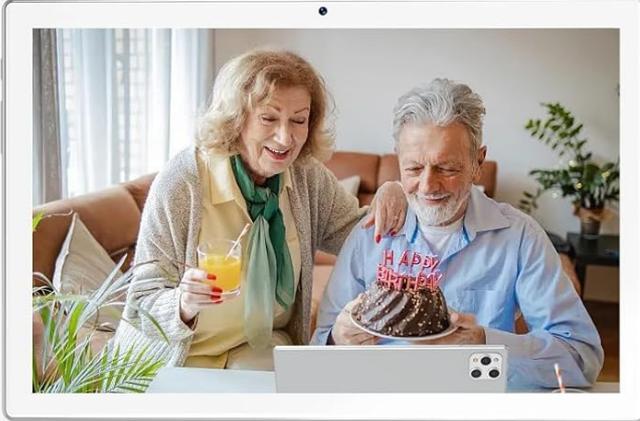


Image: The ANTEMPER D116 Tablet displaying its multitasking capability with a video conference on one side and a document on the other, facilitated by the external keyboard and mouse.

5.3 Camera Usage

Utilize the tablet's dual cameras for photography and video communication.

- **Opening the Camera:** Tap the Camera app icon on your home screen or app drawer.
- **Switching Cameras:** Use the camera switch icon (often two arrows forming a circle) to toggle between the 8MP front camera and the 13MP rear camera.
- **Taking Photos/Videos:** Tap the shutter button to capture a photo or start/stop video recording.



13MP
Rear Camera



8MP
Front Camera

Dual Camera | Connect and Capture

share your moment with your loved ones



Image: The ANTEMPER D116 Tablet displaying a video call, emphasizing its 13MP rear camera and 8MP front camera for clear communication and photography.

5.4 Navigation (GPS)

The tablet supports GPS positioning, making it suitable for navigation applications.

- Ensure location services are enabled in **Settings > Location**.
- Open a navigation app (e.g., Google Maps) and input your destination.
- The tablet will use GPS to provide real-time directions.



Image: The ANTEMPER D116 Tablet used as a navigation device in a car, showing a map with a highlighted route, demonstrating its GPS capabilities.

6. CONNECTIVITY

6.1 Wi-Fi Connection

The tablet supports dual-band 2.4G and 5G Wi-Fi for fast and stable internet access.

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi to "On".
3. Select your desired network from the list of available networks.
4. Enter the password if prompted and tap "Connect".

5G WiFi | Keep you connected

Stay connected with reliable, fast 5G WiFi and enjoy smooth streaming, fast downloads and gaming



Image: The ANTEMPER D116 Tablet showcasing its 5G WiFi capability, indicating fast and reliable internet connection for streaming and gaming.

6.2 Bluetooth Connection

Connect to Bluetooth devices such as headphones, speakers, or the included keyboard and mouse.

1. Go to **Settings** > **Connected devices** > **Bluetooth**.
2. Toggle Bluetooth to "On".
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the list and follow any pairing instructions.

7. STORAGE MANAGEMENT

Your tablet comes with 128GB of internal storage, expandable up to 1TB via a microSD card (TF card, sold separately).

7.1 Expanding Storage

1. Locate the TF Card Slot on your tablet (refer to Product Overview).
2. Carefully insert a compatible microSD card into the slot until it clicks into place.
3. The tablet will detect the new storage. You may be prompted to format the card for optimal use with the tablet.

128GB / Room for everything



16GB
ROM(8+8 virtual)



128GB
Internal storage



1TB expandable
(TF card not included)



Image: The ANTEMPER D116 Tablet displaying its storage capacity, highlighting 128GB internal ROM and the option for 1TB expandable storage via a TF card.

7.2 Managing Files

Use the pre-installed File Manager app to browse, organize, and transfer files between internal storage and the microSD card.

8. PARENTAL CONTROLS

The tablet includes pre-installed Google Kids Space, offering a safe and controlled environment for children.

8.1 Setting Up Kids Space

1. Locate and open the Google Kids Space app.
2. Follow the on-screen instructions to create a child profile, link it to your Google account, and set up parental controls.
3. You can set time limits, block specific apps, and manage content access through the Family Link app on your own device.

 **GOOGLE KIDS SPACE**
Parental controls for kids
Easy-to-use parental controls and plenty of kid-friendly and teacher-approved contents.



Image: A parent and child interacting with the ANTEMPER D116 Tablet, demonstrating the use of Google Kids Space for a child-friendly and controlled digital experience.

9. BATTERY MANAGEMENT

The tablet is equipped with a 7000mAh battery, providing up to 10 hours of usage for reading and daily tasks.

9.1 Charging the Battery

- Connect the provided USB-C cable to the tablet's Type-C port and the charger.
- Plug the charger into a power outlet.
- The battery icon on the screen will indicate charging status.
- For optimal battery life, avoid fully discharging the battery frequently.

Large Battery & Dual Speakers



7000mAh



Type-C port



5V/2A charging



Dual Speakers



Immersive feeling

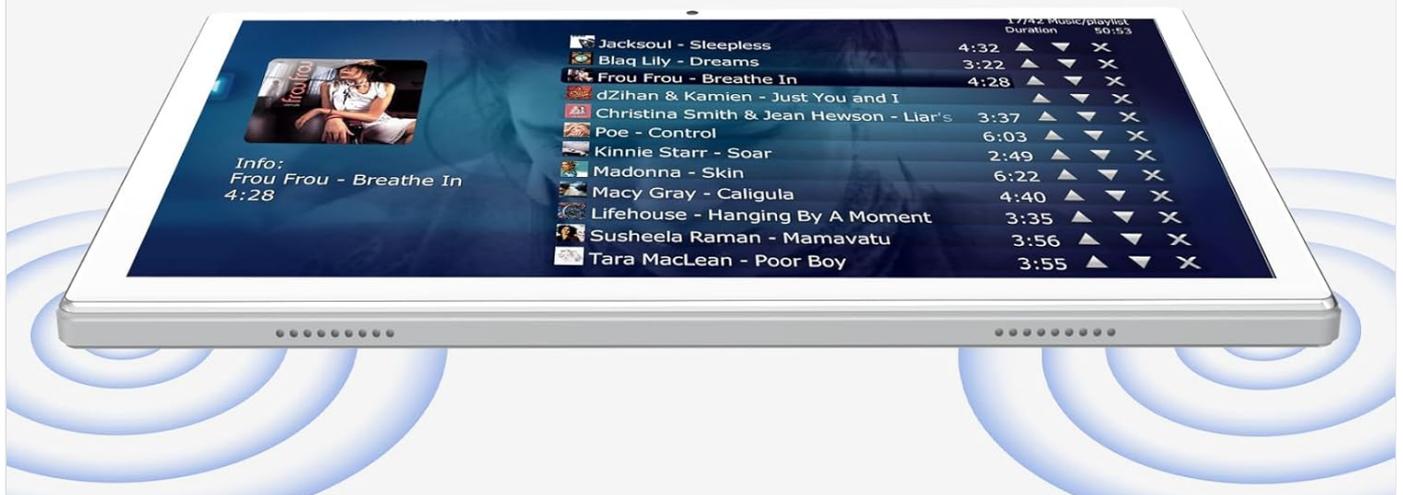


Image: The ANTEMPER D116 Tablet being charged, with the screen showing a high battery percentage, emphasizing its 7000mAh long-lasting battery.

9.2 Battery Saving Tips

- Reduce screen brightness.
- Disable Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.
- Enable battery saver mode in **Settings > Battery**.

10. MAINTENANCE

10.1 Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

10.2 Software Updates

Regularly check for and install software updates to ensure optimal performance and security.

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to check for and install any available updates.

10.3 Data Backup

It is recommended to regularly back up your important data to cloud storage or an external device to prevent data loss.

11. TROUBLESHOOTING

This section addresses common issues you might encounter with your ANTEMPER D116 tablet.

Problem	Possible Solution
Tablet does not power on.	Ensure the tablet is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, perform a hard reset by holding the power button for 10-15 seconds.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Bluetooth device not pairing.	Ensure Bluetooth is enabled on both devices and the accessory is in pairing mode. Move devices closer together. Restart both devices.
Tablet is slow or unresponsive.	Close unused background applications. Clear cache for frequently used apps. Restart the tablet. Check available storage space.
Screen is unresponsive.	Restart the tablet. If the issue persists, contact customer support.
SD card not detected.	Ensure the SD card is properly inserted. Try reinserting it. Test with another SD card if possible. Format the SD card (this will erase all data).

12. SPECIFICATIONS

Feature	Detail
Model	D116
Operating System	Android 13
Processor	MTK8183 Octa-Core, 2.0 GHz
Graphics Coprocessor	Mali-G72 MP3
RAM	16GB (8GB physical + 8GB virtual expansion)
Internal Storage	128GB

Feature	Detail
Expandable Storage	Up to 1TB via microSD (TF card, sold separately)
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (IPS LCD)
Rear Camera	13 MP
Front Camera	8 MP
Wireless Connectivity	802.11a/b/g/n/ac (2.4G + 5G WiFi), Bluetooth 5.0
Battery	7000mAh Lithium Ion
Average Battery Life	Up to 8-10 Hours
Charging Port	USB-C
Dimensions (LxWxH)	8.7 x 6.3 x 2.1 inches
Item Weight	3.19 pounds

13. WARRANTY AND SUPPORT

13.1 Warranty Information

ANTEMPER provides a lifetime technical support for this tablet. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or contact ANTEMPER customer service directly.

13.2 Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact ANTEMPER customer support. Contact details can typically be found on the ANTEMPER official website or on the product packaging. For online resources and frequently asked questions, visit the official ANTEMPER website: [ANTEMPER Store](#)

