

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [HIFI WALKER](#) /
- › [HIFI WALKER M7 Portable MP3 Player User Manual](#)

HIFI WALKER M7

HIFI WALKER M7 Portable MP3 Player User Manual

Model: M7

Brand: HIFI WALKER

INTRODUCTION

The HIFI WALKER M7 is a versatile portable MP3 player designed for music enthusiasts. It features Bluetooth 5.0 connectivity, a 2.4-inch screen, a built-in speaker, and functions beyond music playback, including voice recording, e-book reading, and video playback. This manual provides detailed instructions to help you get the most out of your device.

WHAT'S IN THE BOX

- HIFI WALKER M7 Portable MP3 Player
- 64GB Micro SD Card (pre-installed or included separately)
- Earphones
- USB-C Charging/Data Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the physical components and controls of your HIFI WALKER M7 MP3 player.



Image: Diagram showing the HIFI WALKER M7 MP3 player with labels for its various ports and buttons, including the speaker, display screen, return key, menu key, previous/pause/play/confirm/down key, next key, headphone socket, TF-Card slot, USB C socket, recording button, volume buttons, and microphones.

The device features a 2.4-inch display with touch-sensitive buttons for navigation. Key physical features include:

- **Display Screen:** 2.4-inch glass screen for viewing menus, videos, and e-books.
- **Touch Buttons:** 7 high-sensitivity backlit touch buttons for intuitive control.
- **Headphone Socket:** Standard 3.5mm audio jack for wired earphones.
- **USB-C Socket:** For charging and data transfer.
- **TF-Card Slot:** Supports Micro SD cards up to 128GB for expanded storage.
- **Built-in Speaker:** Allows audio playback without headphones.
- **Microphones:** For voice recording functionality.
- **Recording Button:** Dedicated button for quick voice memo recording.
- **Volume Buttons:** Separate buttons for adjusting volume.

SETUP

1. Charging the Device

Before first use, fully charge your HIFI WALKER M7.

1. Connect the smaller end of the USB-C cable to the USB-C socket on the MP3 player.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The device will display a charging indicator. A full charge typically takes less than 4 hours and provides up to 30 hours of music playback.



Image: The HIFI WALKER M7 MP3 player connected to a charging cable, illustrating the charging process and battery life.

2. Inserting the Micro SD Card

The device comes with a 64GB Micro SD card. You can expand storage up to 128GB.

1. Locate the TF-Card slot on the side of the MP3 player.
2. Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, push the card gently until it pops out.

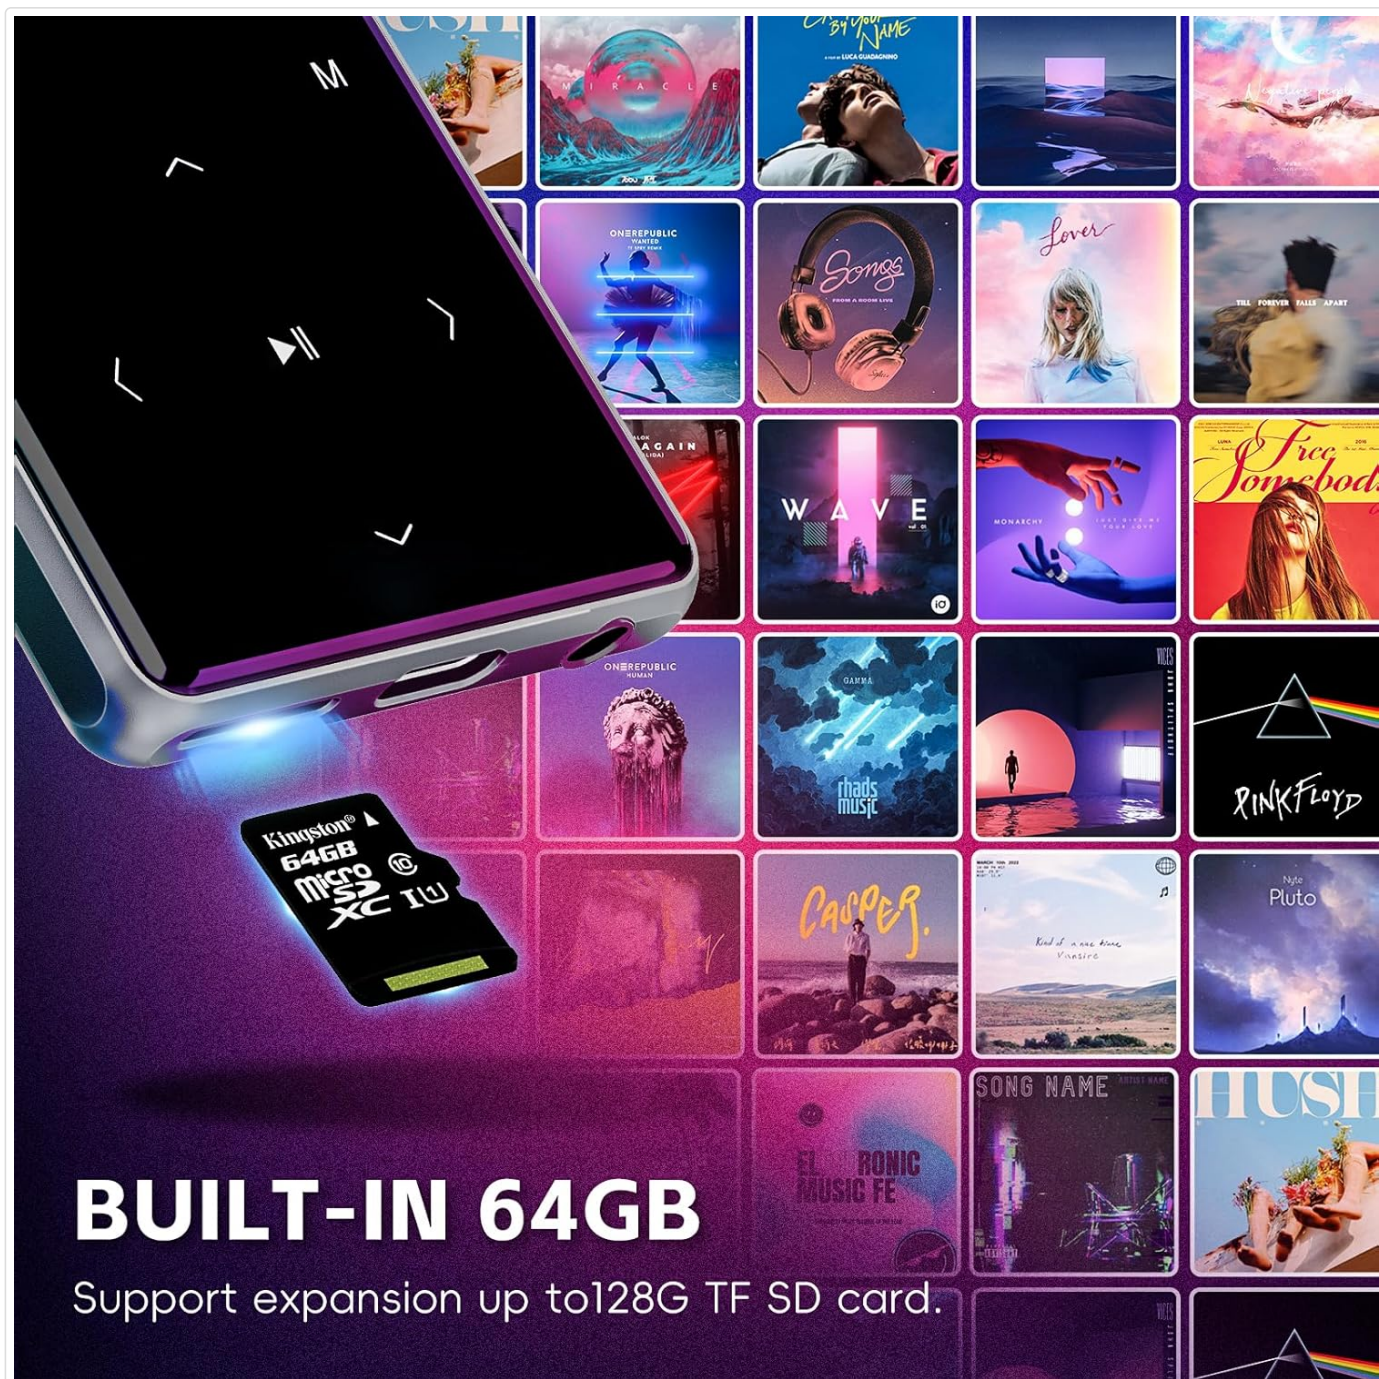


Image: The HIFI WALKER M7 MP3 player displaying album art, with a 64GB Micro SD card shown separately, indicating storage expansion.

3. Transferring Music and Files

To transfer music, videos, or e-books to your MP3 player:

1. Connect the MP3 player to your computer using the provided USB-C cable.
2. The MP3 player will enter USB mode. On your computer, the device will appear as a removable disk (e.g., "M7").
3. Open the "M7" drive. You will see folders like "Music", "RECORD", and "video".
4. Drag and drop your desired files into the appropriate folders. For music, use the "Music" folder.
5. Once transfer is complete, safely eject the "M7" drive from your computer before disconnecting the cable.

Your browser does not support the video tag.

Video: This video demonstrates how to connect the HIFI WALKER M7 MP3 player to a computer, delete unwanted files, and transfer new music files to the device's hard drive. It also shows the process of safely ejecting the device.

Note: For optimal performance and to prevent data corruption, always safely eject the device from your computer before

disconnecting the USB cable.

OPERATING INSTRUCTIONS

Basic Navigation

Use the touch buttons below the screen to navigate the menus:

- **Up/Down Arrows:** Scroll through menu options or lists.
- **Left/Right Arrows:** Navigate within certain functions (e.g., fast forward/rewind during playback).
- **OK/Play/Pause Button (Center):** Select an option or play/pause media.
- **Return Button:** Go back to the previous screen.
- **Menu Button:** Access context-sensitive options.



Image: The HIFI WALKER M7 MP3 player displaying its main menu with options like Music, Movie, Photo, E-Book, and Folder View, alongside the included earphones.

Music Playback

1. From the main menu, select "Music".

2. Browse your music by artist, album, genre, or folder.
3. Select a song and press the center button to play.
4. Use the left/right arrows to skip tracks.
5. Adjust volume using the dedicated volume buttons on the side.

The player supports MP3, WMA, WAV, APE, and FLAC formats.



Image: A person enjoying music with headphones, with the HIFI WALKER M7 MP3 player in the foreground, highlighting support for various audio formats like MP3, WMA, APE, WAV, and FLAC.

Bluetooth Connection

Connect your HIFI WALKER M7 to Bluetooth headphones or speakers for wireless audio.

1. Go to the main menu and select "Bluetooth".
2. Ensure your Bluetooth audio device is in pairing mode.
3. The MP3 player will scan for available devices. Select your device from the list to pair.

4. Once paired, audio will stream wirelessly to your connected device.

The player features Bluetooth 5.0 for stable and compatible connections.



Image: The HIFI WALKER M7 MP3 player displaying music playback, with both wired earphones and wireless earbuds shown, emphasizing its advanced Bluetooth 5.0 technology for both wired and wireless connections.

Voice Recording

The HIFI WALKER M7 includes a built-in voice recorder.

1. From the main menu, select "Record" or press the dedicated recording button on the side.
2. Press the center button to start recording.
3. Press the center button again to pause/resume, or the return button to stop and save.
4. Recordings are saved in the "RECORD" folder.

One-touch Recording

Helps you quickly record important meeting and study information.



Image: The HIFI WALKER M7 MP3 player displaying its recording interface, with a microphone icon and recording timer, illustrating its one-touch recording capability.

E-Book Function

Read TXT format e-books on your device.

1. Transfer TXT files to the device's storage.
2. From the main menu, select "E-Book".
3. Select the e-book you wish to read.
4. Use the navigation buttons to scroll through pages.

Video Playback

The 2.4-inch screen supports video playback.

1. Transfer compatible video files (e.g., AVI, AMV) to the "video" folder on the device.

2. From the main menu, select "Movie".
3. Select a video to play.

Note: Video files may need to be converted to compatible formats (AVI, AMV) for optimal playback.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Software Updates:** Check the HIFI WALKER official website for any available firmware updates to ensure optimal performance.
- **Data Backup:** Regularly back up important files from your device to a computer or cloud storage to prevent data loss.

TROUBLESHOOTING

Problem	Solution
Device does not turn on.	Ensure the device is fully charged. If the battery is completely drained, it may take a few minutes for the charging indicator to appear.
Cannot transfer files to the device.	Ensure the USB cable is securely connected to both the device and the computer. Try a different USB port or cable. Make sure to safely eject the device after transfer. Some users report better success by transferring one album at a time and avoiding USB hubs.
Bluetooth connection is unstable or fails.	Ensure the MP3 player and the Bluetooth audio device are within range. Turn off and on Bluetooth on both devices. Try re-pairing the devices. Ensure no other strong wireless signals are causing interference.
Music files are not recognized or play incorrectly.	Verify that the music files are in a supported format (MP3, WMA, WAV, APE, FLAC). Ensure files are placed in the "Music" folder. Reformat the Micro SD card if issues persist (this will erase all data).
Device freezes or becomes unresponsive.	Press and hold the power button for approximately 10-15 seconds to force a restart. If the issue persists, try resetting the device (refer to the full user manual for specific reset instructions if available).

SPECIFICATIONS

Feature	Detail
Model	M7
Internal Memory	64GB
Expandable Memory	Up to 128GB Micro TF card (64GB card included)
Screen Size	2.4 inches
Bluetooth Version	5.0

Feature	Detail
Supported Audio Formats	MP3, WMA, WAV, APE, FLAC
Supported Video Formats	AVI, AMV
Supported E-Book Format	TXT
Battery Life (Music Playback)	Up to 30 hours
Charging Time	Less than 4 hours
Item Weight	3.7 ounces
Dimensions	5.83 x 2.87 x 1.34 inches

WARRANTY AND SUPPORT

The HIFI WALKER M7 Portable MP3 Player comes with a **2-year warranty**.

For any questions, technical assistance, or warranty claims, please contact HIFI WALKER customer support.

You can typically find support contact information on the official HIFI WALKER website or through your purchase platform.