

## ANTEMPER D116

# ANTEMPER 10-inch Android Tablet D116 User Manual

Model: D116

## 1. INTRODUCTION

---

This manual provides essential information for setting up, operating, and maintaining your ANTEMPER 10-inch Android Tablet D116. Please read it thoroughly to ensure proper use and to maximize your device's performance.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- ANTEMPER 10-inch Android Tablet D116
- Wireless Bluetooth Keyboard
- Wireless Mouse
- Foldable Case
- Stylus
- Charger
- USB-C Cable
- User Manual



Image: All accessories included with the ANTEMPER D116 tablet: tablet, keyboard, mouse, case, stylus, charger, USB-C cable, and manual.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing and shows all the items included in the ANTEMPER D116 10-inch Android Tablet kit.

### 3. PRODUCT OVERVIEW

The ANTEMPER D116 tablet features a sleek design with essential ports and controls for optimal user experience.

#### 3.1 Physical Components

- **Display:** 10.1-inch IPS LCD touchscreen.
- **Cameras:** 13MP Rear Camera, 8MP Front Camera.
- **Ports:** USB-C port, 3.5mm Headphone Jack, TF Card Slot.
- **Buttons:** Power button, Volume buttons.
- **Audio:** Dual Speakers.



**13MP**  
Rear Camera



**8MP**  
Front Camera

## Dual Camera | Connect and Capture

share your moment with your loved ones



Image: ANTEMPER D116 tablet showing its 10.1-inch display and dual cameras (13MP rear, 8MP front).



Image: Diagram of the ANTEMPER D116 tablet highlighting ports and buttons including TF Card Slot, 3.5mm Headphone Jack, Power, Volume, and Type-C.

## 4. INITIAL SETUP

### 4.1 Charging the Tablet

Before first use, fully charge your tablet using the provided charger and USB-C cable. Connect the USB-C cable to the tablet's USB-C port and the charger to a power outlet. The battery indicator will show charging status.

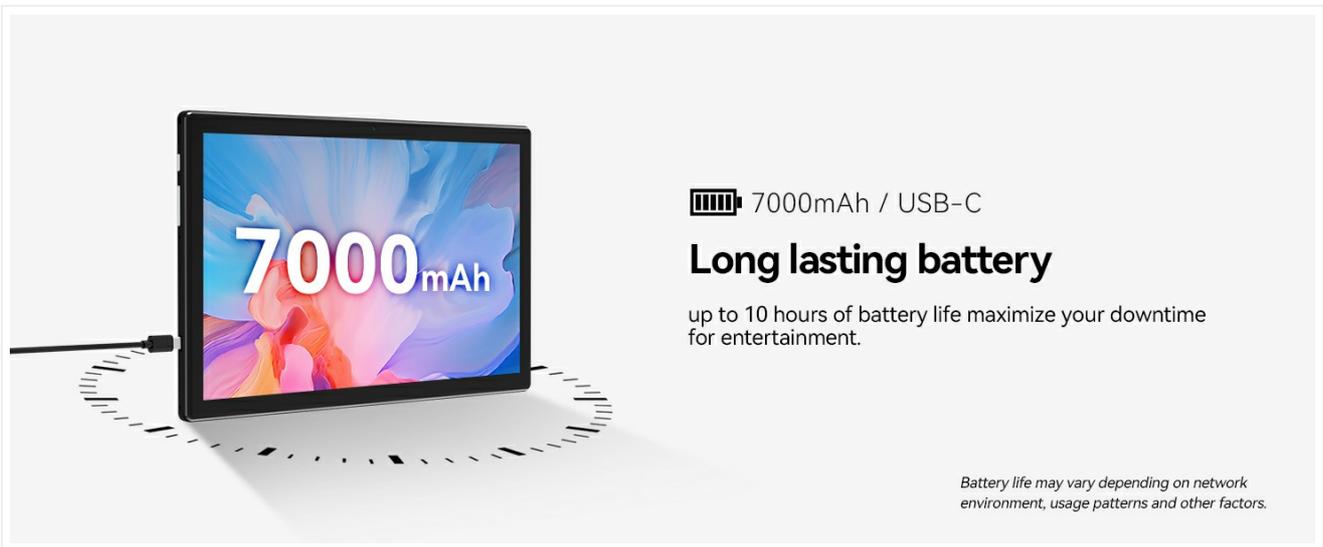


Image: ANTEMPER D116 tablet connected to a charger, displaying a 99% battery level.

## 4.2 Expanding Storage with a MicroSD Card

The tablet supports up to 1TB expandable storage via a microSD card (sold separately). Locate the TF Card Slot on the tablet and insert the microSD card until it clicks into place.

# 128GB / Room for everything



**16GB**  
ROM(8+8 virtual)



**128GB**  
Internal storage



**1TB** expandable  
(TF card not included)



Image: ANTEMPER D116 tablet screen showing 128GB internal storage and an option for 1TB expandable storage via TF card.

## 4.3 Connecting the Bluetooth Mouse

1. Insert batteries into the wireless mouse (batteries not included).
2. Locate the USB receiver inside the mouse's battery compartment.
3. Connect the USB receiver to the provided USB-C adapter.
4. Plug the USB-C adapter with the receiver into the tablet's USB-C port.
5. The tablet should automatically detect and connect to the mouse.

Your browser does not support the video tag.

Video: This video demonstrates how to connect the Bluetooth mouse to your ANTEMPER tablet.

## 4.4 Connecting the Bluetooth Keyboard

1. Turn on the Bluetooth keyboard using the ON/OFF switch.
2. Press the 'Connect' button on the keyboard to enter pairing mode.
3. On your tablet, swipe down from the top of the screen to open the Quick Settings panel.

4. Long-press the Bluetooth icon to go to the Bluetooth settings page.
5. Tap 'Pair new device'.
6. Select '3.0 keyboard' from the list of available devices.
7. Confirm the pairing request.

Your browser does not support the video tag.

Video: This video demonstrates how to connect the Bluetooth keyboard to your ANTEMPER tablet.

## 4.5 Installing the Protective Case

Carefully align your tablet with the protective case and gently press it into place, ensuring all edges are secured. The foldable case can also act as a stand for comfortable viewing.

Your browser does not support the video tag.

Video: This video demonstrates how to install the protective case on your ANTEMPER tablet.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Tablet Navigation

The tablet operates on Android 13. Use touch gestures such as tap, swipe, pinch-to-zoom, and long-press to navigate the interface, open apps, and interact with content.

# Incredible smooth experience



Octa-Core



Android 13



16GB RAM(8+8)



128GB ROM



5G+2.4Gwifi



7000mAh



13MP + 8MP



Parental Control



Image: ANTEMPER D116 tablet displaying the home screen with various app icons, including the Google Play Store.

## 5.2 Wi-Fi Connectivity

The tablet supports dual-band 2.4G + 5G Wi-Fi. To connect to a Wi-Fi network:

1. Go to Settings > Network & internet > Wi-Fi.
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if prompted.

# 5G WiFi | Keep you connected

Stay connected with reliable, fast 5G WiFi and enjoy smooth streaming, fast downloads and gaming



Image: ANTEMPER D116 tablet displaying a 5G WiFi logo on its screen, indicating strong wireless connectivity.

## 5.3 Using the Cameras

The tablet is equipped with a 13MP rear camera and an 8MP front camera. Open the Camera app to capture photos and videos. Switch between front and rear cameras as needed.



Image: Close-up of the ANTEMPER D116 tablet's dual camera system (13MP + 8MP).

## 5.4 Parental Controls (Kids Space)

The tablet includes pre-installed Google Kids Space, offering a safe environment for children with educational games, books, and videos. You can set passwords, time limits, and block apps through the parental control settings.



GOOGLE KIDS SPACE

### Parental controls for kids

Easy-to-use parental controls and plenty of kid-friendly and teacher-approved contents.



Image: A parent and child using the ANTEMPER D116 tablet with Google Kids Space enabled, showing child-friendly content.

## 5.5 Installing Applications

With GMS certification, you have full access to the Google Play Store. Open the Play Store app to browse and install a wide variety of applications.

# Incredible smooth experience



Octa-Core



Android 13



16GB RAM(8+8)



128GB ROM



5G+2.4Gwifi



7000mAh



13MP + 8MP



Parental Control



Image: ANTEMPER D116 tablet displaying the home screen with various app icons, including the Google Play Store.

## 5.6 Gaming and Media Consumption

The Octa-Core MTK8183 processor and Mali-G72 MP3 GPU provide smooth performance for gaming and high-definition video streaming on the 10.1-inch IPS display.

# Multitasking with powerful 2.0GHz Octa-Core MTK8183

maximize your efficiency with 2.0GHz processor and split-screen operation



Image: A person using the ANTEMPER D116 tablet with a Bluetooth keyboard and mouse, demonstrating multitasking capabilities.

## 5.7 Wireless Projection

The tablet supports wireless projection to compatible TVs. Ensure your television has a wireless projection function enabled and follow its instructions to connect.

Image: A woman exercising while wirelessly projecting content from her ANTEMPER D116 tablet to a large screen TV.

## 5.8 GPS Positioning

The tablet includes GPS functionality, allowing for navigation and location-based services. Ensure location services are enabled in your tablet's settings for optimal performance.

Image: ANTEMPER D116 tablet displaying a navigation map in a car dashboard, demonstrating GPS functionality.

## 6. MAINTENANCE

---

To ensure the longevity and optimal performance of your ANTEMPER D116 tablet, follow these maintenance guidelines:

- **Screen Care:** Use a soft, lint-free cloth to clean the screen. Avoid harsh chemicals or abrasive materials.
- **Battery Life:** To maximize battery life, avoid extreme temperatures and fully discharge and recharge the battery periodically. The 7000mAh battery provides up to 10 hours of use.
- **Software Updates:** Regularly check for and install system updates to ensure your tablet has the latest features and security patches.
- **Storage Management:** Periodically clear unnecessary files and apps to maintain optimal performance. Utilize the expandable storage for large media files.

## 7. TROUBLESHOOTING

---

If you encounter issues with your tablet, refer to the following common solutions:

- **Tablet not turning on:** Ensure the tablet is charged. Connect it to the charger and wait a few minutes before attempting to power it on again.
- **Slow performance:** Close unused applications, clear cache, or restart the tablet. Consider uninstalling rarely used apps or moving large files to expandable storage.
- **Wi-Fi connectivity issues:** Restart your Wi-Fi router and the tablet. Ensure you are within range of the Wi-Fi signal and that the password is correct.
- **Bluetooth device not pairing:** Ensure the Bluetooth device is in pairing mode and within range. Restart Bluetooth on both the tablet and the accessory.
- **Screen unresponsiveness:** Restart the tablet. If the issue persists, a factory reset might be necessary (back up your data first).

## 8. SPECIFICATIONS

---

| Feature              | Specification                                |
|----------------------|--|
| Model Number         | D116   |
| Operating System     | Android 13                                   |
| Processor            | MTK8183 Octa-Core, 2.0 GHz                   |
| Graphics Coprocessor | Mali-G72 MP3                                 |
| RAM                  | 16GB (8GB + 8GB Virtual Memory Expansion)    |
| Internal Storage     | 128GB  |
| Expandable Storage   | Up to 1TB via microSD card (sold separately) |
| Screen Size          | 10.1 Inches                                  |
| Screen Resolution    | 1280 x 800 pixels (IPS LCD)                  |
| Rear Camera          | 13 MP  |

|                       |   |
|-----------------------|---|
| Front Camera          | 8 MP  |
| Wireless Connectivity | 2.4G + 5G Wi-Fi (802.11a/b/g/n/ac), Bluetooth |
| Battery Capacity      | 7000mAh                                       |
| Average Battery Life  | 8-10 Hours                                    |
| Ports                 | USB-C, 3.5mm Headphone Jack, TF Card Slot     |
| Dimensions (LxWxH)    | 8.7 x 6.3 x 2.1 inches                        |
| Item Weight           | 3.03 pounds                                   |

## 9. WARRANTY AND SUPPORT

---

ANTEMPER provides lifetime technical support for your tablet. For any questions or assistance, please contact our customer support team. Refer to the contact information provided in your product packaging or on the official ANTEMPER website.