

- Manuals.plus /
- > [APD APETDOLA](#) /
 - > APD APETDOLA FP30 Wireless Dog Water Fountain Instruction Manual

APD APETDOLA FP30

APD APETDOLA FP30 Wireless Dog Water Fountain Instruction Manual

Model: FP30 | Capacity: 7 Liters

- Setup
- Operation
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. SETUP GUIDE

Follow these steps to correctly assemble and prepare your APD APETDOLA FP30 Wireless Dog Water Fountain for first use.

1.1 Unboxing and Components

Carefully remove all components from the packaging. Ensure all parts listed in the user manual are present.

Experience True Wireless Convenience

Easily adapt the APETDOLA pet water fountain to any setting: from outdoor adventures and kitchen use to cozy living room lounges. Enjoy the freedom of a tangle-free experience.



Image: All components of the APD APETDOLA FP30 Wireless Dog Water Fountain laid out, including the main unit, wireless pump, USB adapter, user manual, and filters.

The package includes: 1x Dog Water Fountain (Battery Operated), 1x USB Adapter, 1x User Manual, 1x Wireless Pump (DC 5V), and 2x Filters.

1.2 Filter Preparation

Before installation, immerse the new filter in clean water (5-50°C) for 5 minutes to activate it. This ensures optimal filtration

performance from the start.



Image: A filter for the pet water fountain soaking in a bowl of water, preparing it for use.

1.3 Assembly Steps

1. **Soak the filter:** Immerse the new filter in clean water for 5 minutes before installation.
2. **Place the filter:** Insert the filter and filter cap into the bottom of the drinking water tray.
3. **Install the water pump:** Place the water pump in the water tank and fill it with clean water up to the MAX line.
4. **Install the drinking water tray:** Align the buckles on both sides of the water tank until you hear a click, then install the fountain head.
5. **Place the water tank:** Position the water tank onto the base of the control device.
6. **Choose working mode:** Select your desired working mode and press the button to start the dog water fountain.

How should the water pump be correctly installed?



Image: Visual guide showing the 6-step assembly process for the APD APETDOLA FP30 Wireless Dog Water Fountain.

Your browser does not support the video tag.

Video: A detailed guide on how to assemble the APD APETDOLA FP30 7L wireless dog water fountain.

2. OPERATING INSTRUCTIONS

The APD APETDOLA FP30 Wireless Dog Water Fountain offers smart hydration with multiple operating modes and a long-lasting battery.

2.1 Powering On and Charging

The fountain is equipped with a 5000mAh rechargeable battery, providing 15-20 days of operation on a single charge. Connect

the USB-C charging cable to the charging port on the base when the low battery indicator lights up.



Image: Illustration highlighting the 5000mAh battery capacity and 45-day standby time of the APD APETDOLA pet water fountain.



Image: Close-up of the fountain's base showing indicator lights for battery status and mode selection.

2.2 Operating Modes

Select from three intelligent modes to suit your pet's drinking habits:

- **Sensor Mode:** Water runs automatically when your pet approaches, conserving battery life.
- **Timing Mode (unplugged):** Water runs every 15 minutes to encourage regular hydration.
- **Continuous Flow Mode (requires being plugged in):** Provides a constant stream of water for pets who prefer continuous flow.



Image: Diagram illustrating the three smart flow hydration modes: Sensor Mode, Timed Mode, and Continuous Mode.

Your browser does not support the video tag.

Video: Demonstrates the wireless functionality and motion sensor of the APD APETDOLA Wireless Dog Water Fountain.

2.3 Quiet Operation

The fountain operates at a whisper-quiet 23dB, ensuring a peaceful environment for both you and your pets, day or night.



Image: Graphic illustrating the ultra-silent water circulation system, operating at just 28dB.

 
3. MAINTENANCE

Regular maintenance is crucial for the longevity and hygiene of your pet water fountain. The APD APETDOLA FP30 is designed for easy cleaning.

3.1 Cleaning the Water Pump

To ensure optimal performance and extend the service life of your water pump, clean it regularly. Follow these steps:


1. Remove the sponge and the pump cover.
2. Remove the cap of the impeller.
3. Remove the impeller.
4. Completely clean the inside of the pump using the provided cleaning brush.

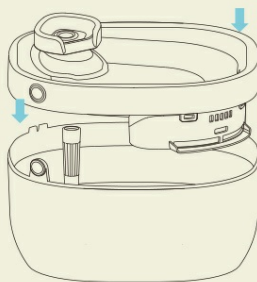

4. Install the drinking water tray by aligning the buckles on both sides of the water tank until you hear a click, then install the fountain head.



5. Place the water tank on the base of the control device.

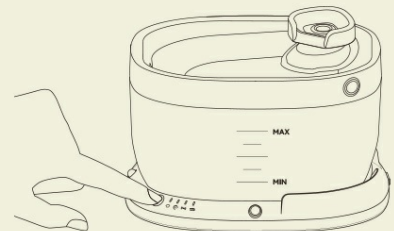

6. Choose the working mode and press the button to start the dog water fountain.

Image: Step-by-step visual instructions for disassembling and cleaning the water pump.

Your browser does not support the video tag.

Video: Instructions on how to assemble the FP30 dog water fountain filter.

3.2 Filter Replacement

For optimal performance and to ensure your pet always enjoys fresh water, it is recommended to replace the pet water fountain filter every 1-2 weeks. Official replacement filters can be purchased by searching for "B0CSK78Q51".



Image: A pack of replacement filters for the APD APETDOLA FP30 pet water fountain.

4. TROUBLESHOOTING

If you encounter any issues with your APD APETDOLA FP30 Wireless Dog Water Fountain, refer to the following common solutions:

- **Water Flow Stops/Intermittent:**

- Check the water level. The pump automatically stops when water levels dip below a safe level. Refill the water tank to above the MIN line.
- Ensure the pump is clean and free of debris (hair, food particles). Refer to section 3.1 for pump cleaning instructions.
- Verify the battery is charged. If the low battery indicator is red, recharge the fountain.

- **Red Light Indicator:**

- A red light indicates low water level or low battery. Refill the water tank or recharge the device as needed.

- **Unusual Noise:**

- Check if the water level is too low.
- Inspect the pump for any obstructions or debris. Clean the pump thoroughly.
- Ensure the fountain is placed on a flat, stable surface.

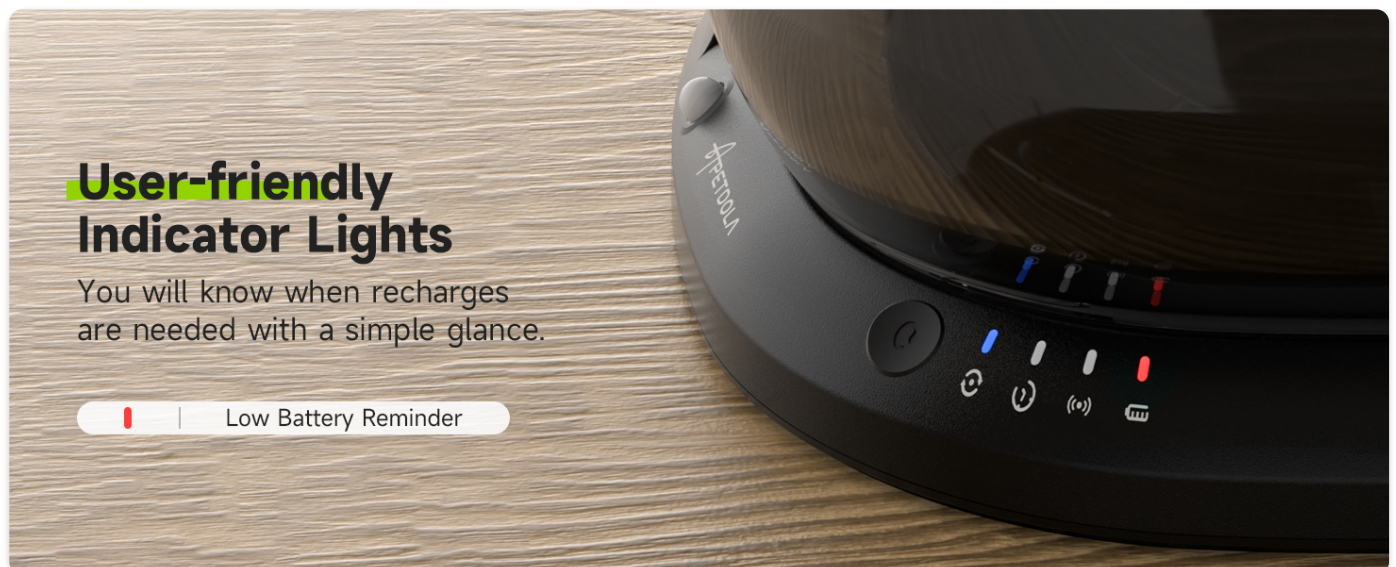 


Image: Visual representation of the water level indicators (MAX/MIN) and the pump's automatic stop feature when water is low.

5. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	FP0030B (FP30)
Capacity	7 Liters (237 oz)
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Life	15-20 days on a single charge (5000mAh)
Noise Level	23dB (Whisper-Quiet)
Material	BPA-free, food-grade materials
Filtration System	6-layer filtration (non-woven fabric, activated carbon, ion exchange resin)
Item Weight	4.82 pounds
Item Dimensions (L x W x H)	11.93 x 11.89 x 7.91 inches
Target Audience	Dogs, Cats, Multi-Pets (All Life Stages, All Breed Sizes)

6. WARRANTY AND SUPPORT

The APD APETDOLA FP30 Wireless Dog Water Fountain comes with a **one-year manufacturer's warranty**. For any product inquiries, technical support, or warranty claims, please contact APETDOLA customer service through the retailer where you purchased the product or visit the official APD APETDOLA Store online.

Official APD APETDOLA Store: [Visit Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CSK7PKFC>

More documents and user manuals: <https://manuals.plus/>