

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fangflower](#) /

› [Fangflower Gooseneck Electric Kettle 0.6 L - Instruction Manual](#)

Fangflower Gooseneck Electric Kettle 0.6 L

Fangflower Gooseneck Electric Kettle 0.6 L

Model: Gooseneck Electric Kettle 0.6 L

Brand: Fangflower

INTRODUCTION

Thank you for choosing the Fangflower Gooseneck Electric Kettle. This manual provides essential information for the safe and efficient operation of your new appliance. Please read it thoroughly before first use and keep it for future reference.

This 0.6 L electric kettle is designed for ultra-fast boiling, perfect for pour-over coffee and tea. It features a 100% stainless steel interior, automatic shut-off, and precise thermostat control for an optimal brewing experience.

IMPORTANT SAFETY INFORMATION

- Read all instructions before use.
- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Always ensure the lid is securely closed during operation.
- Do not operate the kettle if it is empty (boil-dry protection is included, but it's best to avoid).
- Keep out of reach of children.
- Use only with the provided power base.
- Unplug from the outlet when not in use and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

PRODUCT OVERVIEW

The Fangflower Gooseneck Electric Kettle combines elegant design with functional features for an enhanced hot beverage experience.

- **Gooseneck Spout:** Expertly curved for a 90-degree angle, ensuring steady and controlled water flow for optimal flavor extraction.

- **Stainless Steel Interior:** The interior tank is constructed from high-quality, food-grade stainless steel, ensuring pure water free of undesirable odors.
- **Precise Temperature Control:** Equipped with advanced British thermostat technology for accurate temperature regulation.
- **Rapid Heating:** A powerful 1200W element heats water to boiling in approximately five minutes.
- **Safety Features:** Includes automatic shut-off and dry boil protection for peace of mind.



Figure 1: Stainless steel lid, spout, and interior for durability and hygiene.

One Click Operation Auto Shut Off



Figure 2: Controlled pouring with the gooseneck spout.

SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the kettle and its components for any damage.
2. **Clean:** Before first use, fill the kettle with clean water to its maximum capacity (0.6 L). Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the power cord is not dangling or in contact with hot surfaces.

OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Remove the lid and fill the kettle with the desired amount of fresh, cold water. Do not exceed the maximum fill line (0.6 L) to prevent overflow during boiling.
2. **Secure the Lid:** Place the lid back onto the kettle, ensuring it is securely closed.
3. **Place on Power Base:** Position the kettle firmly onto its power base.
4. **Connect to Power:** Plug the power cord into a standard electrical outlet.

5. **Activate Heating:** Press the power switch (usually located on the handle or base) to begin heating. An indicator light will illuminate.
6. **Temperature Control:** The kettle features thermostat control. If your model has specific temperature settings, refer to the markings on the base or controls to select your desired temperature for optimal brewing of different teas or coffees.
7. **Automatic Shut-Off:** The kettle will automatically turn off once the water reaches boiling point or the selected temperature. The indicator light will extinguish.
8. **Pouring:** Carefully lift the kettle from the base and use the gooseneck spout to pour water with precision.

MAINTENANCE

- **Cleaning:** Always unplug the kettle and allow it to cool completely before cleaning. The exterior can be wiped clean with a damp cloth. The interior should be hand washed.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale, fill the kettle with a mixture of equal parts water and white vinegar. Let it sit for at least 30 minutes, or boil the mixture for a few minutes. Discard the mixture and rinse the kettle thoroughly several times with fresh water.
- **Storage:** When not in use, store the kettle in a dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat.	Not plugged in; power switch not activated; kettle not properly seated on base.	Ensure plug is firmly in outlet; press power switch; reseal kettle on base.
Water is leaking.	Kettle overfilled; lid not properly closed.	Do not fill past the MAX line; ensure lid is securely closed.
Kettle turns off too soon.	Limescale buildup; faulty thermostat.	Descal the kettle; if problem persists, contact customer support.
Water has an unusual taste/odor.	New kettle residue; limescale buildup.	Perform initial cleaning steps again; descale the kettle.

SPECIFICATIONS

Feature	Detail
Brand	Fangflower
Model Name	Gooseneck Electric Kettle 0.6 L
Capacity	0.6 Liters
Color	Black

Feature	Detail
Material	Plastic, Stainless Steel
Special Features	Automatic Shut-Off, Boil Dry Protection, Heat Resistant Handle
Product Dimensions	10.75"L x 6.5"W x 7.8"H
Item Weight	2.9 Pounds
Manufacturer	Fangflower
UPC	717242897472
Country/Region Of Origin	China

WARRANTY & SUPPORT

Fangflower stands by the quality of its products. This kettle comes with a comprehensive **1-Year Warranty** from the original purchase date, covering any potential defects caused by materials or craftsmanship.

For customer care or warranty claims, please refer to the contact information provided with your product packaging or visit the official Fangflower website.